



GO300 USER MANUAL

Please read this manual throughly before using this product and keep it for future reference.

CONTENTS

PACKING LIST1	
NOTICE1	
PRODUCT OVERVIEW2	
GETTING STARTED 3	
1. Power ON/OFF	
2. Charge3	
3. LED Indicator 3	
FOCUS AND KEYSTONE 4	
1. Focus	
2. Keystone 4	
FUNCTION OVERVIEW 5	
Use the Remote As an Air Mouse5	
Wi-Fi Connection 6	
Multimedia Connection 6	
1. Projecting from a USB Disk/microSD card · · · · 6	
2. Play Videos in YouTube 7	
3. Projecting from HDMI Input Connection	
Apps Management 8	
Disable Background Apps 8	
SCREEN MIRRORING THROUGH WIRELESS CONNECTION9	
A: Eshare	
For iOS System 9	
For Android System · · · · · 1	
For Mac 1	
For Windows Laptop	
B: iOS Mirror	
SCREEN MIRRORING THROUGH WIRED CONNECTION	3
For iOS System13	
SETTINGS	1
CDECIFICATIONS (

PACKING LIST



GO300



Remote



User Manual



Power Adapter



HD Cable

NOTICE

Recommended





NOT Recommended

















PRODUCT OVERVIEW

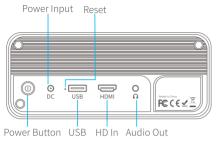

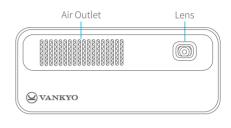

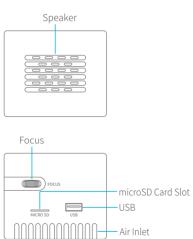

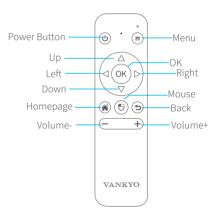

GETTING STARTED

1. Power ON/OFF

① Plug the power cable into the projector and the socket.



② To power on the projector, press and hold the **Power Button** for 3s.



③ To power it off, press the **Power Button** on the projector for over 1 sec or press the button on the remote once.





2. Charge

GO300 can be powered by the provided power adapter or the built-in rechargeable battery. It is strongly recommended to charge the battery for at least 2 hours before your first use.

Tip:

Charging the projector in POWER OFF state is recommended.

3. LED Indicator

Charging: Red

Fully Charged: Blue

Working: Blue

 
IMPORTANT:

- * Please charge the projector or connect it to power supply timely when the battery is low.
- * Do not use it as a projector and a power bank at the same time when it is not connected to power.
- * It is recommended to connect the projector to the power supply to avoid shutdown caused by overload.

FOCUS AND KEYSTONE

1. Focus

Slightly adjust the focus ring on the projector to get the best image performance.



2. Keystone

Option ① Auto keystone.

Please enter Settings > Projection Setting > Auto keystone to enable this function.

Once it's enabled, the projector will automatically correct the image shape after powering on.

Option ② Adjust the keystone manually.

Please turn off the Auto keystone, then select **Keystone Correction** to adjust the image shape as needed

FUNCTION OVERVIEW

After the projector is turned on, the interface below will be projected on the screen/wall.



Use the Remote As an Air Mouse

- 1. Enable the remote's Bluetooth
 - Press and hold the **OK** and **Volume** button for around 5 seconds, the red indicator on the remote will flash quickly if the Bluetooth is successfully enabled.
- 2. Enable the projector's Bluetooth
 - Enter Settings > Bluetooth on the projector, then select "SONG-1" to connect.
- 3. Press 🕤 on the remote, a cursor will be on the screen and you can now use the remote to control the projector.

NOTES:

- * While the Air Mouse is active, you can move the direction of the remote and the cursor on the screen will move accordingly.
- * To disable the air mouse function, press 🖯 / 🗢 on the remote again, the cursor on the projector will disappear after 15 seconds.

Wi-Fi Connection

- ① Enter Settings on the homepage, then select Wi-Fi to turn it on.
- ② Press the Up/Down button to select your Wi-Fi, then press OK to continue.
- ③ Enter the correct password, then select Connect to get Internet connection.

Multimedia Connection

1. Projecting from a USB Disk/microSD card

- ① Insert an USB disk or microSD card into the USB port or microSD card slot.
- 2 Select Explorer on the homepage, it will display an interface below.



- ③ Select SD Card or USB according to the card you inserted, then select the category of the file you would like to project accordingly.
 - * To project photo, select **Photo**, then find your photo and play it by pressing the **OK** button.
 - * To play the video, select Movie, then find your video file and play it by pressing the OK button.

Tip:

There will be a pop-up window on the screen to ask which video player is preferred to play the video. Select a video player, then click ALWAYS to play the video file via the selected player all the time.

If you want to play the video via another video player, please do as the instructions below:

- * Go to Setting > General > App, then click the selected player.
- * Disable the "Open by default" option.

The pop-up window will be displayed on the screen again, you can then select another video player as needed.

- * To play the audio file, select Music to find your audio file and play it by pressing the OK button.
- * To project text, select **Text**, then find your text file and open it by pressing the **OK** button.

Tip:

There will be a pop-up window on the screen to ask whether you prefer to open with WPS Projector.

Click ALWAYS to check the text via WPS Projector all the time.

If you want to check the text via another app, please do as the instructions below:

- * Go to Setting > General > App, then click WPS Projector.
- * Disable the "Open by default" option.

The pop-up window will be displayed on the screen again, you can then select another app as needed.

Different file formats supported:

Text Format Supported: TXT

Photo Format Supported: JPG/BMP/PNG/JPEG/GIF

Audio Format Supported: AAC/M4A/MP3/OGG/WMA/AMR/APE/FLAC/MIDI/ASX/AWB/AU/AIFF/MP2/WAV

Video Format Supported: AVI/FLV/MPG/MP4/MKV/MOV/WMV/TP/DAT/TRP/TS/3GP/F4V

2. Play Videos in YouTube

Select YouTube to play videos after the projector is connected to your Wi-Fi.

3. Projecting from HDMI Input Connection

- ① Connect the projector to your device with a HDMI cable.
- ② Select HDMI on the homepage to project the contents from your device to the screen/wall.

Apps Management

Check All the Apps

* Select Apps on the homepage to check all the apps preloaded and downloaded in the projector.

Download Apps

Step(1): Connect the projector to Wi-Fi.

Step(2): Select Aptoide TV on the homepage and download apps.

Uninstall Apps

Option ①

Select **Settings** on the homepage and enter **General** > **Apps**, then select the app needs to be uninstalled and click **disable**

Option ②

Step(1): Select APPS on the homepage, then select the app needs to be uninstalled.

Step(2): Long press OK button on the remote for 6 seconds, there will be a pop-up window on the screen to ask "Do you want to uninstall this app?"

Step(3): Select OK by pressing the right button on the remote to confirm.

Disable Background Apps

Step (1): Press and hold the ⋒ for 5 seconds, all the apps running in the background will be displayed on the screen.

Step (2): Press the $\triangleleft / \triangleright$ on the remote to select the apps you want to disable.

Step (3): Press the ∇ , then press OK on the remote to disable the selected background app.

SCREEN MIRRORING THROUGH WIRELESS CONNECTION

A: Eshare

For iOS System

- ① Go to Settings > Wi-Fi on the projector and your iOS device, then connect them to the same Wi-Fi.
- ② Select EShare on the homepage and press OK to enter.
- ③ Scan the QR code below or visit http://XXX.XXX.XXX.8000 to download EShare to your iOS device.



(4) Lanuch EShare App on your iOS device and tap Eshare-XXXX to connect, then the Photo, Video, Music files on your device will be projected to the screen/wall.



If you want to stream live content, please exit **EShare** App and follow the steps below.

- ① Swipe your iOS device up, then tap **Screen Mirroring/Airplay Mirroring** to connect.
- ② Select EShare-XXXX from the searching list.
- 3 Launch a video player on your phone and the selected content will be projected to the screen/wall.

For Android System

- ① Go to Settings > Wi-Fi on the projector and your Android device, then connect them to the same Wi-Fi.
- 2 Select EShare on the homepage and select OK to enter.
- ③ Scan the QR code below or visit http://XXX.XXX.XXX.8000 to download EShare to your Android device.



4 Launch EShare App on your Android device and tap Eshare-XXXX to connect, then the Photo, Video, Music files on your device will be projected to the screen/wall.



If you want to stream live content, please exit **EShare** App and follow the steps below.

- ① Activate Multi-screen/Wireless display function in your phone.
- ② Select EShare-XXXX from the searching list.
- 3 Launch a video player on your phone and the selected program will be projected to the screen/wall.

For Mac

- ① Enable Wi-Fi on the projector and your Mac, then connect them to the same Wi-Fi.
- ② Click $\overline{}$ on the mac and select **EShare** -XXXX from the searching list.
- 3 The display on your Mac will be projected to the screen/wall.



For Windows Laptop

- ① Enable Wi-Fi on both the projector and your Windows Laptop, then connect them to the same Wi-Fi.
- ② Select **EShare** on the homepage of the projector and press **OK** to enter.
- ③ Scan the QR code below or visit http://XXX.XXX.XXX.8000 to download EShare to your windows laptop.



4 Launch Ehare App on your laptop, and tap Connect to connect the laptop with the projector.



⑤ After connected, tap **Share Screen**, the display on your Windows laptop will be projected to the screen/wall; tap **TV Mirror**, the display on the screen/wall will be projected on your Windows laptop.



B: iOS Mirror

This function aims to project the content on your iOS device directly to the screen/wall.

- ① Connect your iOS device and the projector to the same Wi-Fi network.
- ② Select iOS Mirror on the homepage and press OK to enter.
- ③ Swipe your iOS device up, then tap Screen Mirroring/Airplay Mirroring and search for the projector.
- 4 Select EShare-xxxx from the searching list.
- ⑤ Your iOS device display will be projected to the wall/screen.

SCREEN MIRRORING THROUGH WIRED CONNECTION

For iOS System

- ① Connect your iOS device to the projector with the ORIGINAL USB to Lightning cable.
- ② Select Trust in the pop-up window of Trust This Computer.
- ③ Your iOS device display will be projected to the wall/screen.





Note:

For Android system, GO300 does not support screen mirroring through wired connection.

SETTINGS

Select Settings on the homepage, then press OK to enter the interface of all the available setting options.





Projection Setting

Set up projection mode, brightness level, keystone correction etc..

Wi-Fi

To connect your projector to network.

Bluetooth

When Bluetooth is turned on, your projector can communicate with other nearby Bluetooth devices.

General

To set Date&Time, Language&Input, disable or check the app's info, check the internal shared storage, adjust volume etc..

Update

To make a factory reset, or do a system update when it is available.

Device

Check the product model, software version and build number.

SPECIFICATIONS

Adapter Input	AC 100~240V, 50-60HZ
Adapter Output	DC 12V2A
Ports	USB x 2/HD x 1/Audio Out x 1/microSD Card Slot x 1
Operating System	Android 7.1.2
Wi-Fi	a/b/g/n/ac, 2.4G/5G Dual-band Wi-Fi
RAM/ROM	1G/16GB
CPU	Quad-Core ARM Cortex-A7, up to 1.2GHz
Battery Capacity	7000mAh
Display Technology	DLP
Light Source	LED
Resolution	Native 854 x 480
Projection Distance/Screen Size	0.8-3m/30-110inch
Aspect Ratio	16:9
Keystone	Auto
Focus	Manual

FCC Statement

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

WARNING: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

IC statement

This device complies with RSS247 of Industry Canada. Cet appareil se conforme à RSS247 de Canada d'Industrie. This device complies with Industry Canada license-exempt RSS standard(s). Operation is subject to the following two conditions:

- (1) this device may not cause interference, and
- (2) this device must accept any interference, including interference that may cause undesired operation of the device, appareils radio exempts de licence. Son fonctionnement est suiet aux deux conditions suivantes:
 - ① le dispositif ne doit pas produire debrouillage prejudiciable, et
 - ② ce dispositif doit accepter tout brouillage recu, y compris un brouillage susceptible de provoquer un fonctionnement indesirable

The device must not be co-located or operating in conjunction with any other antenna or transmitter.

CAUTION

RISK OF EXPLOSION IF BATTERY IS REPLACED BY AN INCORRECT TYPE. DISPOSE OF USED BATTERIES ACCORDING TO THE INSTRUCTIONS



--- The symbol indicates DC voltage



RECYCLING

This product bears the selective sorting symbol for Waste electrical and electronic equipment (WEEE). This means that this product must be handled pursuant to European directive 2012/19/EU in order to be recycled or dismantled to minimize its impact on the environment.

VANKYO SUPPORT



www.ivankyo.com



@VankyoOfficial



VANKYO



North America support@ivankyo.com

United Kingdom support.uk@ivankyo.com