

Eccentric Devices Simplicity MP0012-AA MOTOR PROTECTION MODULE DATASHEET

Operating Parameters	
Input Vmax:	18.0 VDC
Motor Imax:	0.4 A
Motor Vmax:	8.5 VDC
Motor Vmin:	3.5 VDC
Motor Stall:	10 Hz
Motor:	FAULHABER SR-Flat Series 2607













load preventing machine from starting











Jumpstart Voltage Clamping

Error Codes LED Blinks Condition Cause Correction Max current limit exceeded, possible causes are 1 Over Current Correct excessive load on machine and restart mechanical binding, too large of a needle grouping The motor speed had dropped below 10 Hz and a stall 2 Stall Increase the motor speed and restart condition is iminent The input voltage has exceeded the maximum allowed 3 Over Voltage Reduce voltage and restart value of 8.5 VDC The input voltage has dropped below the minimum **Under Voltage** Increase voltage and restart 4 allowed value of 3.5 VDC 5 **Output Open Circuit** Motor output is open contact support The motor connection is indicating open circuit 6 **Output Short Circuit** The motor connection is indicating short circuit Motor output is shorted contact support Check for proper grip adjustment and remove any 7 Jumpstart Over Current The current limit was exceeded during a jumpstart

Notes:

- 1) If no response is observed when power is applied (motor doesn't turn, no LEDS), check the polarity of your power source. RCA center pin is (+)
- 2) If no cartridge is present an over voltage condition may occur after jumpstart, insert a cartridge and try again if this happens.

Support Email: cs@needlejig.com

More info: <u>www.tattcom.us/protection</u>

r1.0 - Mar 2023