











As shown in the figure, install the control valve, and fix the thermostatic control valwith the screws that originally removed the flap. After fixing the control valve, open the water pipe switch. Please pay attentio to check whether there is any leakage bet the control valve and the base. Control the valve and check whether the 6 rubber ring under the control valve are installed

correctly. After the inspection, please reinstall the control valve. Then test whether the diverter spool is normal. The next step is to test whether the water temperature is 38 ° ± 1 under normal use

check if the red pen mark on the thermost spool is aligned. If the temperature is not

constant, please check whether the hot ar cold water pipes and the hot and cold wat inlets of the main body are installed correctly. After testing all functions, please install the panel and the switch handle. Make sure that the direction of the handle bar is facing the 38 ° position.

4 way thermostatic valve

