





1.Refer to the 《Standard Part List》 when unpacking check all parts available. Do not disassemble mixer body by yourself. 3. Connect inlet hoses to supply valves. 4. Make sure inlet pipes and supply valves have been installed and cleaned, also ensure no impurities in




INSTALLATION CONDITION


6. Suggest don't fit the faucet in the severely corrosive environments.

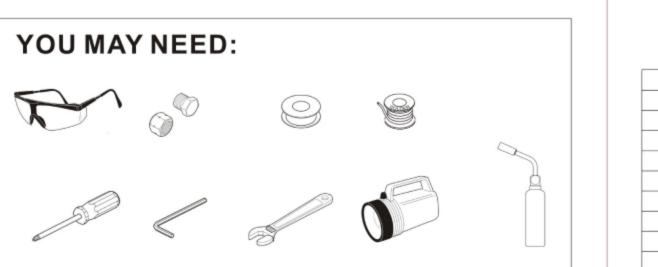


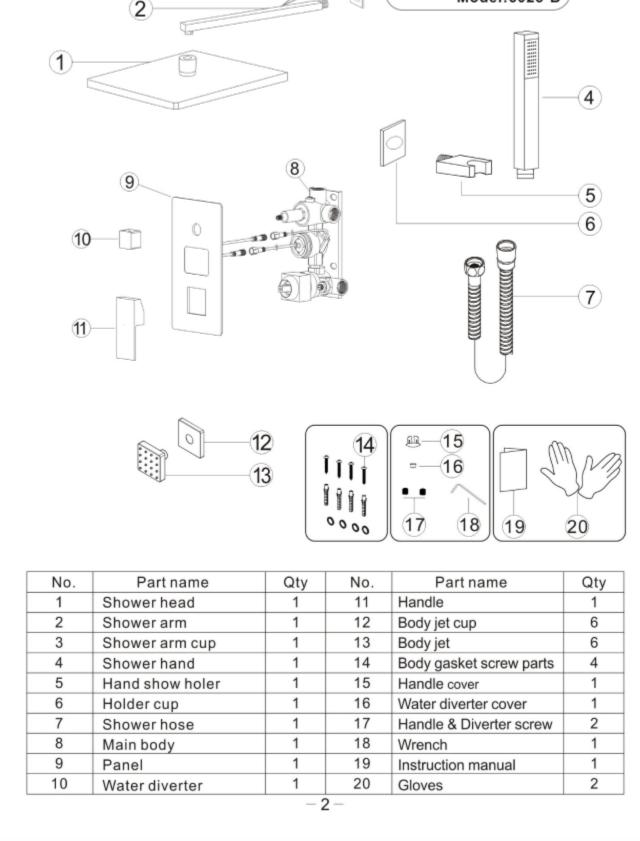



MODEL:6025 PRODUCT LIST

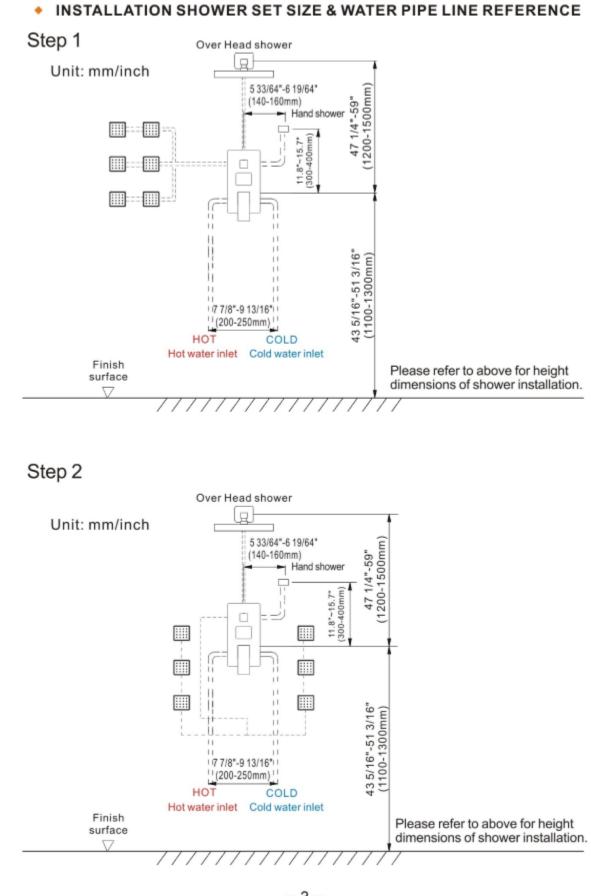

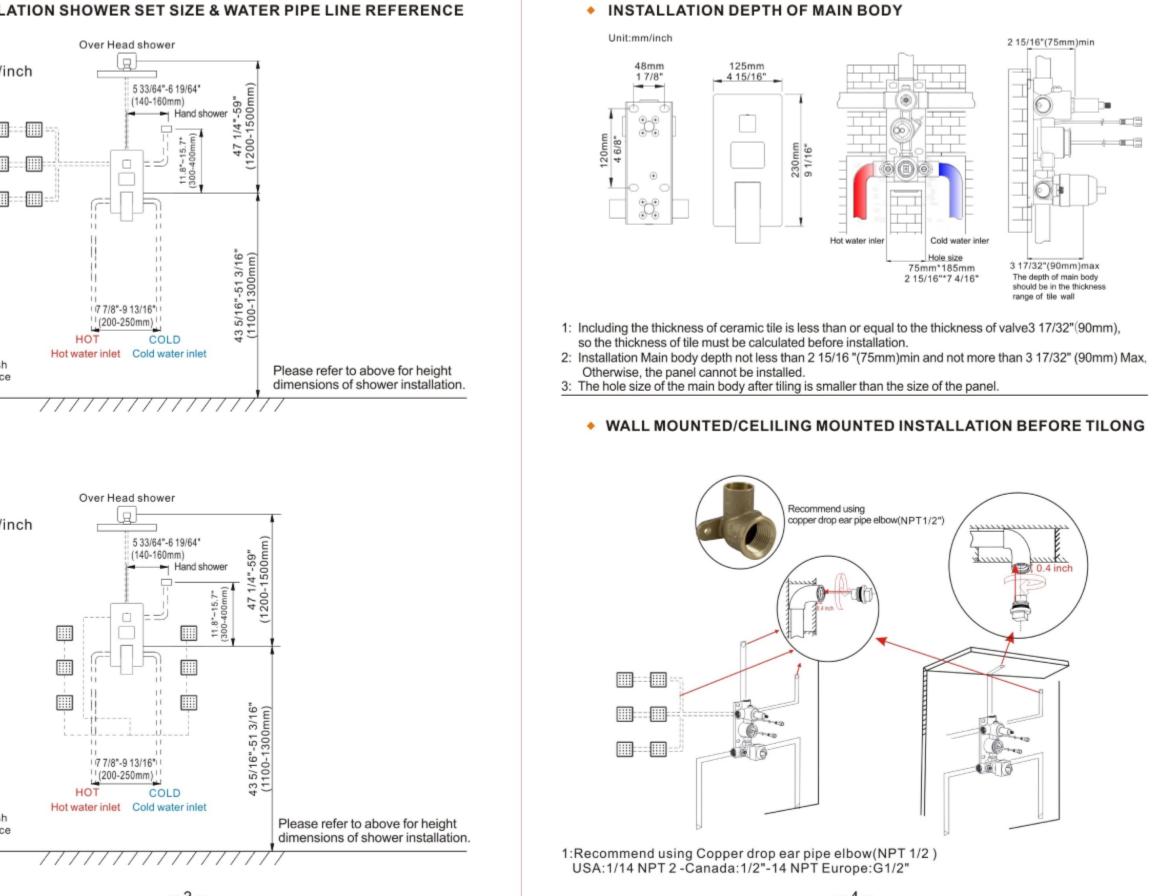

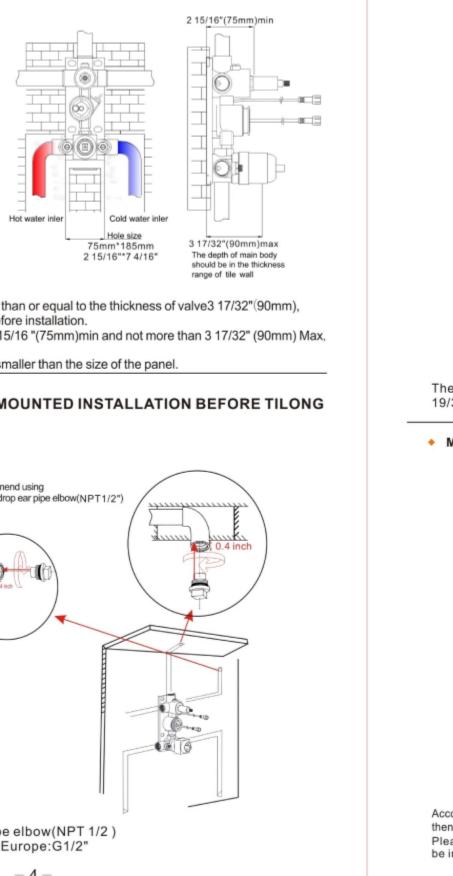

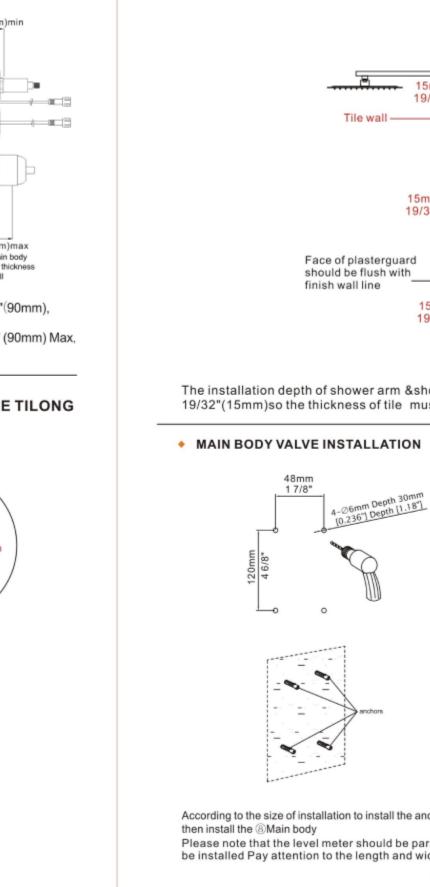


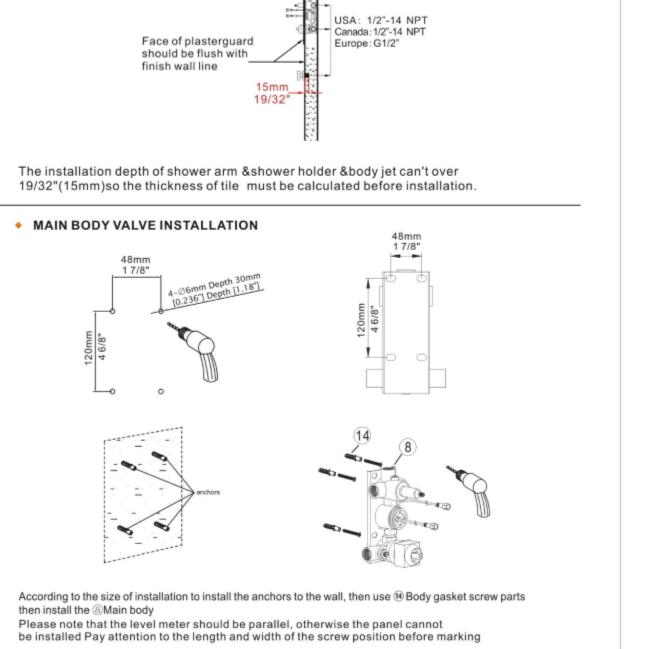



1. Open the water valve, check if there is any leakage. the left is hot water, the right is cold water. 3. The switch valve can switch the water outlet from shower head and Body jet and shower hand

USAGE INSTRUCTION

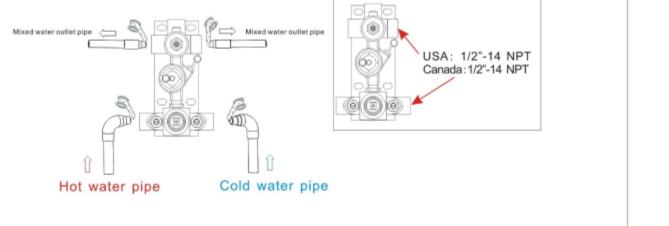

to the correct direction of installing the pre-buried main body. 2. Install the hot and cold water inlet pipes, Shower head and hand shower holder body jet pipes. Turn on the water source to test whether the left and right inlet pipes are tightly connected without leakage. After the test, adjust the flow switch to be on to test whether the mixed outlet pipe. The connection is tight and there is no leakage.

2 hole male thread to 2 hole female thread Water flow control: clockwise turn-dow and stop, anti-clockwise turn-up and ma

17 - 18 A3 hole male thread to 3 hole female thread

1. As shown in the figure, the inlet and outlet pipes are pre-buried, pay attention

MAIN BODY CONNECTING PIPE SCHEMATIC DIAGRAM


Wrap enough teflon tape, otherwise it will leak.

Warning:must install hot water and cold water inlet strictly as instructions.

2. Turn the handle upwards, water valve is opened, And the turning angle can control water outflow rate, Then the user can turn it to left or right to control the water temperature, Herein

Hot — Cold showerhead ® onto shower arm. Apply tape to pipe threads on both ends. Do not overtighten showerhead. The showerhead is 360 swivel connection. SHOWER HOLDER INSTALLATION INSTALL THE HAND SHOW HOLDER

Step3.Rotate and fix the body with the special-shaped wren

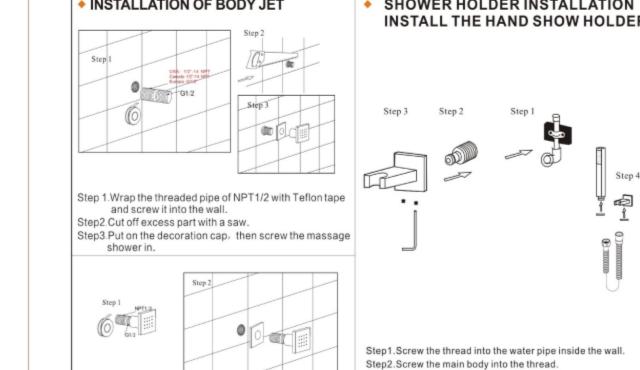

Step4.Connect hand shower and the hose.

INSTALLATION OF RAIN SHOWER HEAD& SHOWER ARM

Connect top outlet 1 to shower arm 2 with proper fittings. To prevent damage, to finish on shower arm, insert wall end of shower arm into shower flange 36before screwing arm into

ends. Do not overtighten showerhead. The showerhead is 360 swivel connection.

iser connection.Thread showerhead ④ onto shower arm. Apply tape to pipe threads on both

Connect top outlet 5 to shower arm 7 with proper fittings. To prevent damage, to finish on shower arm,

insert wall end of shower arm into shower flange 6 before screwing arm into riser connection. Thread

the mixer regularly. Rinse faucet with clean water and wipe with soft cotton cloth.

In order to keep the mixer surface bright, please clean

CARE AND MAINTENANCE

with water immediately.

Avoid suing cleaning powder, harsh cleaning chemicals, brushes, and cloth with coarse surface to prevent scratching and corrosion.

into contact with harmful acid substances, please rinse it

and wipe with soft cotton cloth.





1:Use clean water and soft cloth to remove dirt on the surface as much

Colorless glass cleaner, powder cleaner which does not have abrasive

Polish liquid which does not abrasive function.

 
Mild liquid cleaner.









2:Use one of the following cleaners to remove dirt on the surface



♦ INSTALLATION DEPTH OF SHOWER ARM & SHOWER HOLDER & BODY JET

  MAIN BODY VALVE INSTALLATION





function and can be dissolved completely.

3:After cleaning, remove the cleansing agent with clean water completely