

LUXURY LED SHOWER INSTALLATION INSTRUCTION

SHOWERING
WITH
ROMANTIC
AND FUN



Bluetooth music speaker




Remote control
LED light




64 RGB
LED color

LED shower system installation instruction manual


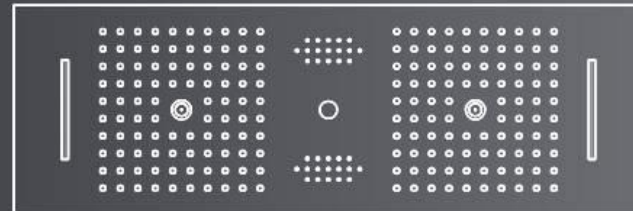


SHOWERING WITH ROMANTIC AND FUN

❖ **Product Specification**

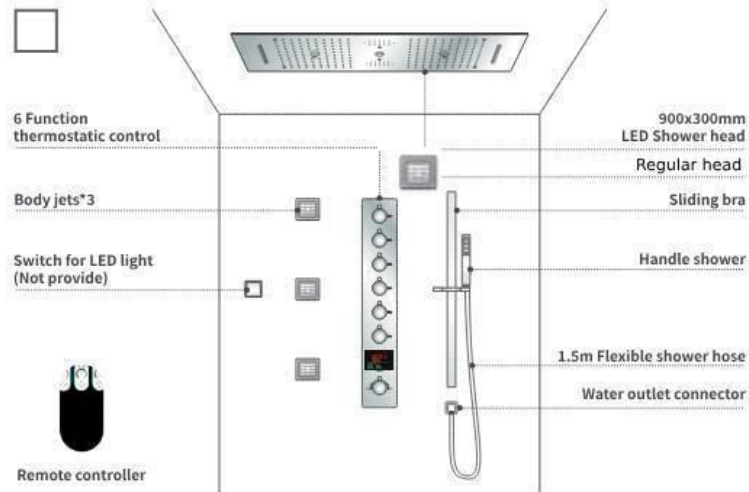

❖ **Product Specification**

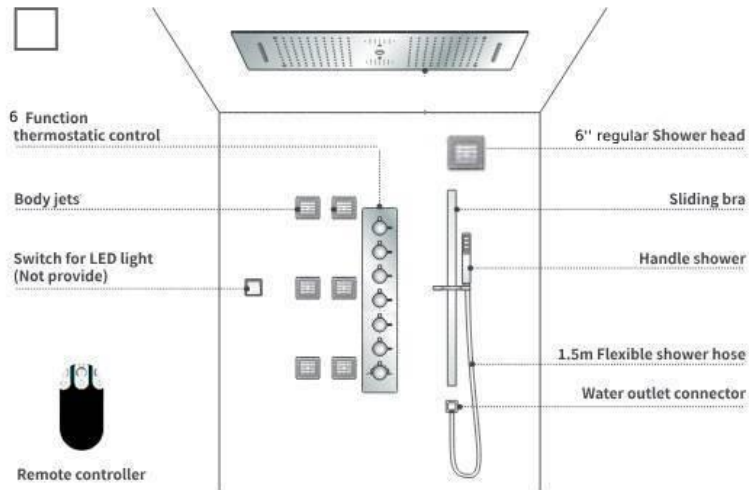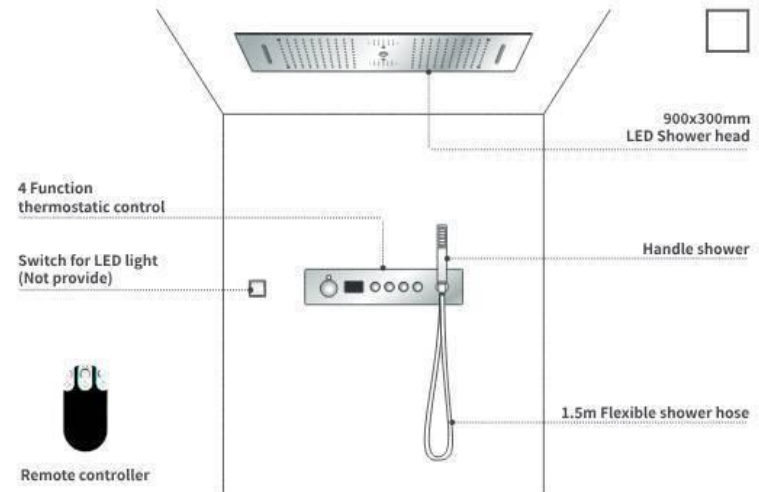

❖ **Install Caution :**

Please read carefully these instructions before proceeding with the product installation.

It is indispensable to flush through the supply pipes before installing and using the product.

❖ **Technical Data :**

Operating pressure = 0,3 - 1MPa (3 - 10bar)

Large differences in pressure between the hot and the cold water supply should be balanced.

Recommended hot water temperature = 60° C - 70° C

Maximum hot water temperature = 70° C

❖ **Cleaning :**

It is recommended to clean the tap with a soapy solution.

Never use cleaners containing acids, abrasives, or solvents.

Towel dry any water left on the product after each use to avoid water spots on its surface.

To avoid obstructions caused by scale build-up at the aerator it is recommended to periodically dismount it and submerge it in water with vinegar.



❖ **Cartridge Change :**

It is essential to turn off the water supply system (angle valve or stopcock) and to close the pop-up waste before beginning with the cartridge change.

The stronger you tighten the cartridge nut, the harder the lever will move.

➤ Power / water pipe - layout



Before installation, well plan the pipe groove in the required position for the product according to the actual installation location of the wall and ceiling.

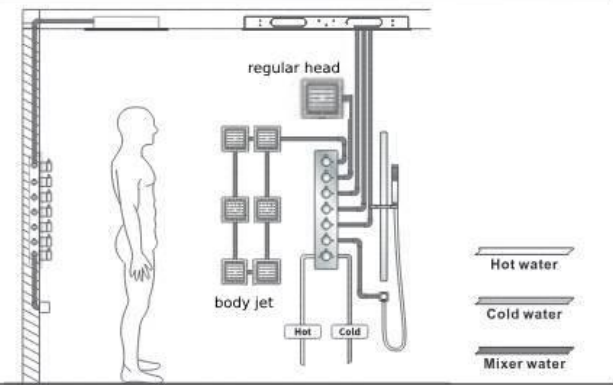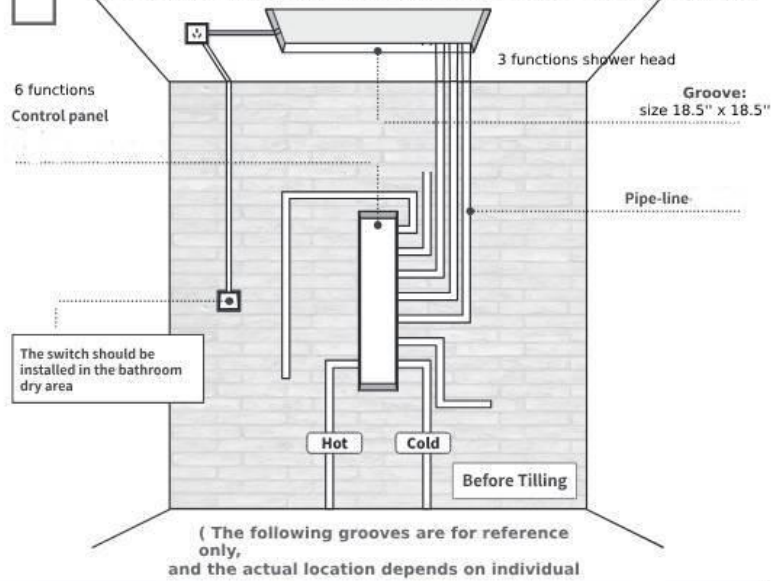

Schematic diagram of waterway installation

➤ Power / water pipe - layout



Before installation, well plan the pipe groove in the required position for the product according to the actual installation location of the wall and ceiling.

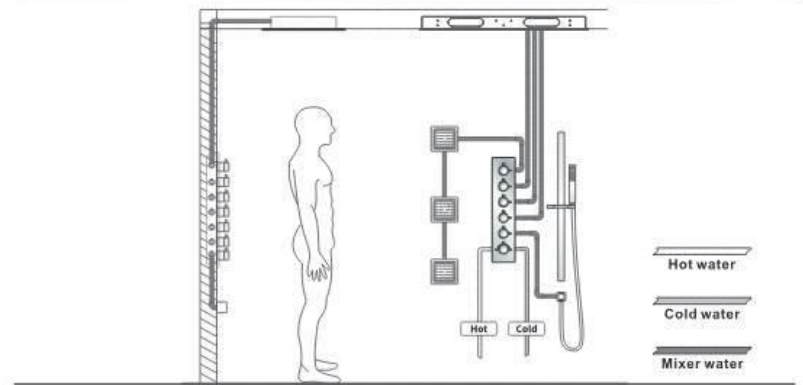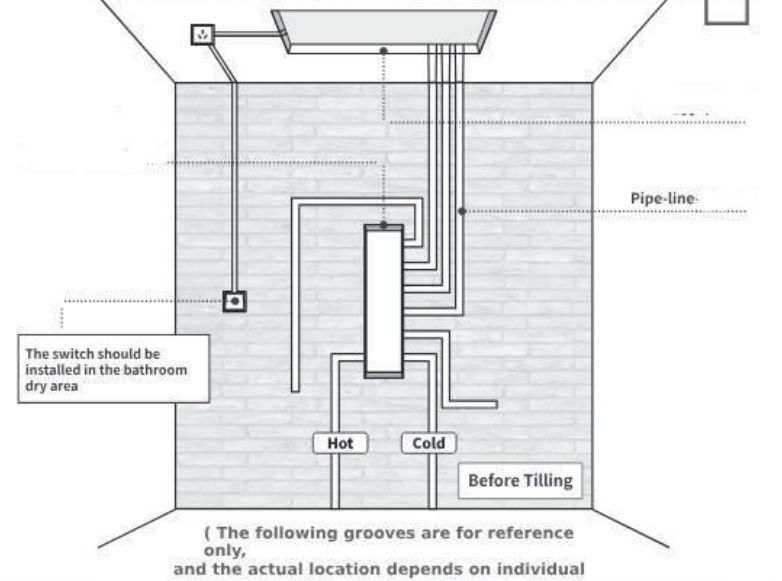


Schematic diagram of waterway installation

❖ Power / water pipe - layout


Before installation, well plan the pipe groove in the required position for the product

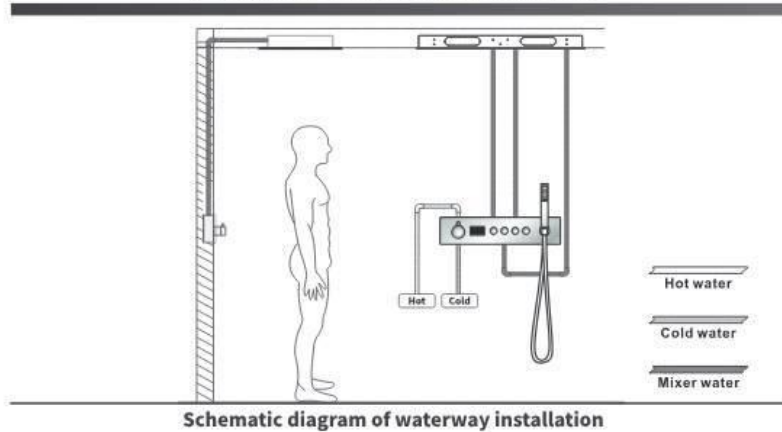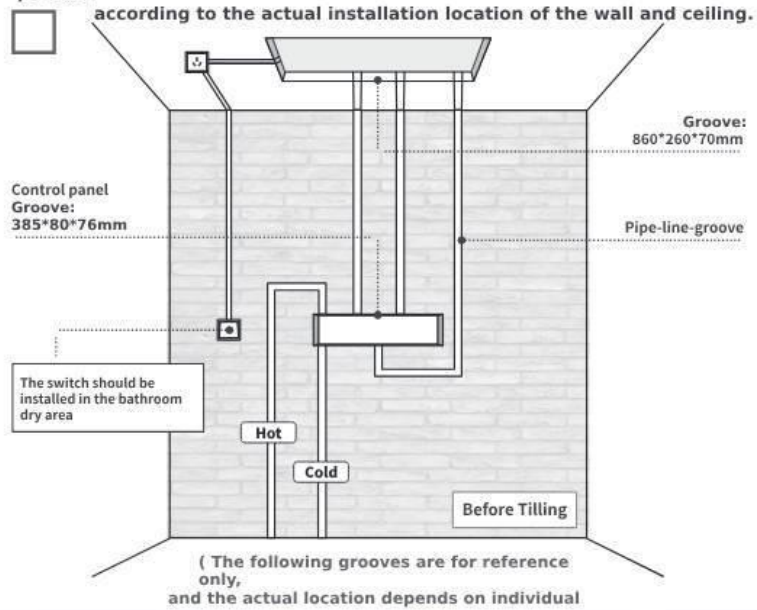

❖ Luxury LED Shower spare parts Exterior Dimensions

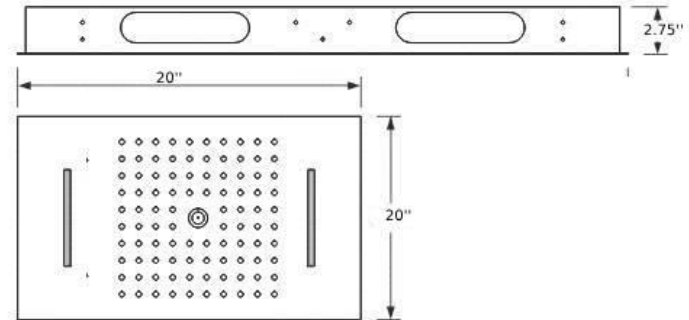


❖ Luxury LED Shower spare parts Identification chart

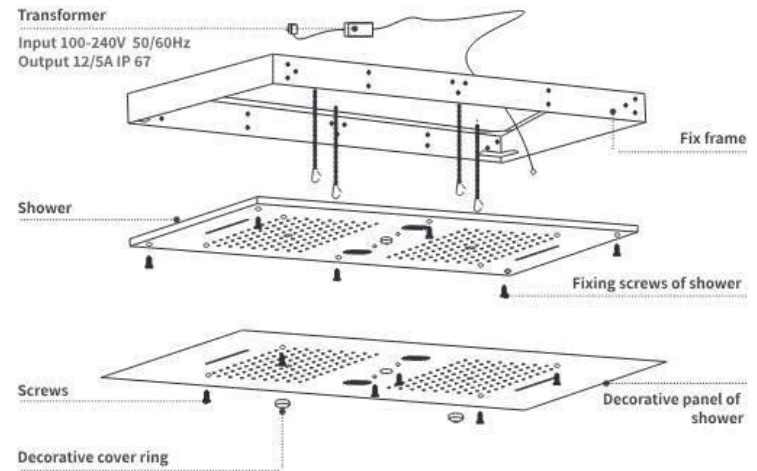


➤ **Luxury LED Shower spare parts method**

1 Power / water pipe - layout

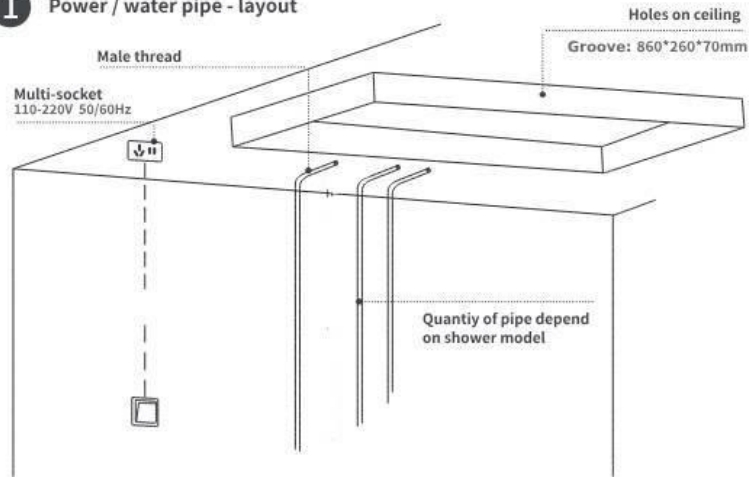


2 Shower head installation fixed frame

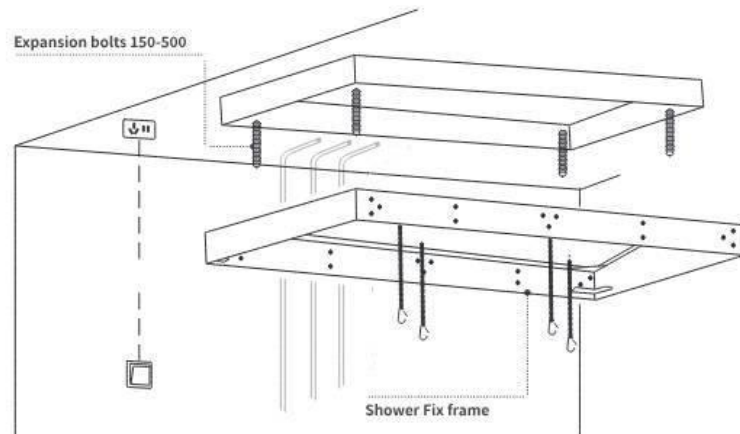


➤ **Luxury LED Shower spare parts installation instruction**


3 layout for power / water pipe

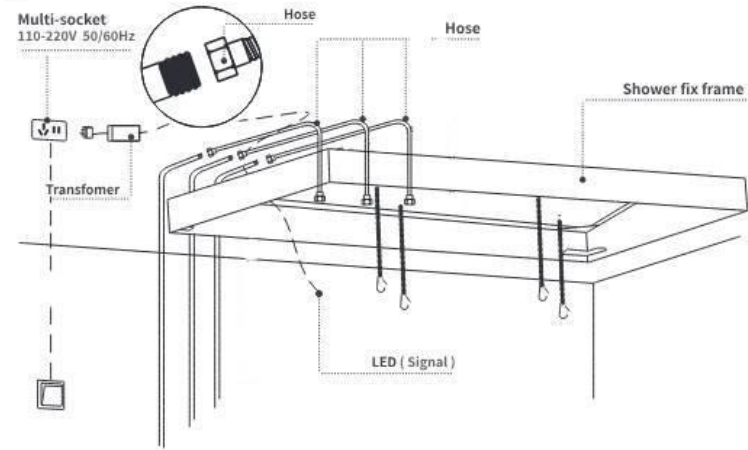

4 Install Shower

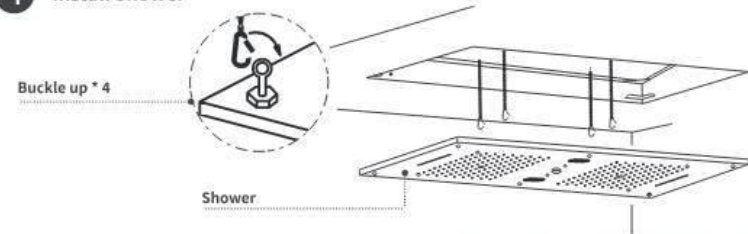


5 Connect the water inlet pipe

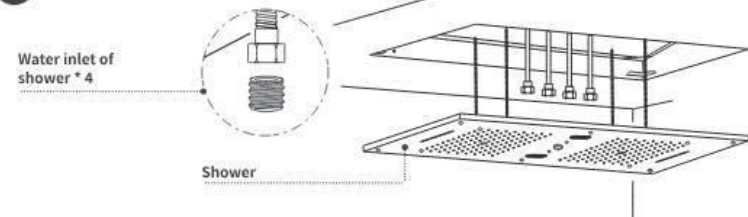


❖ **Luxury LED Shower spare parts installation instruction**


6 Connect LED (signal line)

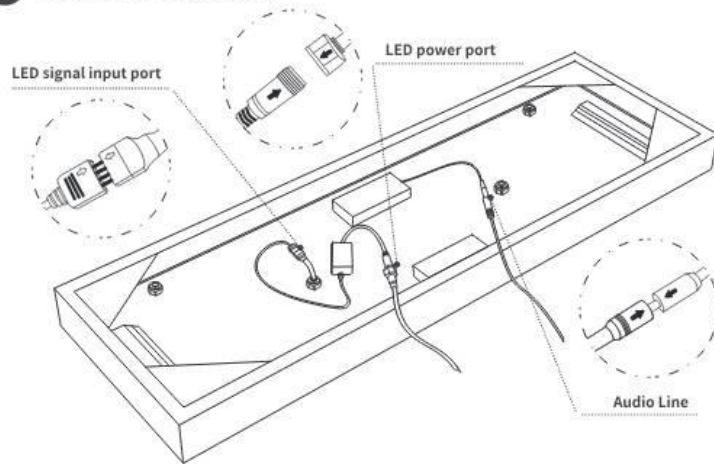

7 Shower installation

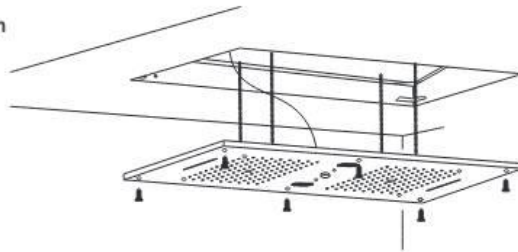


8 Fix the decorative panel of shower

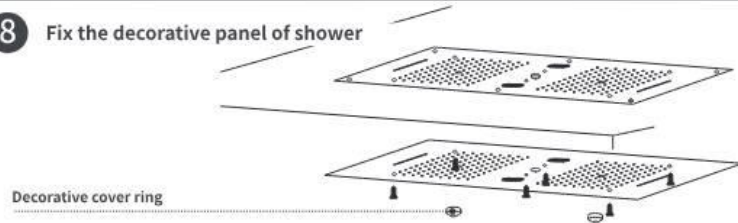

❖ **Installation method**

9-1 6 Function thermostatic control shower valve

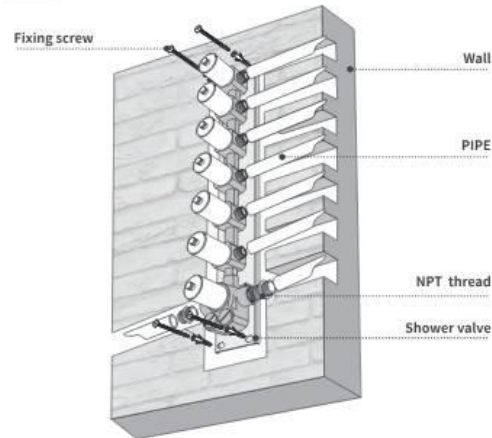

Before Tiling

Please grooved and install the shower valve according to the size drawing, the depth of the groove is about 75-110mm




After the installation is complete, turn on the water source and try to see if the water is


10-1 6 Function thermostatic control shower valve

Install the handles

After Tiling

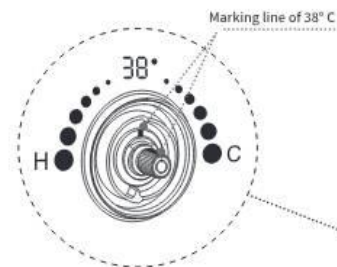

Thermostatic handle installation: Remove the handle and check whether the 38° C line of the thermostatic valve core is aligned as bellow picture. (This is the marking line for testing the water temperature of 38° C.)

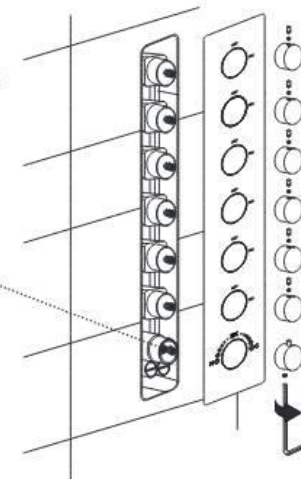


❖ Installation method



9-2

5 Function thermostatic control shower valve

Fixing screw

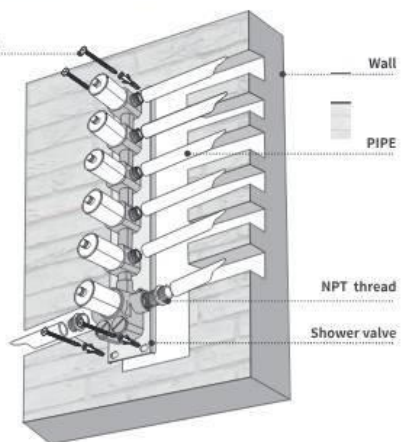

Before Tiling

Please grooved and install the shower valve according to the size drawing, the depth of the groove is about 75-110mm



After the installation is complete, turn on the water source and try to see if the water is

❖ Installation method





9-3

4 Function thermostatic control shower valve

Before Tiling

Please grooved and install the shower valve according to the size drawing, the depth of the groove is about 77-85mm

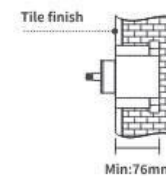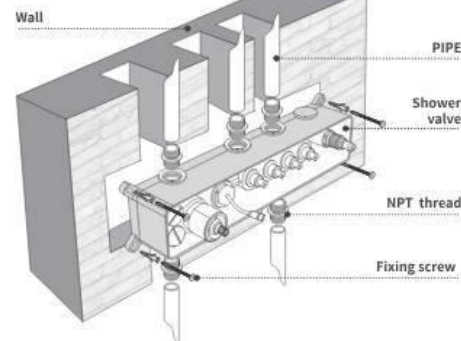


After the installation is complete, turn on the water source and try to see if the water is

10-2


5 Function thermostatic control shower valve

Install the handles


After Tiling

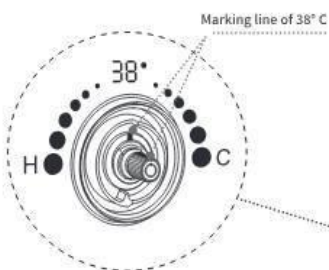

Thermostatic handle installation: Remove the handle and check whether the 38° C line of the thermostatic valve core is aligned as bellow picture. (This is the marking line for testing the water temperature of 38° C.)

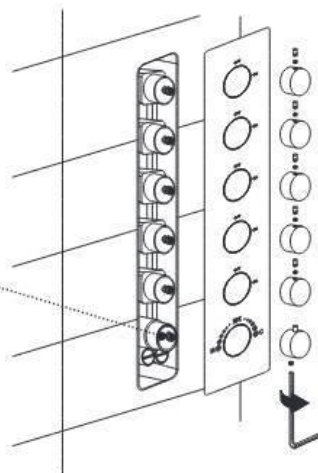


10-3

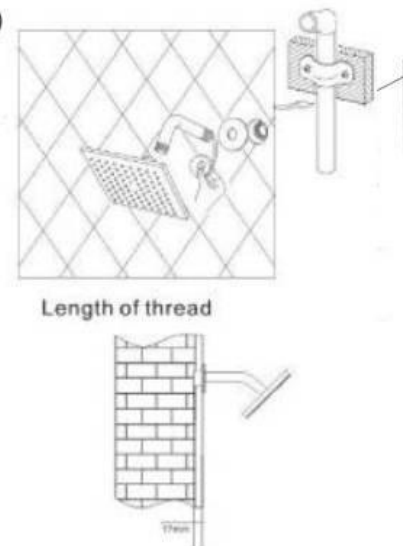

Installation method

11 Body jets * 3

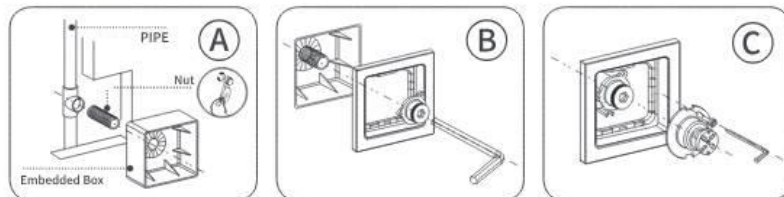

Before Tilling


1. Please groove 110*100mm according to the embedded box size.
2. Wrap with the appropriate raw material and connect to the water inlet pipe.
3. Put the embedded box to the groove and fix the crews from back side.

After Tilling

1. Install the cover.
2. Fix the screws by using H10 hexagonal screw.

After Tilling


1. Line up the Card slot and the outside double-steel-bars and then push in completely.
2. Using the M4*20 hexagon-socket screw to tighten the component and the connector. Make sure the cover component is not loose.

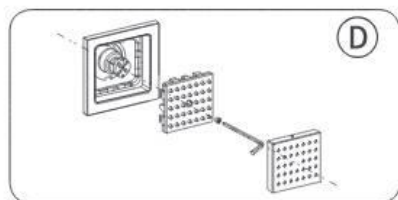

After Tilling

1. Install the components, make sure the 'components' steel-bars clip into the main body 'component's card slot. Then using the M4*12 hexagon socket screw to tighten them. Pay attention to prevent deformation of the cover when you tighten them.
2. Install the cover.

12 Water outlet connector

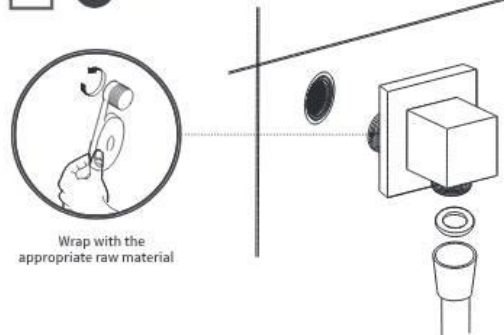


Wrap with the appropriate raw material

Installing on the required outlet pipe

After Tilling

Installation method


13 Sliding Bra

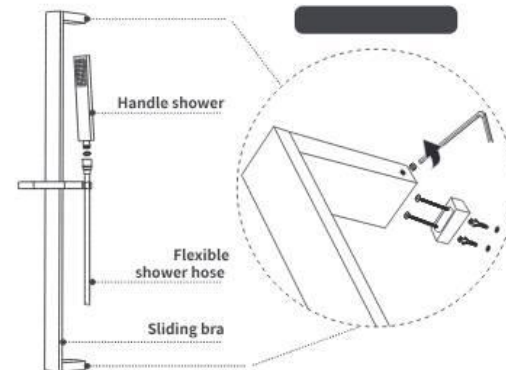

USER MANUAL


Main parameter:
 Panel controller:
 Working Temp.: -20~60
 Supply Voltage: DC12-24V
 Size: L50*W35*H23mm
 Output: 3Channel
 Output Current: <2A(each channel)
 Connection mode: common anode

Touch Remote:
 Working voltage: 1.5V*3V
 Emission current: 10mA
 Working Current: 300uA
 Standby Current: 3uA
 Standby time: 6 mouths
 Control distance: 20M
 Color pulley point: 60

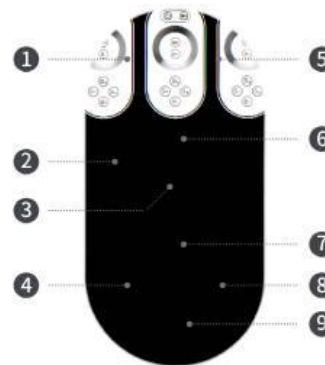


1. Turn ON/OFF
2. Color Touch Ring
- 3/6. Color Temperature adjusting
- 4/8. Dynamic Speed adjusting
5. Mode Switch
- 7/9. Dynamic Brightness adjusting


◆ Install the massage shower

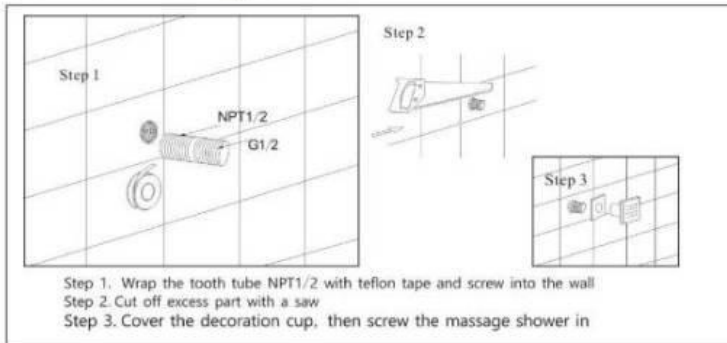

◆ Install the rain shower head

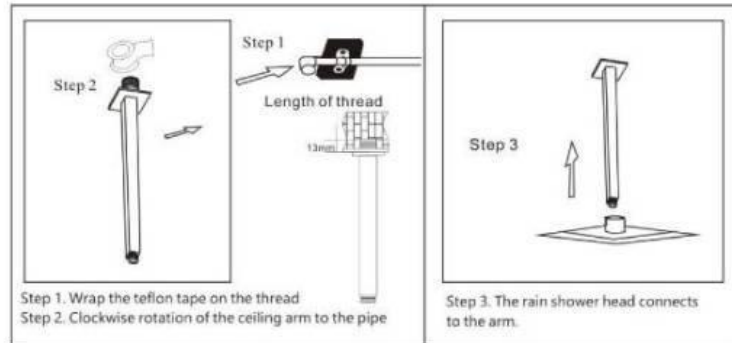

◆ Install the handheld shower head

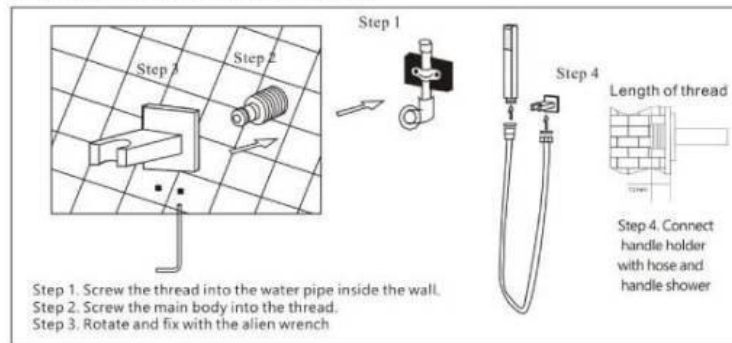

You need to purchase this accessory to install

