



qubino®

Your little magic for the smartest home.

USER MANUAL **EN**

QUBINO FLUSH 1D RELAY



The Qubino Flush 1D Relay is ideal for remotely controlling one electrical device (door lock, door opener, small appliances, etc.). The output contact is voltage free (dry contact), so different power supply loads can be connected to the Flush 1D Relay.

Table of contents

- About Qubino 3
- Safety Information 5
- Flush 1D Relay - Available Frequencies 6
- Where To Buy 7
- 1. Introduction 7
- 2. Use Cases 9
 - 2.1. Installation examples where Flush 1D Relay is installed behind a wall switch 9
 - 2.2. Installation examples where Flush 1D Relay is installed in electrical box 11
 - 2.3. Additional features of Flush 1D Relay which can make your life easier 12
- 3. Qubino Flush 1D Relay Advantages and Highlights 13
 - 3.1. Advantages 13
 - 3.2. Highlights 16
- 4. Package Contents 17
- 5. Technical Terms for Switches 18
- 6. Compatibility with Z-Wave Gateways (hubs) 20
- 7. Installation 21
 - 7.1. Installing the device behind a light switch 22
 - 7.2. Installing the Qubino Temperature Sensor 29
- 8. Device Information and Support 34
- 9. Electrical Diagram (110 - 230VAC, 24VDC) 35
- 10. Adding the device to a Z-Wave network (Inclusion) 37
- 11. Removing the device from a Z-Wave network (Exclusion) 38
- 12. Associations 39
- 13. Configuration Parameters 40
- 14. Technical Specifications 46
- 15. Z-Wave Command Classes 48
- 16. Important Disclaimer 51
- 17. Warning 51
- 18. Regulations 51

About Z-Wave:


The Z-Wave protocol is an interoperable, wireless, RF-based communications technology designed specifically for control, monitoring, and status reading applications in residential and light commercial environments. Mature, proven, and broadly deployed (with over 50 million products sold worldwide), Z-Wave is by far the world market leader in wireless control, bringing affordable, reliable, and easy-to-use 'smart' products to millions of people in every aspect of daily life.

Source: www.z-wavealliance.org

Safety Information

For Qubino, safety is first, so we have prepared lots of safety tips and information that can be found throughout this manual.

To ensure your safety, please read this manual carefully before installing the device; follow the instructions exactly. The manufacturer (GOAP d.o.o. Nova Gorica) shall not be legally responsible for any equipment damage or personal injury caused by incorrect installation or operation other than that covered in this manual.

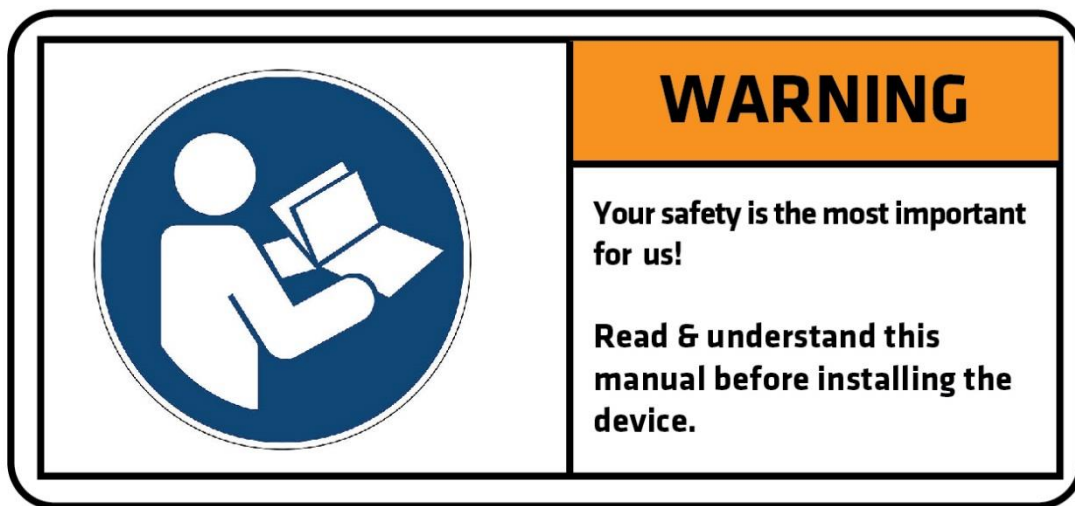

i Please check the Technical Specifications and Electrical Diagram chapters, as well as fuse requirements in the Installation chapter before installing the device.

Flush 1D Relay - Available Frequencies

| ORDERING CODE (MODEL NUMBER) | POWER SUPPLY FREQUENCY | Z-WAVE FREQUENCY* |
|---------------------------------|------------------------|---------------------------|
| ZMNHND1 | 50/60 Hz | 868,4 MHz |
| ZMNHND2 | 50/60 Hz | 921,4 MHz |
| ZMNHND3 | 50/60 Hz | 908,4 MHz |
| ZMNHND4 | 50/60 Hz | 869,0 MHz |
| ZMNHND5 | 50/60 Hz | 916,0 MHz |
| ZMNHND6 | 50/60 Hz | 868,4 MHz |
| ZMNHND7 | 50/60 Hz | 919,8 MHz |
| ZMNHND8 | 50/60 Hz | 865,2 MHz |
| ZMNHND9 | 50/60 Hz | 922,5 MHz |
| ZMNHNDA | 50/60 Hz | 919,7 – 921,7 – 923,7 MHz |
| ZMNHNDB | 50/60 Hz | 868,1 MHz |
| ZMNHND C | 50/60 Hz | 868,1 MHz |
| ZMNHND D | 50/60 Hz | 919,8 MHz |
| ZMNHND E | 50/60 Hz | 920,9 MHz |

*You can check the Z-Wave frequency in your country here:


http://z-wave.sigmadesigns.com/wp-content/uploads/Z-Wave_Frequency_Coverage.pdf

Where To Buy

To find your nearest Qubino dealer visit: <http://qubino.com/where-to-buy/>

1. Introduction


The Flush 1D Relay controls on/off function for one electrical device. The output contact is voltage free (dry contact), so different power supply loads can be connected to the Flush 1D Relay. It can be paired with a digital temperature sensor (sold separately). It supports push-button/momentary switches and toggle switches (default).

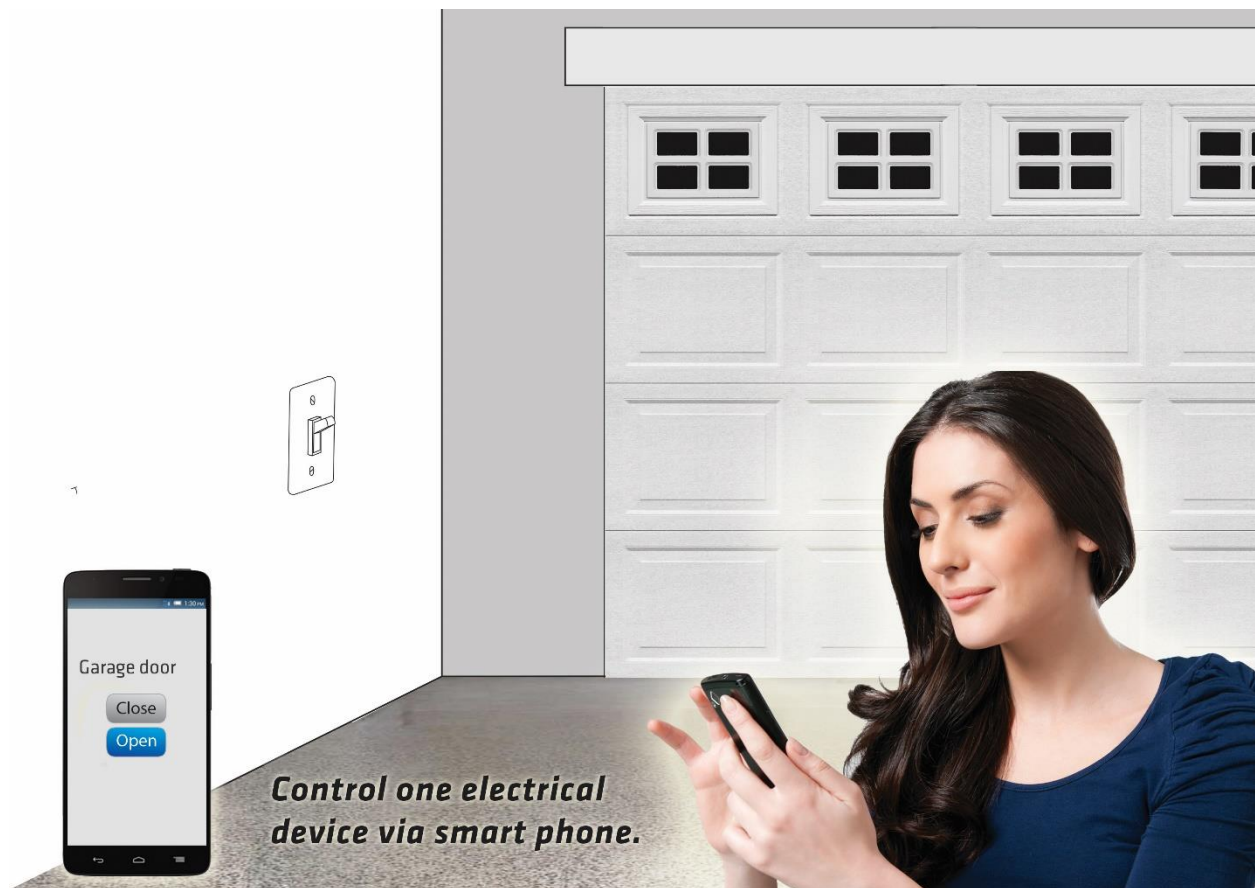

The connection of a digital temperature sensor means you can create complex scenes and control any device relative to a set temperature range. The Qubino Flush 1D Relay also acts as a Z-Wave repeater to improve the range and stability of the Z-Wave network.

Flush 1D Relay supported functions:





| Turn ON/OFF | Temperature Sensor | Scene 1 Trigger | Automatically turn ON/OFF | Associations | Z-Wave Repeater | Auto-inclusion |
|-------------|--------------------|-----------------|---------------------------|--------------|-----------------|----------------|
| ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ |

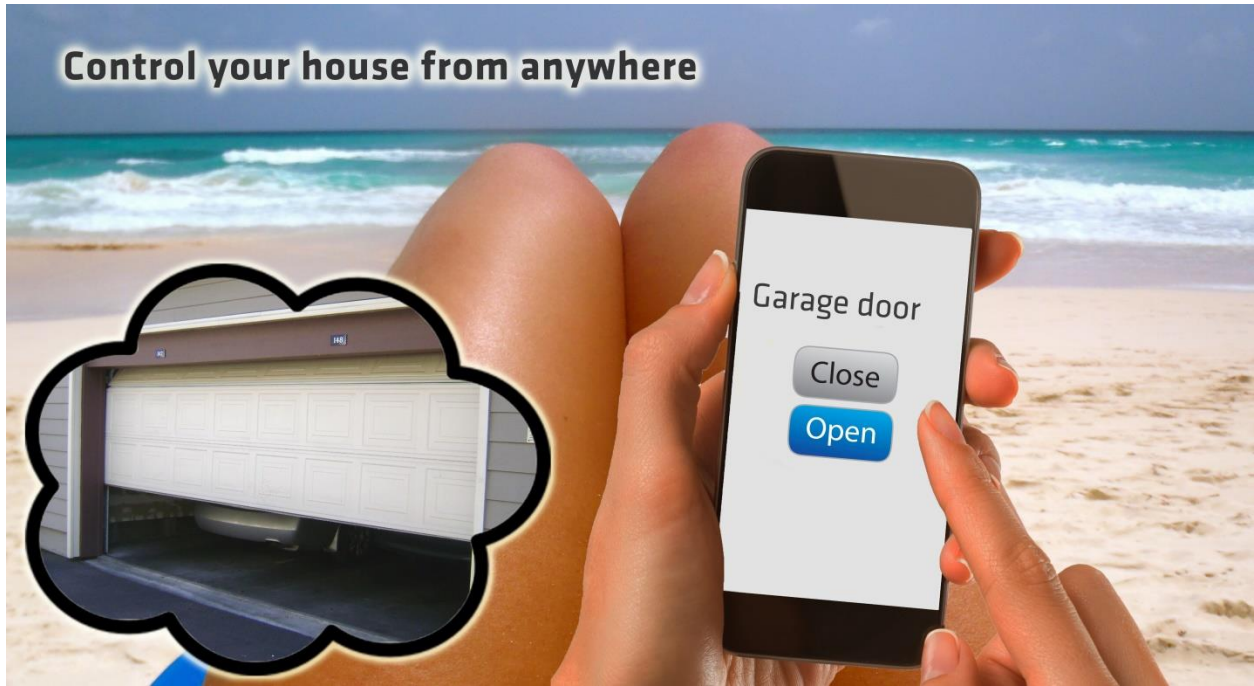


2. Use Cases

The Flush 1D Relay can be used in many different scenes, which can help make your life more comfortable. We have prepared a few of them for you—so you can get an idea for your next smart home project. Of course, there are countless of other options for how to use Qubino Flush 1D Relay to remotely control devices via your smartphone.


2.1. Installation examples where Flush 1D Relay is installed behind a wall switch
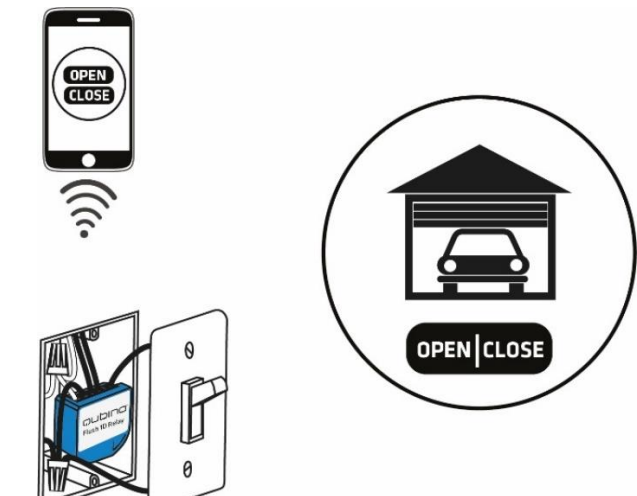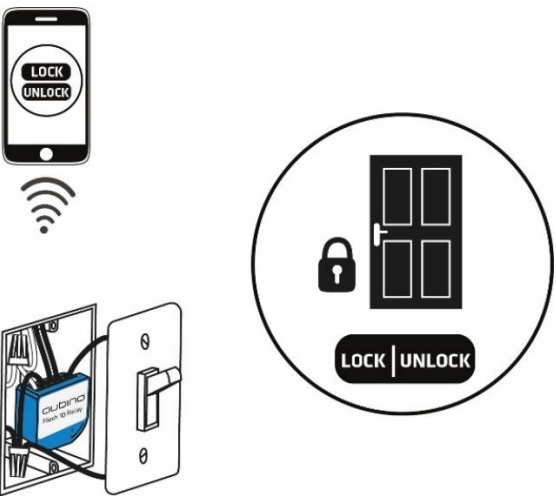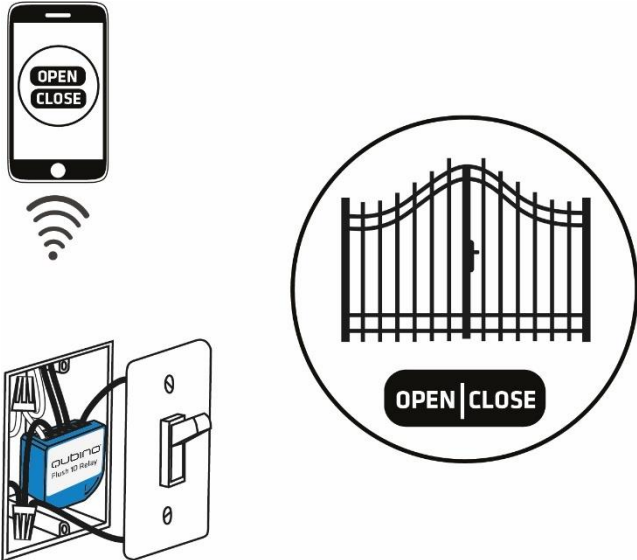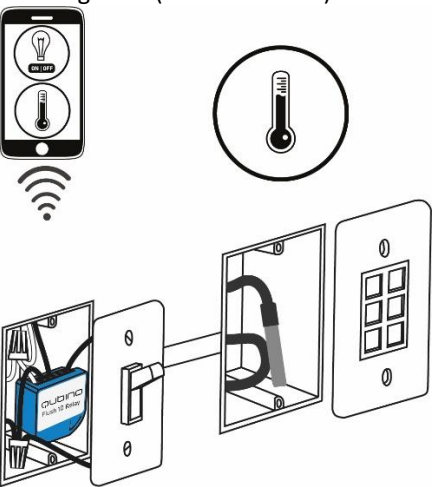
| | |
|--|---|
| <ul style="list-style-type: none">• Remotely control garage doors  | <ul style="list-style-type: none">• Remotely control door locks  |
| <ul style="list-style-type: none">• Remotely control gate motors  | <ul style="list-style-type: none">• Remotely measure room temperature (*The temperature sensor is sold separately - for more info, please see Qubino catalogue. Product ordering code (model number): ZMNHEA1)  |

- Remotely control on/off gas water heaters

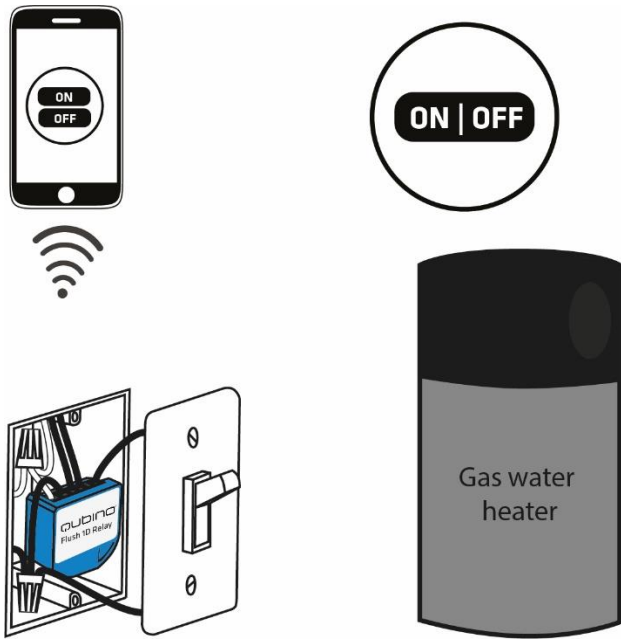


- Remotely trigger different scenes with additional input (I2) – for example scene 1: turn off all the lights in the house

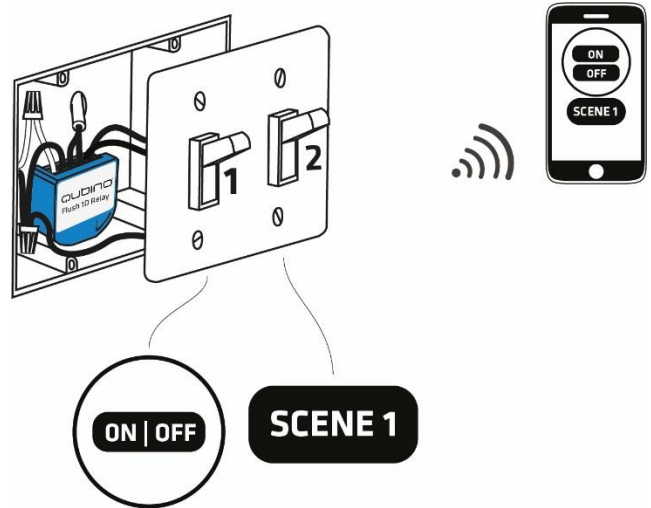


2.2. Installation examples where Flush 1D Relay is installed in electrical box


- Remotely switch heat pumps to PV working mode (when electricity is available from photovoltaic). Running on photovoltaics, the heat pump will heat water to higher temperature

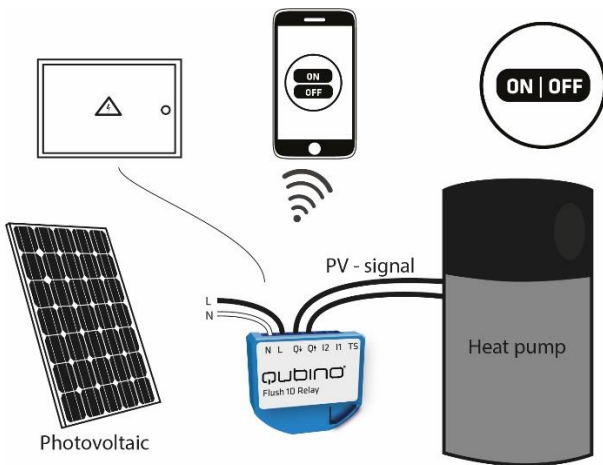


- Remotely control garage doors and remotely check the state of door sensor (if the door is open/closed)

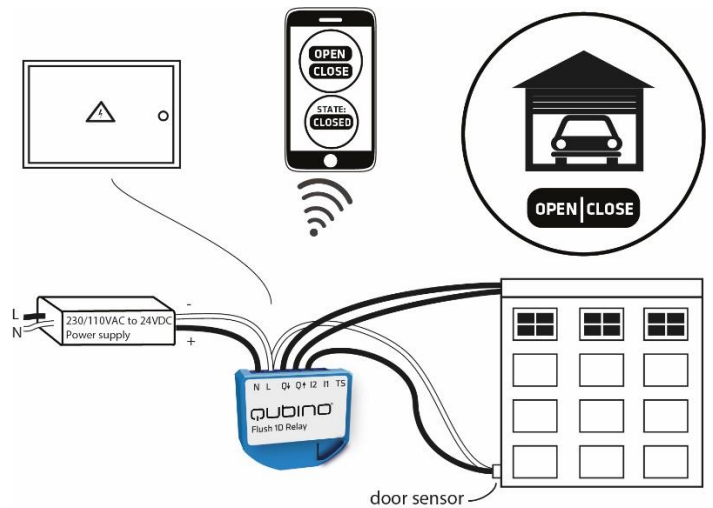

- Remotely control door locks and remotely check the state of door sensor (if the door is open/closed)

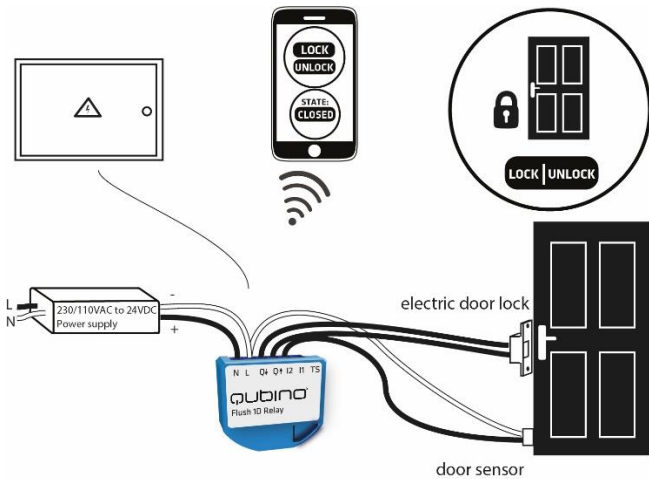


- Remotely control gate motors and remotely check the state of door sensor (if the door is open/closed)

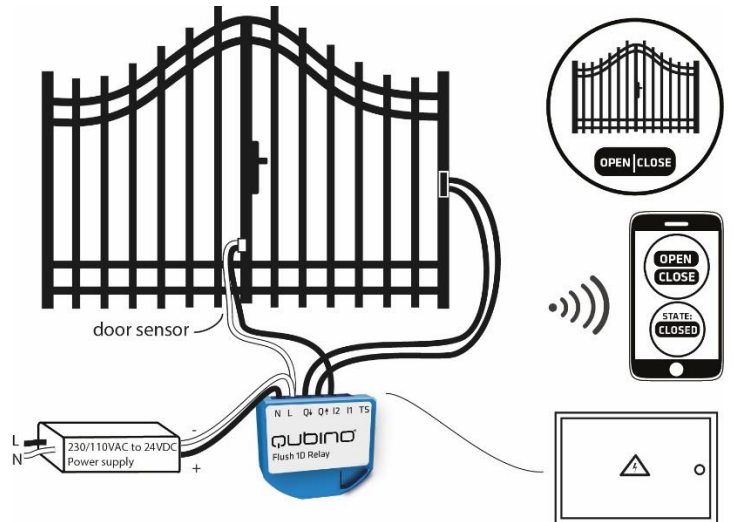

2.3. Additional features of Flush 1D Relay which can make your life easier


- **Want to control other devices in your Z-Wave network with the Flush 1D Relay?**
- Connect the Flush 1D Relay with other devices in your network to remotely and automatically trigger another Z-Wave device. And have other Z-Wave devices trigger your Qubino Flush 1D Relay.

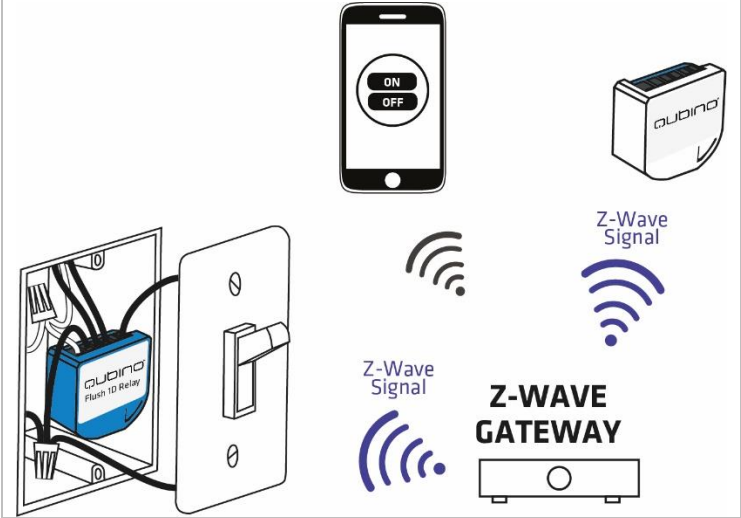

3. Qubino Flush 1D Relay Advantages and Highlights

3.1. Advantages

- The Qubino Flush 1D Relay allows the **easiest and quickest installation possible**. Because of its small size, it fits smoothly in even the smallest, most shallow and-most crowded flush mounting boxes, which are stuffed with lots of electrical cables and where **every millimetre counts**. All this is possible because the Qubino Flush 1D Relay is **the smallest Z-Wave switch in the world**.

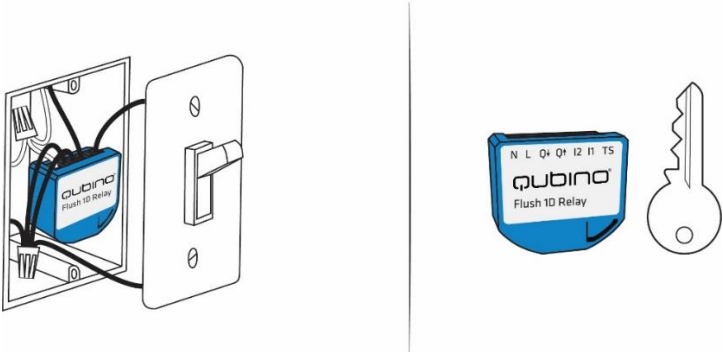


- The Qubino Flush 1D Relay has the **option to connect a temperature sensor***, through which users can monitor the ambient air or water temperature. It’s the only Z-Wave switch in the world which offers this option. With a connected sensor, the user can monitor accurate measurements of the room temperature, pool water temperature, etc., and remotely change conditions as desired. Qubino relay, along with the temperature sensor, is connected directly to the power supply. Install it and forget it – no need to worry about dying batteries, like with battery-powered sensors.

*The temperature sensor is sold separately - for more info, please see Qubino catalogue. Product ordering code (model number): ZMNHEA1



i Please do not put the temperature sensor directly into the water! The temperature sensor is designed to measure the water temperature by being mounted to the water pipe.

- Qubino Flush 1D Relay is the only Z-Wave switch in the world, which has one additional input (2), which enable triggering more scenes. The user does not need to buy additional devices for setting various scenes, such as:
 - Switch connected to input 2: Welcome home – turn on the selected lights and open the shades
 - Input 2 also allows to connect a magnet door sensor which can be used to indicate if a door is open/closed

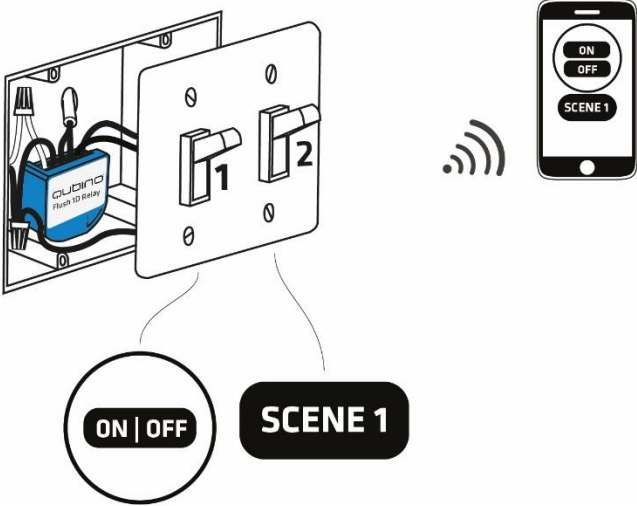

- Qubino guarantees **100% device quality**. Such high quality can be delivered because every Qubino goes through rigorous quality control standards throughout the production process. Every device has a unique serial number and a part number, which are assigned to the device only after it goes through a strict testing procedure.




- By scanning the QR code on the back of your Qubino device, the serial and part numbers will be automatically copied on your mobile phone; they also provide **direct access to Qubino’s technical support team**. The serial and part numbers of your device are given automatically every time you open an inquiry with our support team: this instantly shares the relevant device information we need to provide the best technical support possible. For details, please see the Device Information and Support chapter.



- The Qubino Flush 1D Relay is **engineered and manufactured in the EU**, and contains only the highest quality components.



- The Qubino Flush 1D Relay is certified by an independent European Institute and has CE, FCC, LVD and EMC certificates to ensure the highest safety standards.

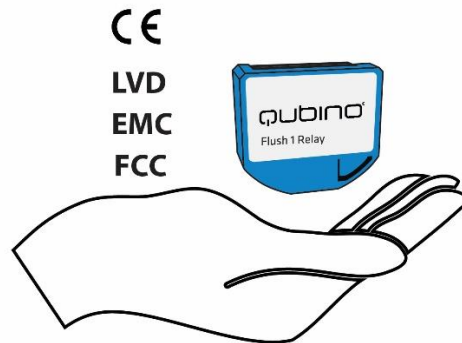

3.2. Highlights









- Remote (via smartphone or PC) and local on/off control of bulbs and other electrical devices
- Voltage free output contact (dry contact), so different power supply loads under 10A can be connected to the device.
- Works with push-button (momentary switch) and toggle switch
- Features one of the easiest and quickest installations of devices of this kind; fits in even the smallest flush mounting boxes
- Saves and restores the last status after a power failure.
- Supports auto-inclusion mode for quick set up
- Can automatically turn devices on and off after a set period of time (helpful when you're away from home, for example) *
- Supports additional parameters for expert users, which allows for advanced configuration*
- Acts as a signal repeater which improves the range and stability of your Z-Wave network
- Can be used to remotely control and trigger other devices in your Z-Wave network

*Your gateway (hub) needs to support advanced configuration and parameter input if you wish to use this feature

4. Package Contents

- Flush 1D Relay Device
- Installation Manual

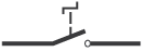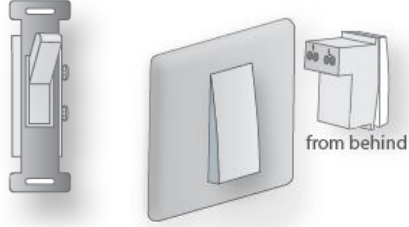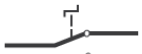
5. Technical Terms for Switches
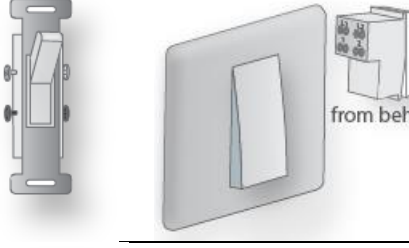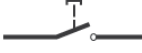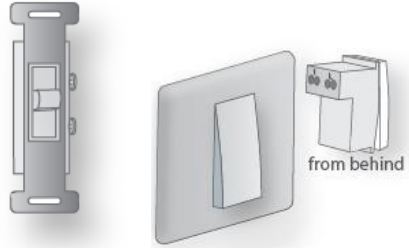
| Symbol | Switch example images | Definition | EU | USA | Qubino | Other names |
|--|---|--|---------------------|---------------------------------|---------------------|------------------------------------|
|  |  | Single pole, single throw (SPST) - One switch controlling one light / circuit of lights | One-way switch | Two-way switch (regular switch) | Toggle switch | Switch; Bi-stable switch |
|  |  | Single pole, double throw (SPDT) - Two switches controlling the same light / circuit of lights | Two-way switch | Three-way switch | Two-way switch | |
|  |  | Used when you have three or more switches controlling the same light | Intermediate switch | Four-way switch | Intermediate switch | Crossover switch; Cross connection |
|  |  | After being released, it goes back to its original state | Momentary switch | | Momentary switch | Monostable switch; Push button |


Qubino devices are installed into flush mounting boxes behind the switches. You can see some examples below:

For more information on how to install your device, please refer to the Installation chapter.


EU example:

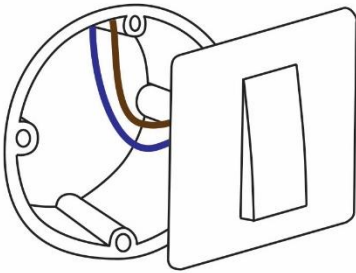

USA example:

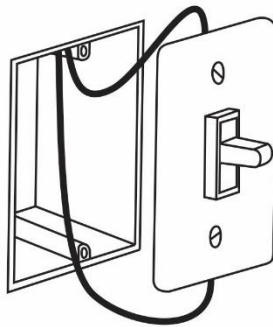

ITA/Brasil example:

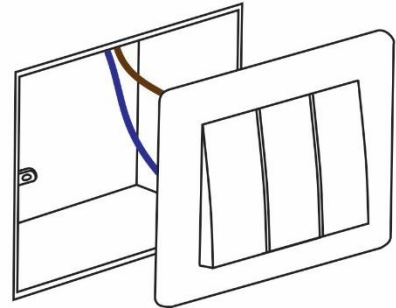

6. Compatibility with Z-Wave Gateways (hubs)

Please check compatibility with your Z-Wave gateway (hub) before you purchase this device. If you don't see your gateway (hub) in the table below, please contact us at: <http://qubino.com/support/#email>.

i Please note that the gateway (hub) compatibility was tested on 1.7.2017 and it may not include the latest testing data.

| Flush 1D Relay with gateway (hub) | Q | I2 updates UI | Temperature Measurements | Comments |
|-----------------------------------|---|---------------|--------------------------|--|
| Domoticz V3.5877 | ✓ | ✓ | ✓ | |
| Fibaro HC Lite v 4.100 | ✓ | ✓ | ✓ | |
| Zipato 1.1.38 | ✓ | ✗ | ✓ | |
| Vera edge v 1.7.2406 | ✓ | ✗ | ✓ | |
| Z-Wave me | ✓ | ✓ | ✓ | |
| Homeseer 3.0.0.313 | ✓ | ✗ | ✓ | |
| Open Z-Wave | ✓ | ✓ | ✓ | |
| Piper | ✓ | ✗ | ✗ | |
| SmartThings 3rd party | ✓ | O | ✓ | Additional handler needs to be installed for I2 sensor updates on the UI |
| NETIChome | ✓ | ✓ | ✓ | |
| Homey | T | T | T | |
| Eedomus | ✓ | ✓ | ✓ | |
| Jeedom | ✓ | ✓ | ✓ | |

| Symbol | Explanation |
|--------|---------------------|
| ✓ | Works fully |
| ✗ | Not working |
| O | See comment |
| T | Testing in progress |

7. Installation

Before installing the device, please read the following carefully and follow the instructions exactly:

ⓘ Danger of electrocution!

Installation of this device requires a great degree of skill and may be performed only by a licensed and qualified electrician. Please keep in mind that even when the device is turned off, voltage may still be present in the device's terminals.

ⓘ Note!

Do not connect the device to loads exceeding the recommended values. Connect the device exactly as shown in the provided diagrams. Improper wiring may be dangerous and result in equipment damage.

Electrical installation must be protected by directly associated overcurrent protection fuse 10A, gG or Time lag T, rated breaking capacity 1500A (ESKA 522.727) must be used according to wiring diagram to achieve appropriate overload protection of the device. The fuse must be installed in fuse holder type: Adele contact 503Si/1 DS according to the standard IEC60669-2-1. This standard is used in Europe only.


7.1. Installing the device behind a light switch

The installation process, tested and approved by professional electricians, consists of the following simple steps:

Step 1 – Turn OFF the fuse:

- To prevent electrical shock and/or equipment damage, disconnect electrical power at the main fuse or circuit breaker before installation and maintenance.
- Be aware that even if the circuit breaker is off, some voltage may remain in the wires — before proceeding with the installation, be sure no voltage is present in the wiring.
- Take extra precautions to avoid accidentally turning the device on during installation.

STEP 1

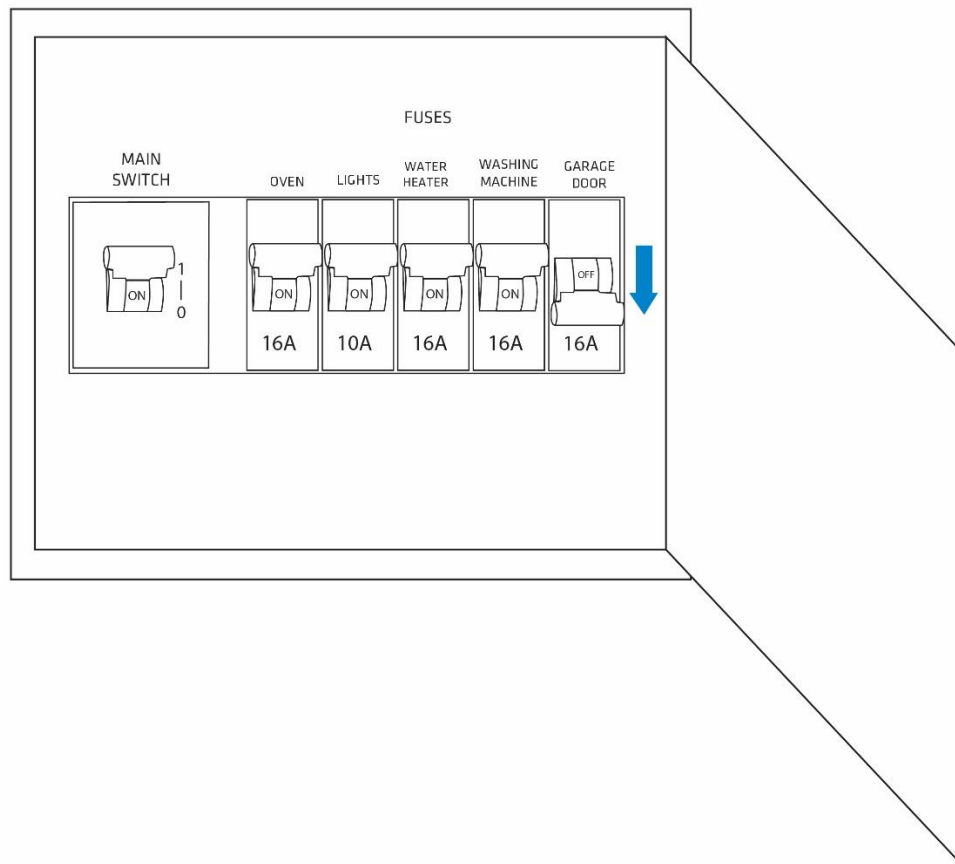


Step 2 – Installing the device:


- Connect the device exactly according to the diagrams shown below

Before Qubino installation:


STEP 2

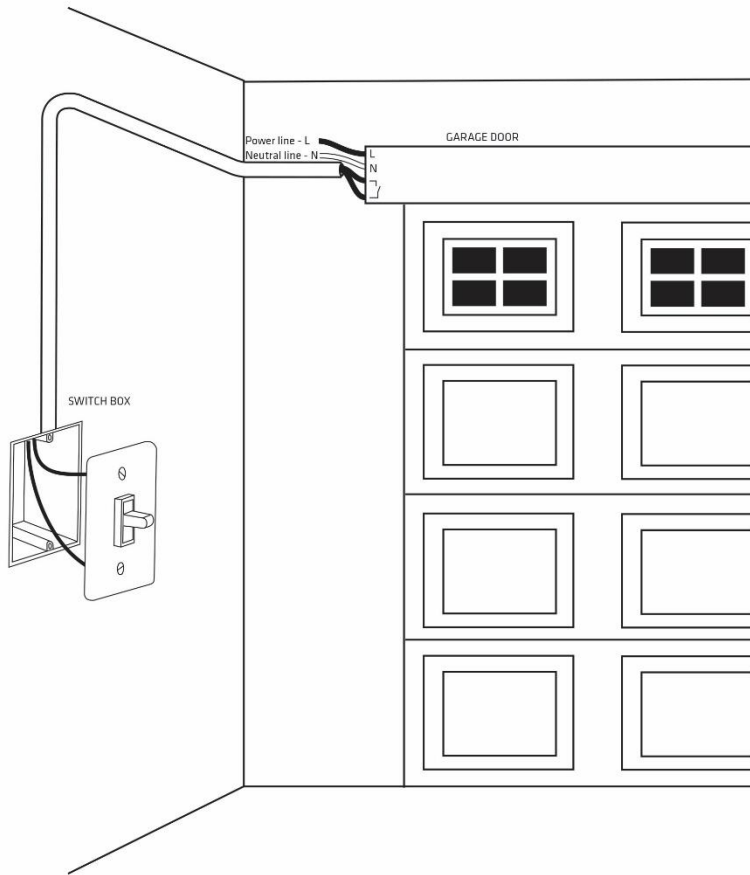


EU example:

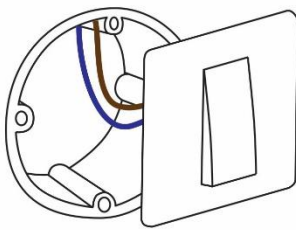

USA example:

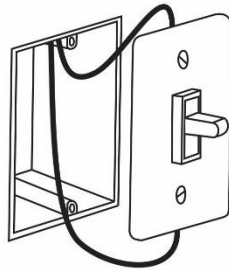


ITA/Brasil example:

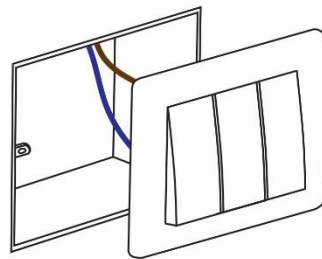


Installation and wire connections are the same in USA, EU and ITA/Brasil.

After Qubino installation:

DEVICE IS CONNECTED TO 110/230VAC

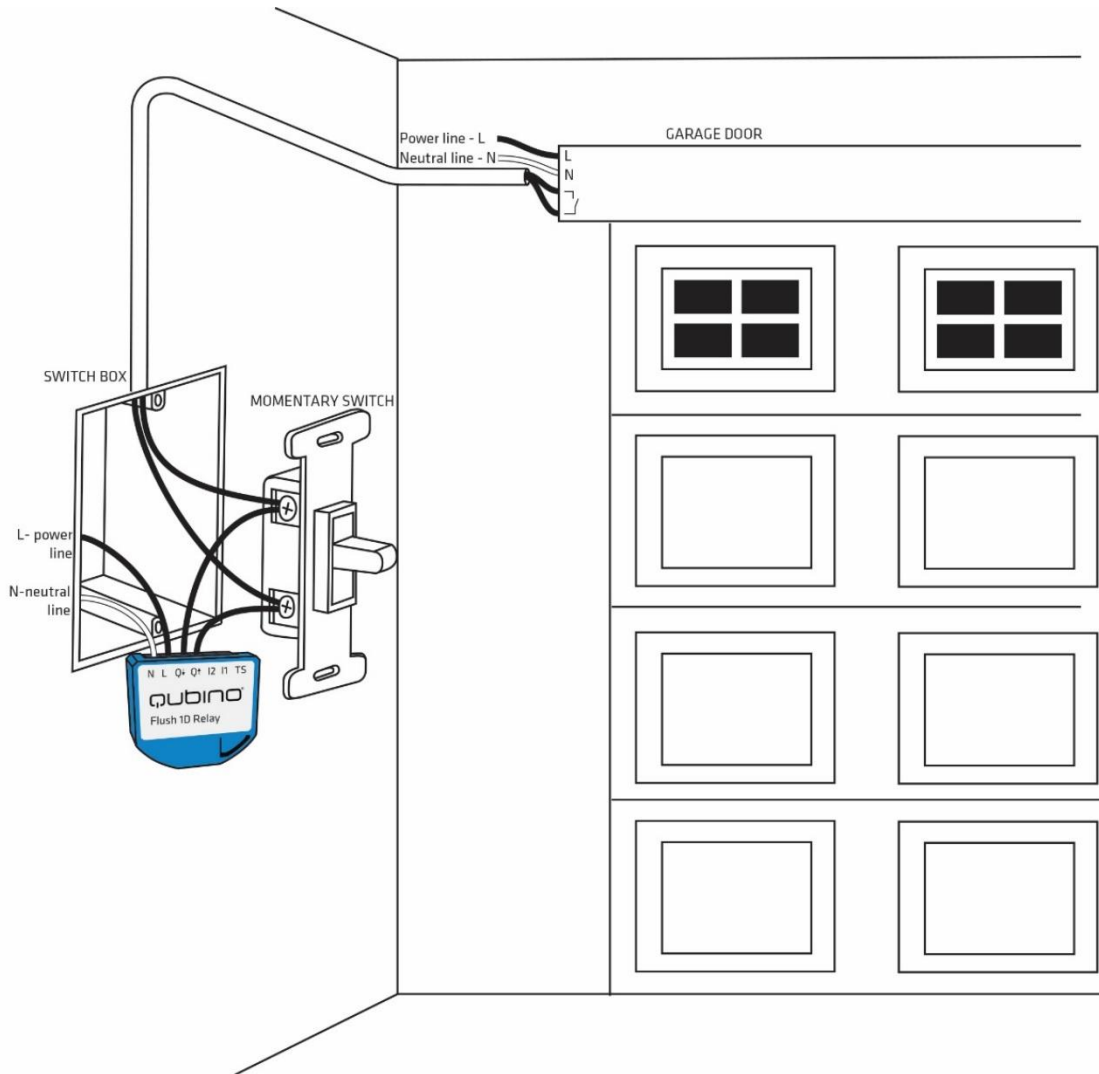


Installation in the switch box:

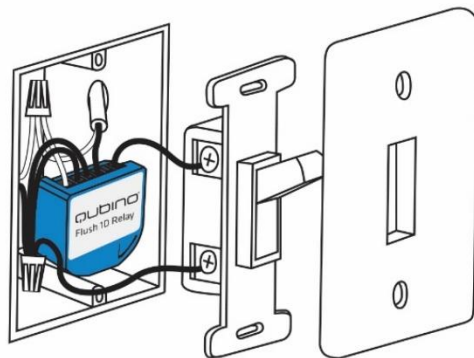

After Qubino installation:

DEVICE IS CONNECTED TO 24VDC

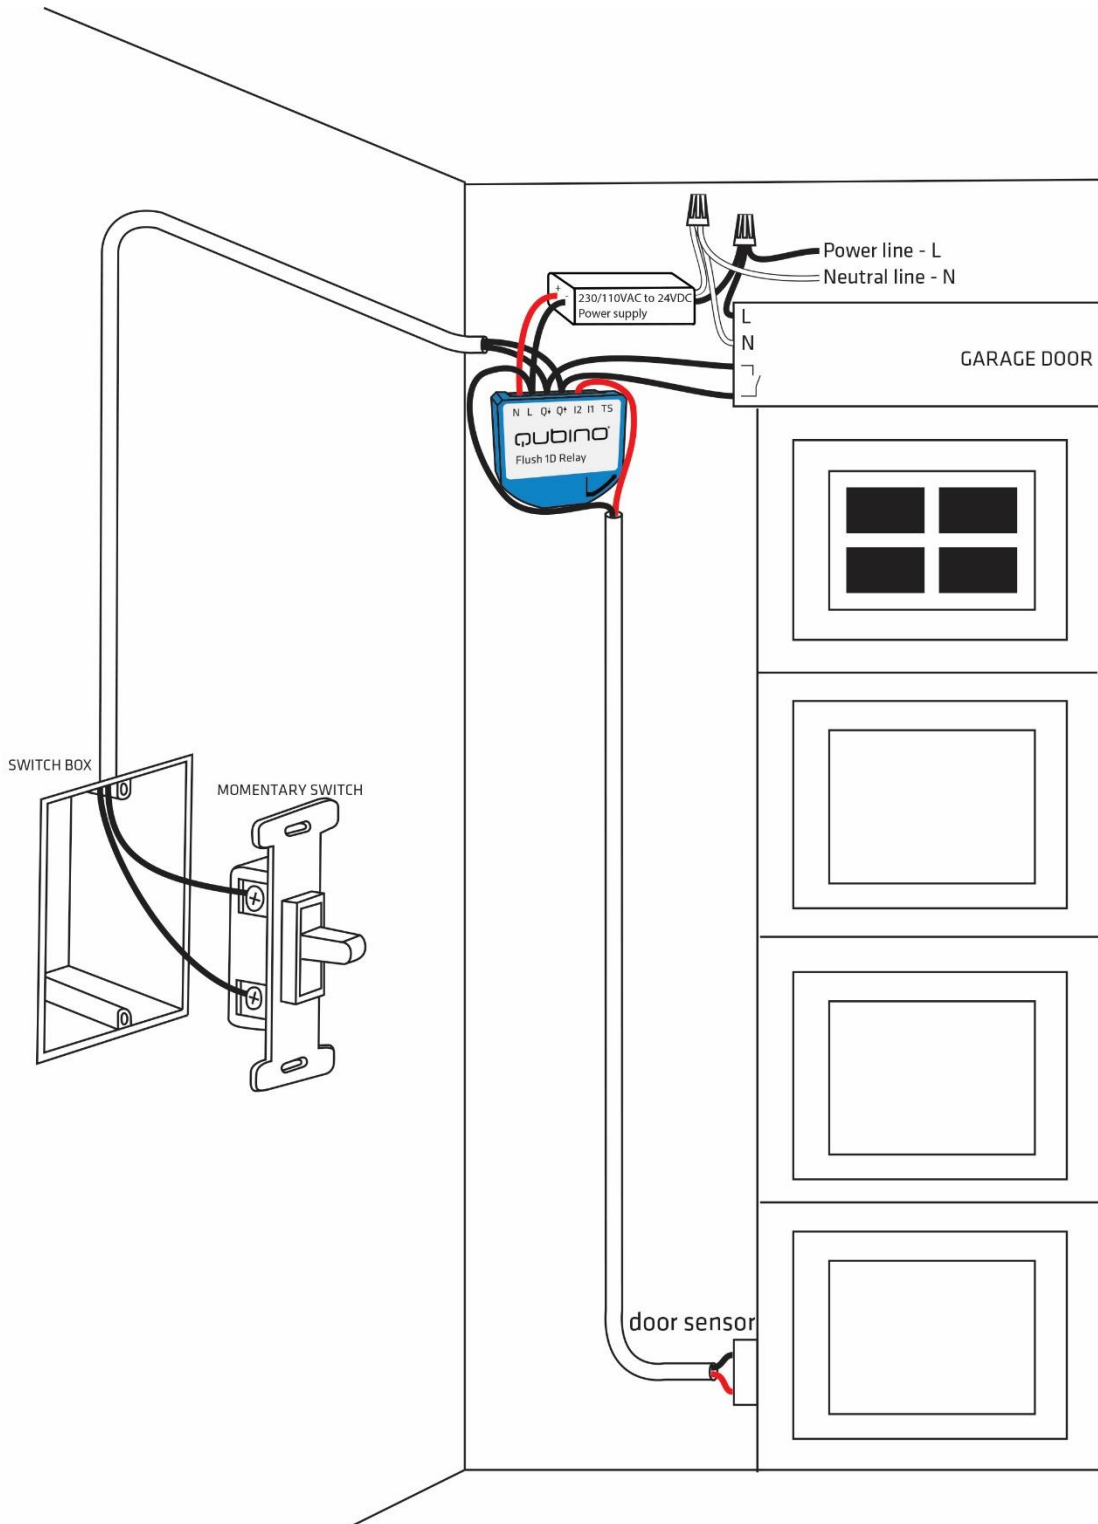


i Note!

- Place the antenna as far as possible from metal elements as they may cause signal interference.
- Do not shorten the antenna.

The device's antenna should be as upright as possible. This ensures the device's operational range is maximized (up to 98 feet (30 m) line of sight).



Step 3 – Turn ON the fuse:

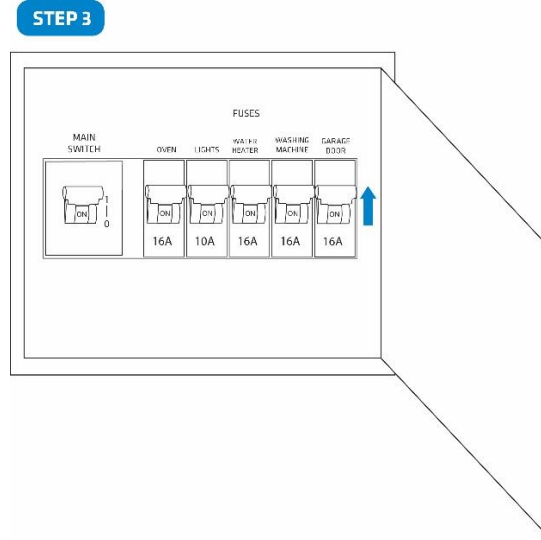


Step 4 – Add the device to your Z-Wave network:

- For more details on how to include the device, please refer to the Z-Wave Inclusion chapter.



Step 5 – The Installation is now complete. It’s time to make your life more comfortable with the help of the Qubino Flush 1D Relay

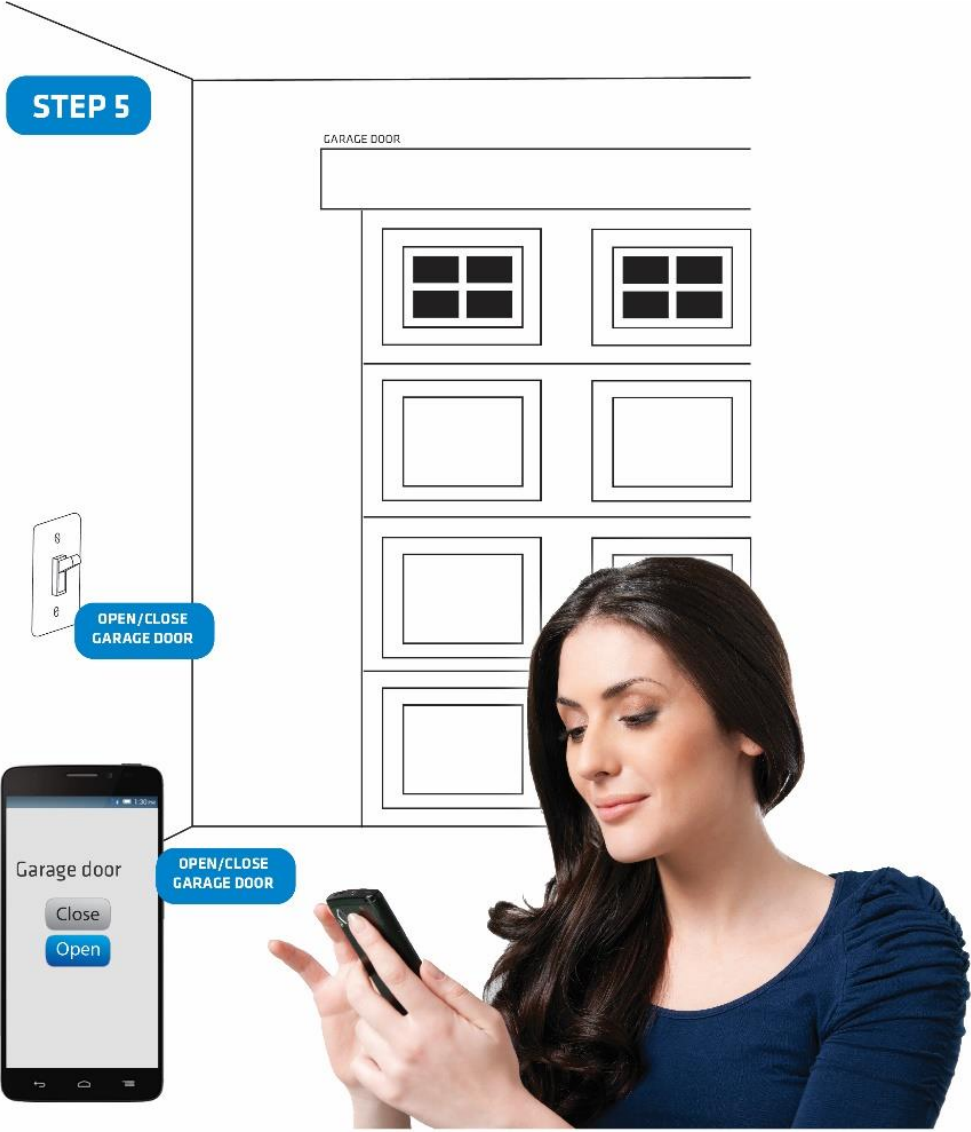


7.2. Installing the Qubino Temperature Sensor

The temperature sensor is a Qubino accessory and is sold separately - for more info, please see the Qubino product catalogue or website: <http://qubino.com/products/accessories/>

Product ordering code: ZMNHEA1

Qubino Z-Wave devices have the option to connect a temperature sensor (sold separately), which allows you to **remotely monitor ambient or water temperature**. Qubino devices are the only Z-Wave devices of its kind to offer this unique capability. With the sensor connected to the device, you can carry out accurate measurements of room temperature, pool water temperature, etc. and build automation rules around them. Qubino device with a temperature sensor is connected directly to power supply. Install it and forget it, there is no need to worry about changing the batteries like with most other Z-Wave temperature sensors which run on batteries. The temperature sensor's range is between -50° and 125°C (-58° and 257° F).

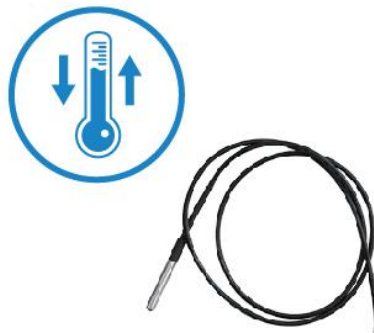

The digital Temperature sensor comes with a 1 m (3.3 ft) cord and a connector to attach it directly to a Qubino device.

1. To prevent electrical shock, make sure that no voltage is present on the temperature sensor cable.
2. When connected to Qubino device, the temperature sensor is under high voltage, which is very dangerous.
3. Goap d.o.o. does not take responsibility for any damage or electrical shock due to incorrect sensor assembly.
4. The above instructions and description apply to a temperature sensor compatible with Qubino products only.


NOTE: When Qubino is wired to 110-230VAC (high voltage) the temperature sensor must not be in direct contact with water.

Temperature sensor installation example:


Step 1 – Exclude the device (if it is already connected to your Z-Wave system)




Step 2 – Switch of the power supply

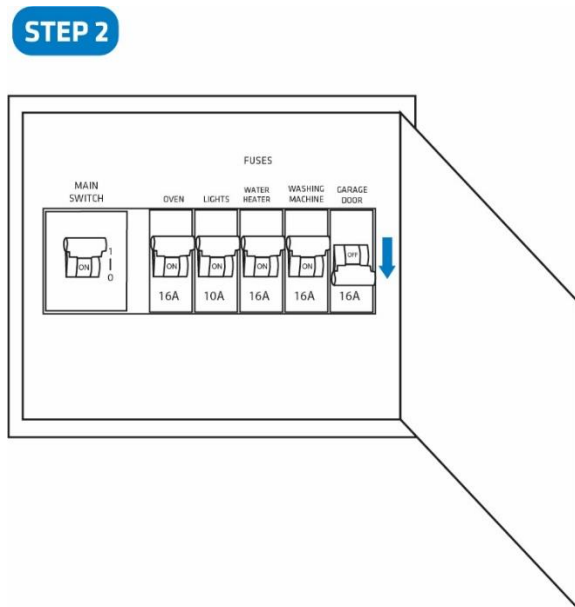

Step 3 – Connect the temperature sensor as shown below

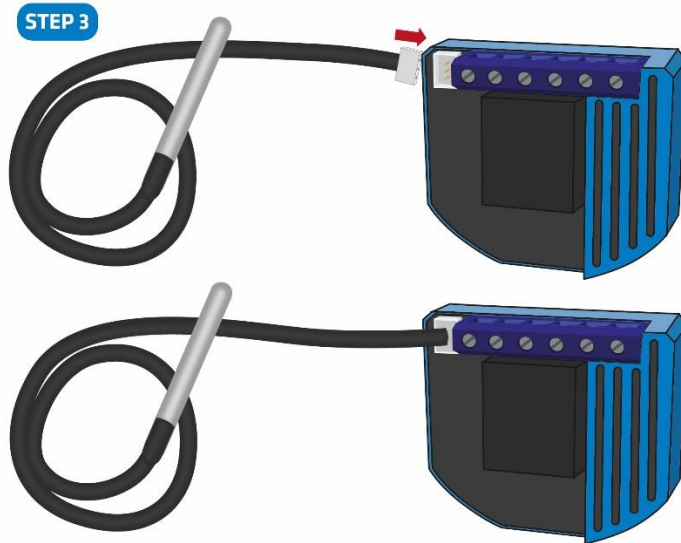


Step 4: Place the temperature sensor in the switch box

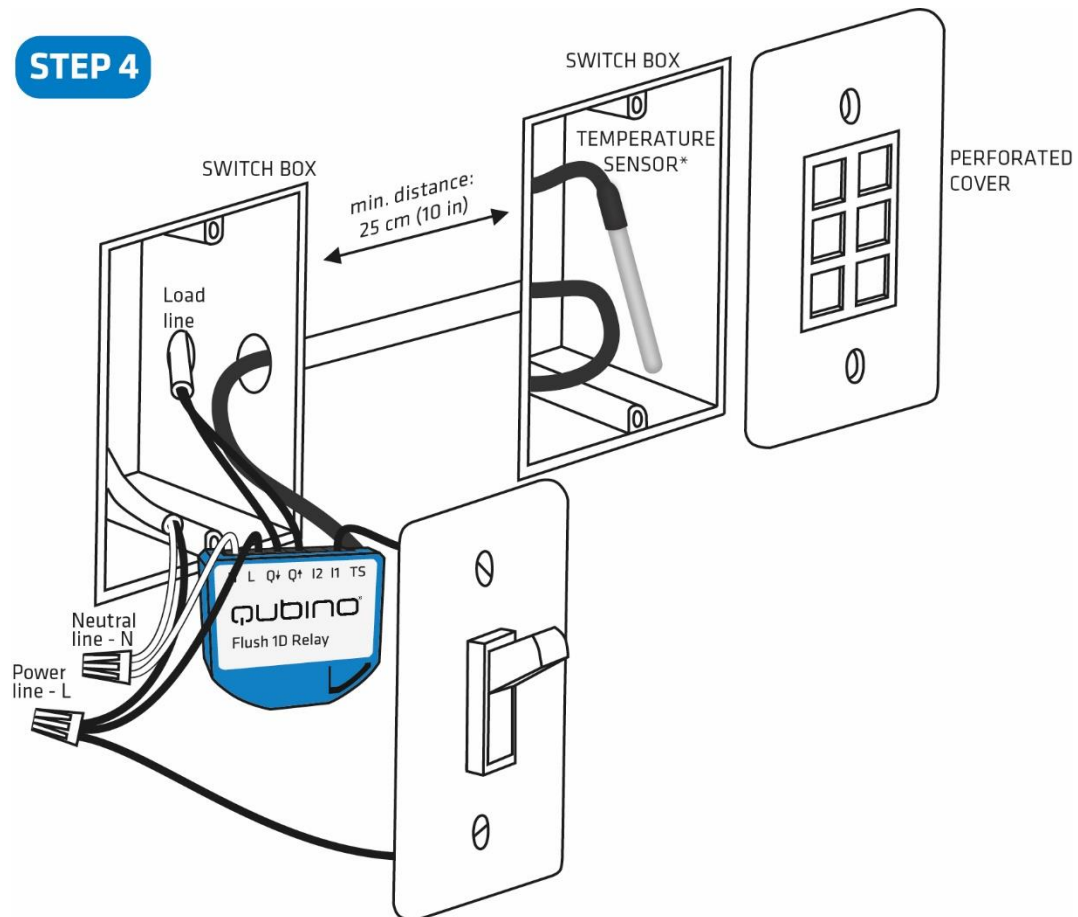



Step 5 – Turn the fuse on

STEP 5

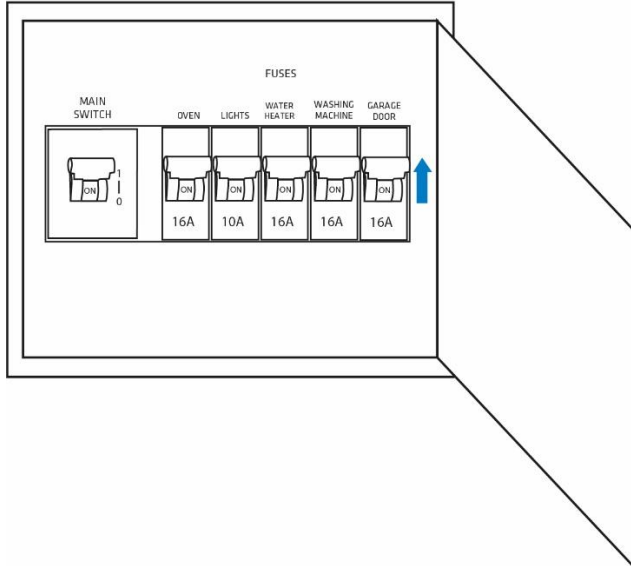

Step 6 – Re-include the device to your network

STEP 6

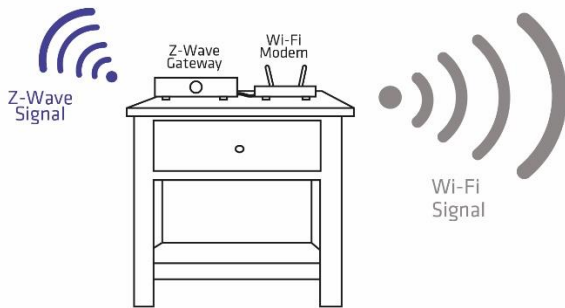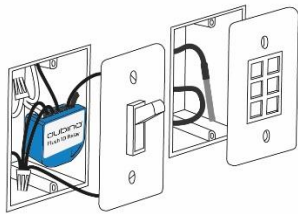

Step 7 – Start using the temperature sensor in connection with your device

STEP 7



8. Device Information and Support


Did you know that Qubino offers Z-Wave devices with 100% quality control guaranteed throughout the production process? Every single unit is tested and examined before being approved for sale – a truly unique pledge in the industry.

Why is this important?

Every device has a dedicated serial number and part number, which is assigned to the device only after it goes through a strict testing procedure.

By scanning the QR code on the back of your Qubino, its device title, serial number, and part number are automatically copied to your mobile phone. You can also use the code for direct access to the device page for more information. If you still don't find what you're looking for, click on the link to Qubino technical support team. They will be able to automatically read the serial and part number from your device and quickly review the production log file containing the production date as well as any relevant device parameters and information. This process allows our team to immediately identify and address issues, giving you the best support possible.


GET SUPPORT IN 3 SIMPLE STEPS:

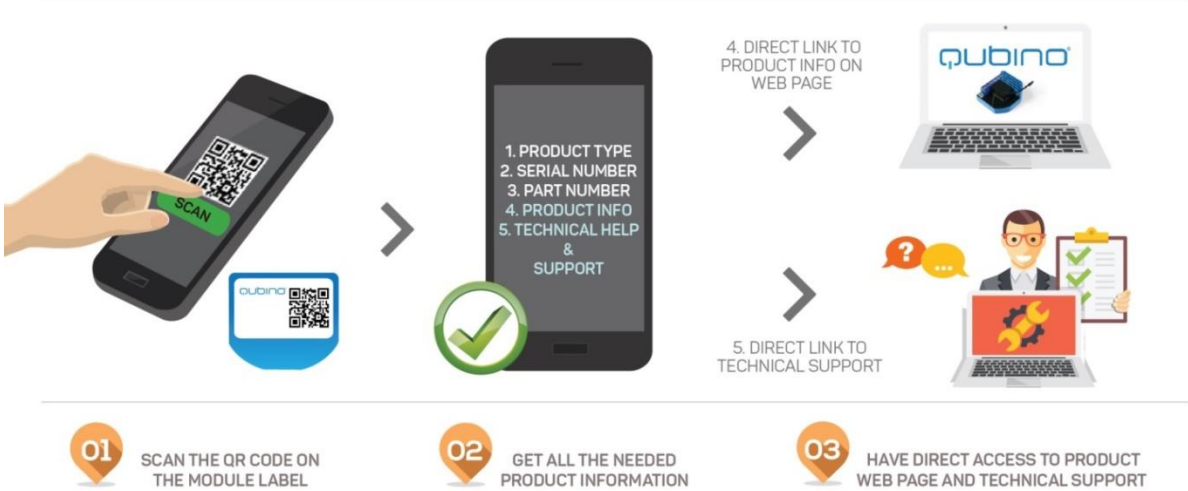

Based on customer and business partner feedback, we're proud to boast Qubino's support team as the best and fastest on the market. If you don't find the answers to your questions in this document, please contact our support team by scanning the QR code on your device or through our website: <http://qubino.com/support/#email>. We will try to help you as soon as possible.

9. Electrical Diagram (110 - 230VAC, 24VDC)

9.1 Electrical diagram 110 – 230VAC

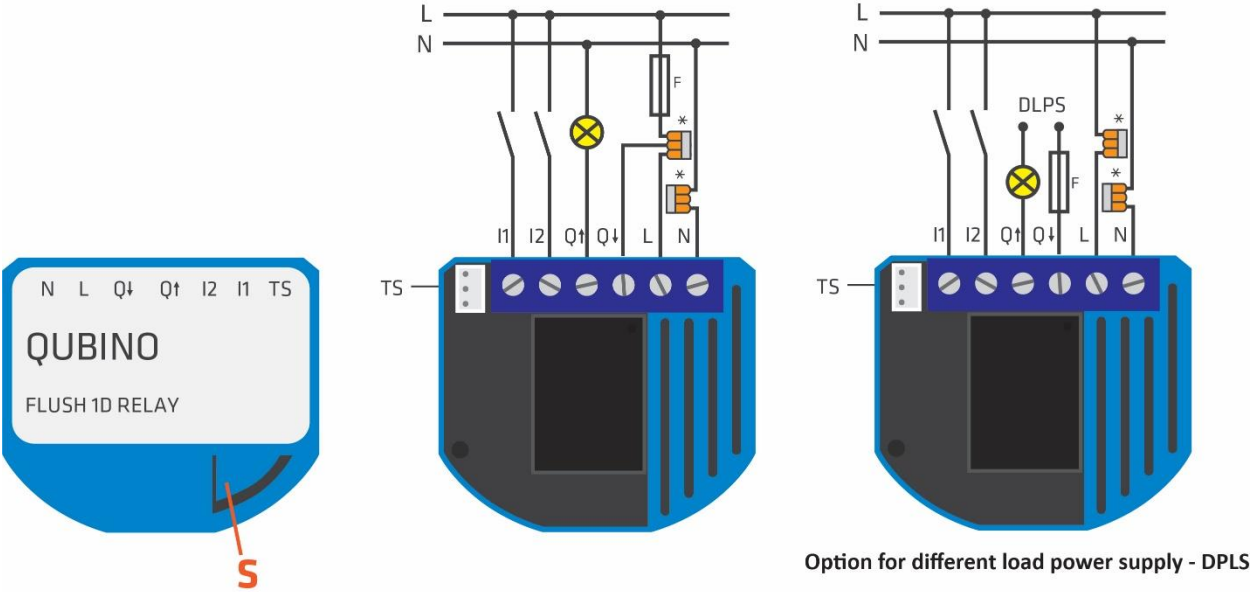

Notes for diagram:


| | |
|-----------|--|
| N | Neutral wire |
| L | Live (line) wire |
| Q↓ | Input for electrical device power supply |
| Q↑ | Output for electrical device |
| I2 | Input for switch /push button or sensor |
| I1 | Input for switch /push button |
| TS | Temperature sensor terminal |
| * | Wago 221-413 splicing connectors for L and N connection must be used only when connected to 230 VAC. |
| S | Service button |

WARNING:

The S (Service) button **must NOT be used** when the device is connected to a 110-230V power supply.

The durability of the device depends on the applied load. For resistive loads (light bulbs, etc.) and 10A current consumption of an electrical device, the device’s lifespan exceeds 100,000 toggles.

9.2 Electrical diagram 24VDC

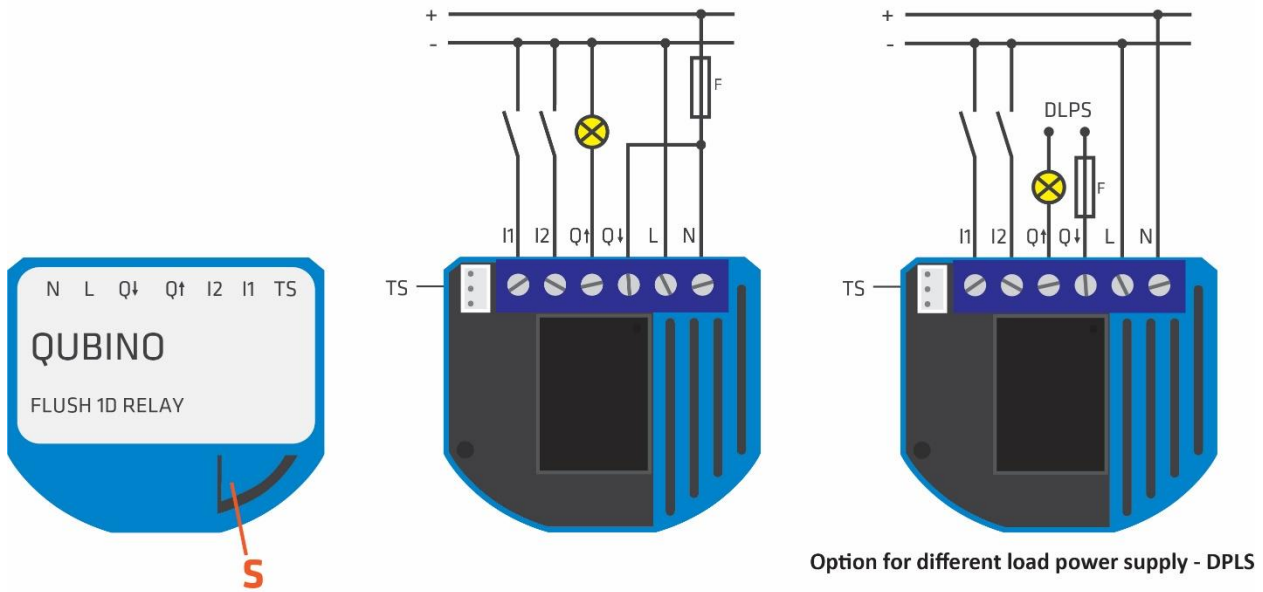

Notes for diagram:

| | |
|-----------|--|
| N | +VDC |
| L | -VDC |
| Q↓ | Input for electrical device power supply |
| Q↑ | Output for electrical device |
| I2 | Input for switch /push button or sensor |
| I1 | Input for switch /push button |
| TS | Temperature sensor terminal |
| S | Service button |

10. Adding the device to a Z-Wave network (Inclusion)

AUTOMATICALLY ADDING THE DEVICE TO A Z-WAVE NETWORK (AUTO INCLUSION)

1. Enable add/remove mode on your Z-Wave gateway (hub)
2. Connect the device to the power supply (with the temperature sensor already connected – sold separately*).
3. Auto-inclusion will be initiated within 5 seconds of connection to the power supply and the device will automatically enrol in your network

MANUALLY ADDING THE DEVICE TO A Z-WAVE NETWORK (MANUAL INCLUSION)


1. Enable add/remove mode on your Z-Wave gateway (hub)
2. Connect the device to the power supply (with the temperature sensor already connected*)
3. Toggle the switch connected to the I1 terminal 3 times within 3 seconds

OR

If the device is powered by 24 V SELV supply, press and hold the S (Service) button between 2 and 6 seconds

4. A new multi-channel device will appear on your dashboard

*If connecting the temperature sensor, switch off the power supply and make sure the device is excluded from your network BEFORE connecting the sensor.

 Make sure the device is excluded from your network before connecting the temperature sensor. Switch off the power supply, connect the temperature sensor, and re-include the device to your network.

11. Removing the device from a Z-Wave network (Exclusion)

REMOVAL FROM A ZWAVE NETWORK (Z-WAVE EXCLUSION)

1. Connect the device to the power supply
2. Make sure the device is within direct range of your Z-Wave gateway (hub) or use a hand-held Z-Wave remote to perform exclusion
3. Enable add/remove mode on your Z-Wave gateway (hub)
4. Toggle the switch connected to the I1 terminal 3 times within 3 seconds

OR

If the device is powered by 24 V SELV supply, press and hold the S (Service) button between 2 and 6 seconds


5. The device will be removed from your network but any custom configuration parameters will not be erased

FACTORY RESET

1. Connect the device to the power supply
2. Within the first minute (60 seconds) the device is connected to the power supply, toggle the switch connected to the I1 terminal 5 times within 3 seconds (5 times change switch state)

OR

If the device is powered by 24 V SELV supply, press and hold the S (Service) button for more than 6 seconds

 By resetting the device, all custom parameters previously set on the device will return to their default values, and the owner ID will be deleted. Use this reset procedure only when the main gateway (hub) is missing or otherwise inoperable.

12. Associations

Use associations for direct communication between the Flush 1D Relay device and other devices within your Z-Wave network without the need to use the primary gateway (hub).

Association Groups:

Root device:

- Group 1: Lifeline group (reserved for communication with the primary gateway (hub)), 1 node allowed.
- Group 2: Basic on/off (status change report for Q1 load), up to 16 nodes.
- Group 3: Basic on/off (status change report for I2 input) up to 16 nodes.
- Group 4: Binary sensor (status change report for I2 input) up to 16 nodes.
- Group 5: Notification report (status change report for I2 input) up to 16 nodes.
- Group 6: Multilevel sensor report (external temperature sensor report – sensor sold separately), up to 16 nodes.

End point 1 (Wall Switch I1):

- Group 1: Lifeline group, 0 nodes allowed.
- Group 2: Basic on/off (status change report for Q1 load), up to 16 nodes.

End point 2 (Wall Switch I2):

- Group 1: Lifeline group, 0 nodes allowed.
- Group 2: Basic on/off (status change report for I2 input) up to 16 nodes.
- Group 3: Binary sensor (status change report for I2 input) up to 16 nodes.
- Group 4: Notification report (status change report for I2 input) up to 16 nodes.

End point 3 (External Temperature Sensor):

- Group 1: Lifeline group, 0 nodes allowed.
- Group 2: Multilevel sensor report (external temperature sensor report – sensor sold separately), up to 16 nodes.

13. Configuration Parameters

Parameter no. 1 – In-wall Switch Type for Load 1 (Q1) to control I1

With this parameter, you can select between push-button (momentary) and on/off toggle switch types.

Values (size is 1 byte dec):


- default value 1
- 0 - push-button (momentary)
- 1 - on/off toggle switch



Parameter no. 2 – Input 2 contact type

Values (size is 1 byte dec):

- default value 0
- 0 - NO (normally open) input type
- 1 - NC (normally close) input type

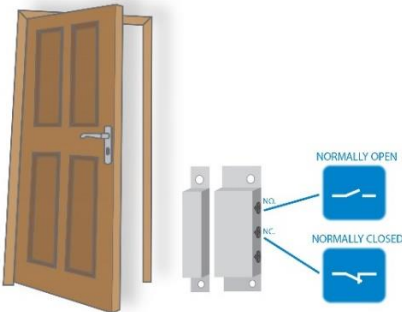


Parameter no. 10 - Activate / deactivate ALL ON / ALL OFF Functionality

Flush 1D Relay device responds to commands ALL ON / ALL OFF that may be sent by the primary or secondary gateway (hub) within the Z-Wave network.

Values (size is 2 byte dec):


- default value 255
- 255 - ALL ON active, ALL OFF active
- 0 - ALL ON not active, ALL OFF not active
- 1 - ALL ON not active, ALL OFF active
- 2 - ALL ON active, ALL OFF not active

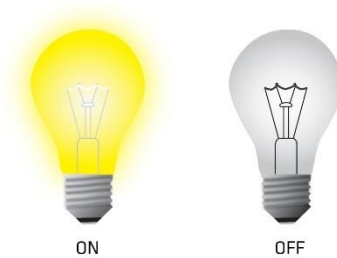**Parameter no. 11 - Turn Load 1 (Q1) Off Automatically with Timer**

If Load 1 (Q1) is ON, you can schedule it to turn OFF automatically after a period of time defined in this parameter. The timer is reset to zero each time the device receives an ON command, either remotely (from the gateway (hub) or associated device) or locally from the switch.

Values (size is 2 byte dec):

- default value 0
- 0 - Auto OFF Disabled
- 1 - 32535 = 1 - 32535 seconds (or milliseconds – see Parameter no. 15) Auto OFF timer enabled for a given amount of seconds (or milliseconds)

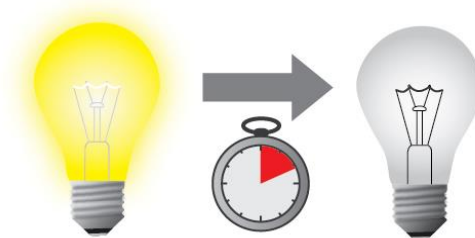


Parameter no. 12 - Turn Load 1 (Q1) On Automatically with Timer

If Load (Q1) is OFF, you can schedule it to turn ON automatically after a period of time defined in this parameter. The timer is reset to zero each time the device receives an OFF command, either remotely (from the gateway (hub) or associated device) or locally from the switch.

Values (size is 2 byte dec):

- default value 0
- 0 - Auto ON Disabled
- 1 - 32535 = 1 - 32535 seconds (or milliseconds – see Parameter no. 15) Auto ON timer enabled- for a given amount of seconds (or milliseconds).

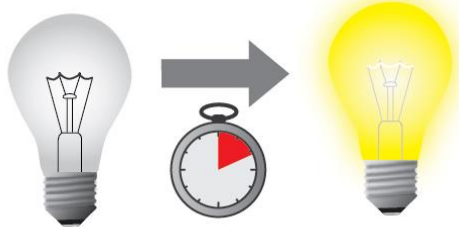**Parameter no. 15 - Set Timer Units to Seconds or Milliseconds**

Choose if you want to set the timer in seconds or milliseconds in parameters 11 and 12.

Values (size is 1 byte dec):

- default value 0
- 0 – timer set in seconds
- 1 – timer set in milliseconds

Please note that the value for this parameter applies to settings for Q1 load in all of the above parameters (timer on / timer off).




Parameter no. 30 - Restore on/off status for Q1 load after power failure

This parameter determines if on/off status is saved and restored for the load Q1 after power failure.

Values (size is 1 byte dec):

- default value 0
- 0 - Device saves last on/off status and restores it after a power failure.
- 1 - Device does not save on/off status and does not restore it after a power failure, it remains off.

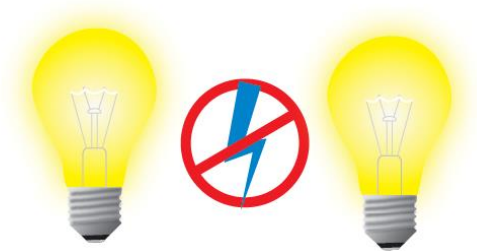**Parameter no. 63 – Choose Normally Closed or Normally Open for Q1 Load**

Set value determines the type of the device connected to the Q1 output. The output type can be normally open (NO) or normally closed (NC).

Values (size is 1 byte dec):

- default value 0
- 0 - When switch/device is off the output is 0V (NC).
- 1 - When switch/device is off the output is 230V (NO).



Parameter no. 100 – Enable / Disable Endpoint I2 or select the Notification Type and the Notification Event

Choose whether the Endpoint I2 is disabled (and not shown on the UI) or enabled (and displayed on the UI). By enabling this endpoint (setting it to be either a notification sensor or a binary sensor), the user also selects a Notification Type and a Notification Event for which notification reports will be sent (in case the endpoint is configured as a notification sensor).

Endpoint device type selection:

-notification sensor (1 - 6): GENERIC_TYPE_SENSOR_NOTIFICATION, SPECIFIC_TYPE_NOTIFICATION_SENSOR

Values (size is 1 byte dec):

- default value 0
- 1 - Home Security; Motion Detection, unknown location
- 2 - CO; Carbon Monoxide detected, unknown location
- 3 - CO2; Carbon Dioxide detected, unknown location
- 4 - Water Alarm; Water Leak detected, unknown location
- 5 - Heat Alarm; Overheat detected, unknown location
- 6 - Smoke Alarm; Smoke detected, unknown location
- 0 - Endpoint, I2 disabled

-sensor binary (9): GENERIC_TYPE_SENSOR_BINARY, SPECIFIC_TYPE_NOT_USED

Values (size is 1 byte dec):

- 9 - Sensor binary

NOTE 1: After changing the values of the parameter, first exclude the device (without setting the parameters to their default values), then wait at least 30 seconds to re-include the device!

NOTE 2: When the parameter is set to value 9 the notifications are sent for the Home Security notification type.



Parameter no. 110 – Temperature Sensor Offset Settings

Set value is added to or subtracted from the actual measured value to adjust the temperature report sent by an external sensor (sold separately). This parameter only applies to Celsius temperature unit (the Fahrenheit unit is currently not supported).

Values (size is 2 byte dec):

- default value 32536
- 32536 - Offset is 0 °C.
- 1 - 100 - Where 1 stands for 0.1°C and 100 stands for 10.00 °C added to the actual measurement.
- 1001 - 1100 – Where 1001 stands for -0.1 °C and 1100 stands for -10.0 °C subtracted from the actual measurement.



Parameter no. 120 – Temperature Sensor Reporting Threshold

If an external digital temperature sensor (sold separately) is connected to the device, it reports temperature readings based on the threshold defined in this parameter. This parameter only applies to the Celsius temperature unit (the Fahrenheit unit is currently not supported).

Values (size is 1 byte dec):

- Default value 5 = 0.5°C
- 0 – Reporting disabled
- 1 - 127 = Where 1 stands for 0.1°C and 127 stands for 12.7 °C







14. Technical Specifications

| | |
|---|--|
| Power supply | 110 - 230 VAC \pm 10% 50/60Hz, (24-30VDC) |
| Rated load current of AC/DC output (resistive load)* | 1 X 10A / 230VAC / 30VDC |
| Output circuit power of AC/DC output (resistive load) | 2300W (230VAC) / 240W (24VDC) |
| Digital temperature sensor range | -50 ~ +125°C (-58 ~ 257°F) |
| Operation temperature | -10 ~ +40°C (14 ~ 104°F) |
| Z-Wave operation range | up to 30 m indoors (98 ft) |
| Dimensions (WxHxD) (package) | 41,8x36,8x16,9 mm (79x52x22 mm) / 1,65x1,45x0,66 in (3,11x2,05x0,87 in) |
| Weight (with package) | 28g (34g) / 0.98oz (1.20oz) |
| Electricity consumption | 0,4W |
| For installation in boxes | $\varnothing \geq 60$ mm (2,36 in) or 2M, depth ≥ 60 mm (2,36 in) |
| Switching | Relay |
| Z-Wave Repeater | Yes |

* In case of loads other than resistive loads, please pay attention to the value of $\cos \phi$. If necessary, connect loads less powerful than what they're rated for – this applies to all motor loads. Max current for $\cos \phi=0,4$ is 3A at 250VAC, 3A at 24VDC L/R=7ms.

Supported loads

| | | |
|--|--|---|
|  | Electric motor | 690W (230VAC) 330W (110VAC) For power factor = 0,4 In case of inductive loads it is recommended to use RC snubber circuit. |
|  | Conventional incandescent and halogen lights | 2300W (230VAC) 1100W (110VAC) |
|  | LED bulb, compact fluorescent bulb (CFL), low voltage halogen bulbs with electronic transformer | LED: 320W (230VAC) / 150W (110VAC) CFL* LVH Electronic transformer: 800W (230VAC) / 380W (110VAC) |
|  | Low voltage halogen bulbs with conventional transformer | * |
| | Other type of loads | * |

* Please contact Qubino support regarding marked load types:

<http://qubino.com/support/#email>

15. Z-Wave Command Classes

ZWAVEPLUS_INFO_REPORT_ROLE_TYPE_SLAVE_ALWAYS_ON

GENERIC_TYPE_SWITCH_BINARY

SPECIFIC_TYPE_POWER_SWITCH_BINARY

Z-Wave Supported Command Classes:

COMMAND_CLASS_ZWAVEPLUS_INFO_V2

COMMAND_CLASS_VERSION_V2

COMMAND_CLASS_MANUFACTURER_SPECIFIC_V2C

COMMAND_CLASS_DEVICE_RESET_LOCALLY_V1

COMMAND_CLASS_POWERLEVEL_V1

COMMAND_CLASS_BASIC_V1

COMMAND_CLASS_SWITCH_ALL_V1

COMMAND_CLASS_SWITCH_BINARY_V1

COMMAND_CLASS_METER_V4

COMMAND_CLASS_SENSOR_MULTILEVEL_V7

COMMAND_CLASS_MULTI_CHANNEL_V4

COMMAND_CLASS_ASSOCIATION_V2

COMMAND_CLASS_MULTI_CHANNEL_ASSOCIATION_V3

COMMAND_CLASS_ASSOCIATION_GRP_INFO_V2

COMMAND_CLASS_CONFIGURATION_V1

COMMAND_CLASS_MARK

COMMAND_CLASS_BASIC_V1

Endpoint 1 (I1)

Device Class:

GENERIC_TYPE_SWITCH_BINARY

SPECIFIC_TYPE_POWER_SWITCH_BINARY

Command Classes:

COMMAND_CLASS_ZWAVEPLUS_INFO_V2

COMMAND_CLASS_VERSION_V2

COMMAND_CLASS_SWITCH_BINARY_V1

COMMAND_CLASS_BASIC_V1

COMMAND_CLASS_SWITCH_ALL_V1

COMMAND_CLASS_ASSOCIATION_V2

COMMAND_CLASS_MULTI_CHANNEL_ASSOCIATION_V3

COMMAND_CLASS_ASSOCIATION_GRP_INFO_V2

COMMAND_CLASS_METER_V4

COMMAND_CLASS_MARK

COMMAND_CLASS_BASIC_V1

Endpoint 2 (I2):**Device Class:**

GENERIC_TYPE_SWITCH_BINARY

SPECIFIC_TYPE_POWER_SWITCH_BINARY

Command Classes:

COMMAND_CLASS_ZWAVEPLUS_INFO_V2

COMMAND_CLASS_VERSION_V2

COMMAND_CLASS_SWITCH_BINARY_V1

COMMAND_CLASS_BASIC_V1

COMMAND_CLASS_SWITCH_ALL_V1
COMMAND_CLASS_ASSOCIATION_V2
COMMAND_CLASS_MULTI_CHANNEL_ASSOCIATION_V3
COMMAND_CLASS_ASSOCIATION_GRP_INFO_V2
COMMAND_CLASS_METER_V4
COMMAND_CLASS_MARK
COMMAND_CLASS_BASIC_V1

Endpoint 3:

Device Class:

GENERIC_TYPE_SENSOR_MULTILEVEL
SPECIFIC_TYPE_ROUTING_SENSOR_MULTILEVEL

Command Classes:

COMMAND_CLASS_ZWAVEPLUS_INFO_V2
COMMAND_CLASS_VERSION_V2
COMMAND_CLASS_SENSOR_MULTILEVEL_V7
COMMAND_CLASS_ASSOCIATION_V2
COMMAND_CLASS_MULTI_CHANNEL_ASSOCIATION_V3
COMMAND_CLASS_ASSOCIATION_GRP_INFO_V2

NOTE: The Endpoint 3 command class list only applies if an external digital temperature sensor (sold separately) is connected to the TS terminal. If the sensor is not connected, the following command class is not supported by the device:

COMMAND_CLASS_SENSOR_MULTILEVEL_V7

This product can be included and operated in any Z-Wave network with other Z-Wave certified devices from any other manufacturers. All constantly powered nodes in the same network will act as repeaters regardless of the vendor in order to increase reliability of the network.

16. Important Disclaimer

Z-Wave wireless communication is not always 100% reliable. This device should not be used in situations in which life and/or valuables are solely dependent on its functioning. If the device is not recognized by your gateway (hub) or shows up incorrectly, you may need to change the device type manually and make sure your gateway (hub) supports multi-channel devices. Contact us for help before returning the device: <http://qubino.com/support/#email>

17. Warning

Do not dispose of electrical appliances as unsorted municipal waste, use separate collection facilities. Contact your local government for information regarding the collection systems available. If electrical appliances are disposed of in landfills or dumps, hazardous substances can leak into the groundwater and get into the food chain, damaging your health and well-being. When replacing old appliances with new ones, the retailer is legally obligated to take back your old appliance for disposal free of charge.

18. Regulations

FCC COMPLIANCE STATEMENT:

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not in-stalled and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: —Reorient or relocate the receiving antenna. — Increase the separation between the equipment and receiver. —Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. —Consult the dealer or an experienced radio/ TV technician for help.

Legal Notice

This user manual is subject to change and improvement without notice. GOAP d.o.o. Nova Gorica reserves all rights to revise and update all documentation without any obligation to notify any individual or entity.

Declaration of Conformity

Qubino Flush 1D Relay device is in compliance with the essential requirements and other relevant provisions of the Low voltage (LVD) Directive (2014/35/EU), Electromagnetic Compatibility (EMC) Directive (2014/30/EU), Radio Equipment Directive (2014/53/EU), Directive RoHS (2011/65/EU) and Directive ErP (2009/125/EC).

WEEE

According to the WEEE (Waste electrical and electronic equipment) Directive, do not dispose of this product as household waste or commercial waste. Waste electrical and electronic equipment should be appropriately collected and recycled as required by practices established for your country. For information on recycling of this product, please contact your local authorities, your household waste disposal service or the shop where you purchased the product.



NOTE: User manual is valid for device with SW version S5 (SW version is part of P/N)!

Example:P/N: ZMNHNDxHxS5Px

Goap d.o.o. Nova Gorica

Ulica Klementa Juga 007, 5250 Solkan, Slovenia

E-mail: info@qubino.com

Tel: +386 5 335 95 00

Web: www.qubino.com

Date: 5.1.2018; V 1.6.1

[DON'T MISS OTHER INVENTIONS FROM QUBINO– CLICK HERE AND CHECK OUT QUBINO'S COMPLETE PORTFOLIO](#)