

User Manual

**Please read this manual before
you use the recorder.**

Respected user:

Thank you for choosing voice recorder of our company!

Please read this manual carefully before using this product in order to make it easy to operate the product as quickly as possible. If you encounter any problem in the process of using, please contact with the local dealer in time. Thank you for your support and cooperation!

- **The information in this manual is subject to change without notice.**
- **The information in this manual is copyrighted. Without the prior written consent of the Company, any part of it is not allowed to be copied or compiled in anyway.**

- **The Company reserves the right of final interpretation of this manual and its related materials.**

[NOTE]The purchase of products to prevail in kind. The changes of product data and appearance are no longer notice.

 
- **Please insert the TF card before using the unit.**

[NOTE]We recommend that you use high-quality memory card to ensure the image coherent clear because of the uneven TF card in the market.

Thank you for your cooperation!

Product Introduction:

Digital voice recorder

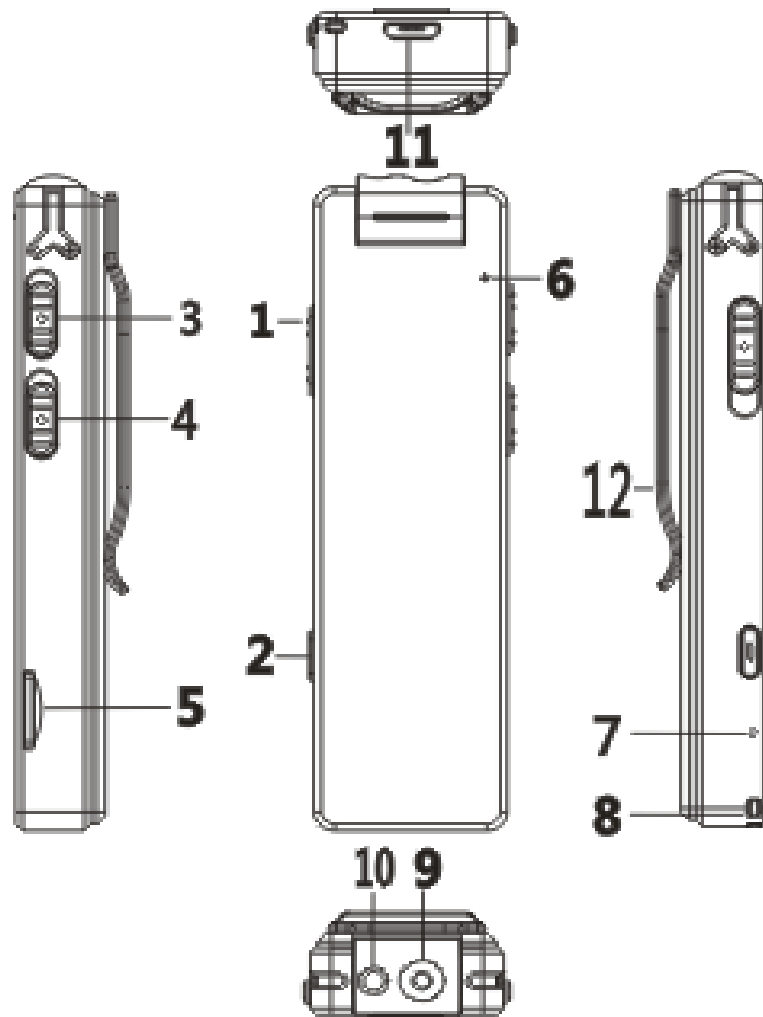

NOTE: The shape picture takes the real object as the standard

Function definition:

1. Turn on / off, turn on / off the LED indicator / auxiliary light

2. Camera key

Video button: a key to video record and save it

Recording button: a key to audio record and save it

5. TF card slot: up to 32GB

6. LED indicator light

Digital voice recorder

7. **Resetting button: forced shutdown and restart (When it appears crash, please press this button)**

8. **Lanyard hole**

9. **Camera**

10. **LED indicator light**

USB jack

Back splint

Indicator Description:

Standby: blue is always on.

Audio recording: blue flashing

Video: green light flashing

Power on: The blue light gives a long green light

Power off: The lamp

Charging: The red light is long (full of lights out)

 
Low power: Blue lights, green flashes alternately, three automatic shutdown

Power on/off: (Please insert the TF card before using this

machine. Otherwise, it cannot be

operated.)

In the off state, turning on the power switch and holding down 3 seconds, the machine will be on automatically.

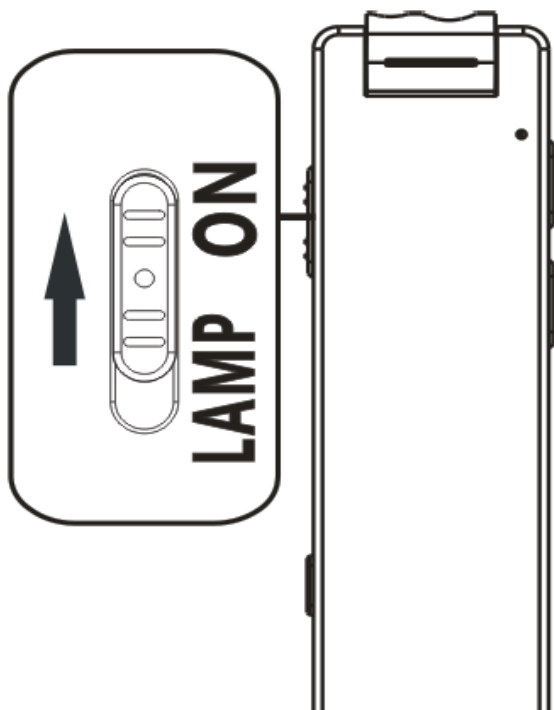


Digital voice recorder

In the on state, turning on the power switch and holding down 3 seconds, the machine will be off automatically.

In standby mode for 1 minute will be off automatically.

 Audio record/save the audio recording

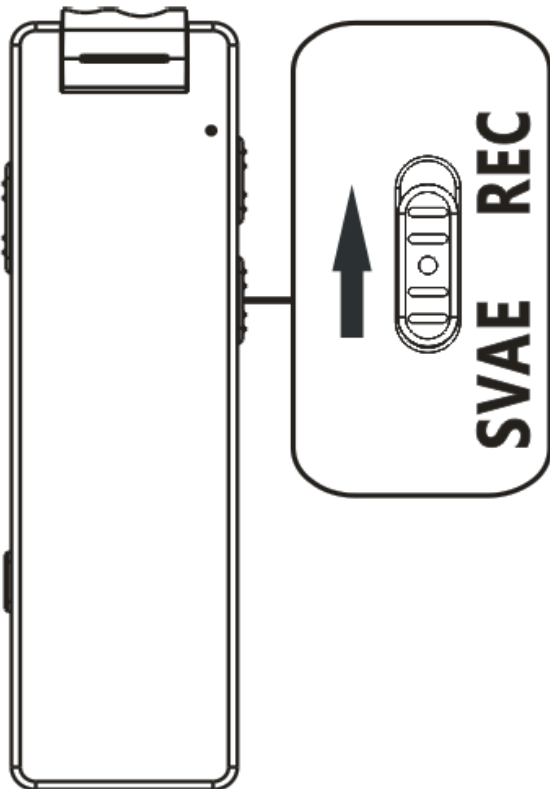


In standby mode (blue light is long), click "recording key" in "recording" position, at this time the machine enters the recording state, when recording, the indicator light is the blue light flashing condition.

Save the current recording file by placing the recording key in the save.

The recording file is automatically saved as a file for 30 minutes to avoid the file being too large to be lost

Digital voice recorder

 Video / save videos /take a picture

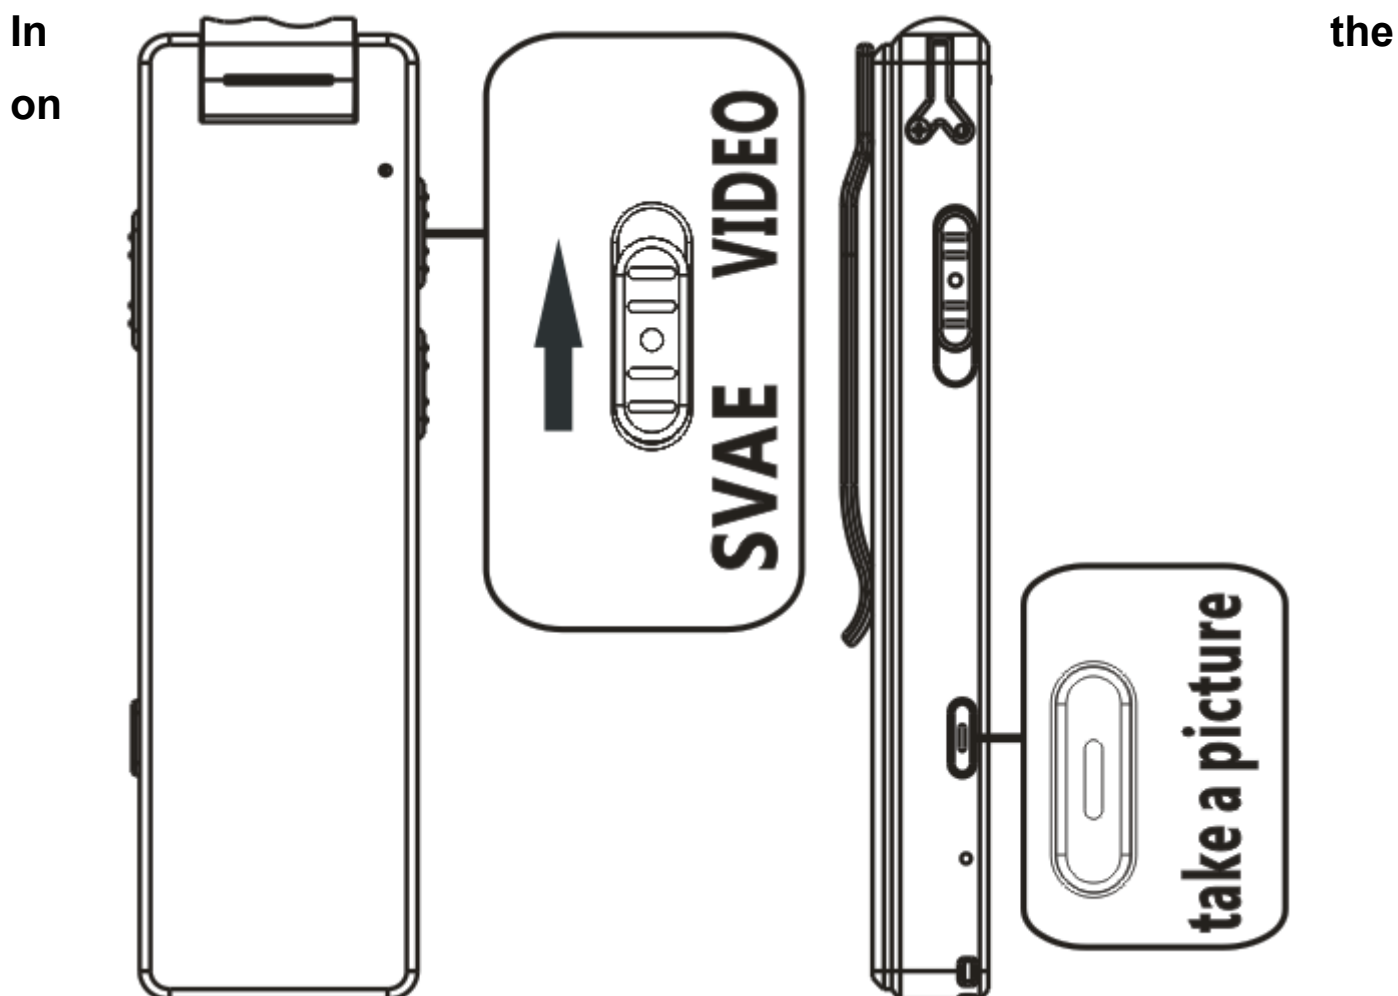

state, turn the “video recording button” to “video recording” position. Then the machine is into the video recording state and the video recording light flashes with green.

The video recorded file is saved automatically for 10 minutes as a file, to avoid that the file is so large that lost.

Turn “video recording button” to saved state, so as to save the current video recording file.

Digital voice recorder

4. In video mode, press the camera button briefly, and the blue light flashes once, and the photos are automatically saved to the "VIDEO" root directory

 
Note: the camera key has the function in the video recording state, and the other states have no function.

Charge and video record simultaneously

After the machine is switched on, plug into the charger connection line, and then click the "video" button in the "video" position, when the machine enters charging and recording.

2. After the machine is switched on, plug into the charger connection line, and then click "record" button in the "recording" position, when the machine enters charging and recording status

One key turn on / off indicator / auxiliary light

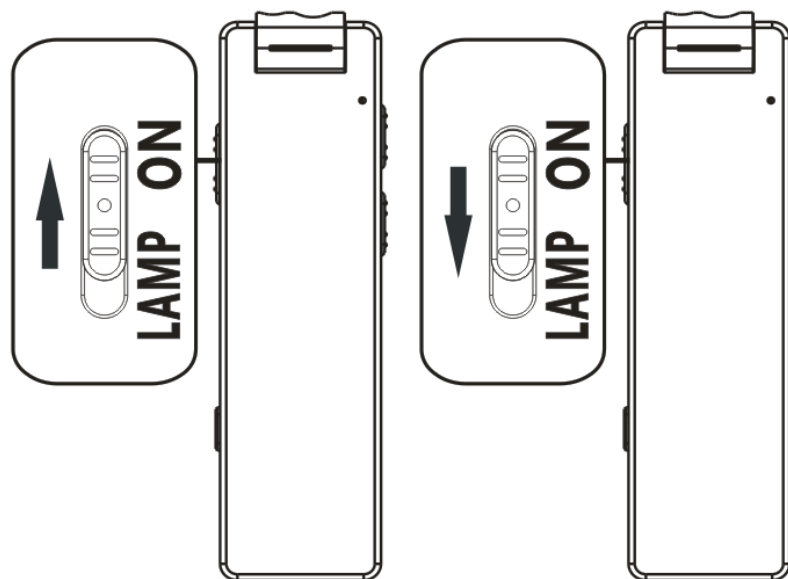

In the recording or recording state, when the indicator light is on, push the power up, turn on the key, turn off the indicator light.

In the recording or recording state, when the indicator lights go out, push the power button up, turn on the key, turn on the

indicator light and blink.

In video recording, push the power button to the auxiliary light

Digital voice recorder

 
 
position, turn on the auxiliary light, switch the power on, turn the key to the middle position, and turn off the auxiliary light.

Warm prompt: if not need, please turn off the auxiliary lamp, saves the electricity.

Synchronize system time

1. The TF card into the machine after the boot, and then connected to the computer, inside the machine will automatically generate three file "time.txt", "VIDEO", "AUDIO".
2. Choose "time.txt" to open, there will be a date and time, date and time into their own needs, format (date when this) then save, unplug and then boot video or audio recording, display the current date and time settings.
3. Mobile detection settings: motion:0, modify 0 or 1, 0 means closing motion detection, 1 indicates open motion detection, and default is to turn off motion detection.
4. After the modification settings have been completed, you must boot once, read the text information once, and avoid a long time without the machine, and restore the machine default time.
5. "VIDEO" saves folders for video and photo files
6. "AUDIO" saves the folder for the recording file.

Digital voice recorder

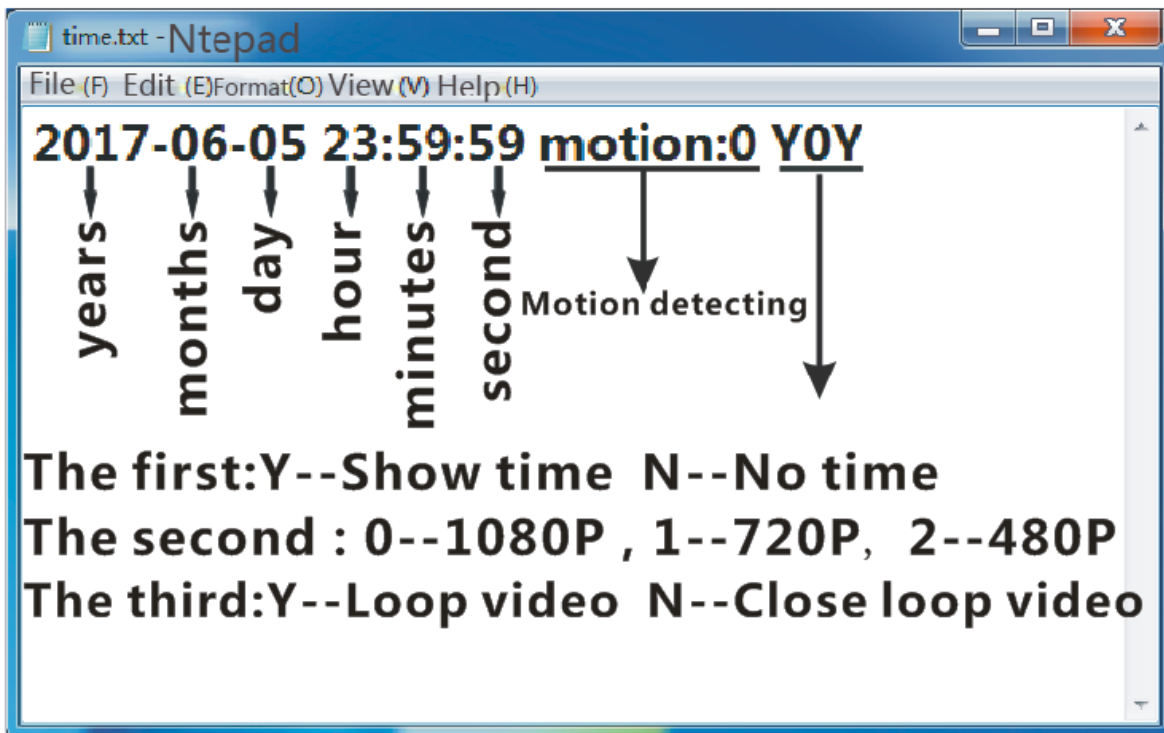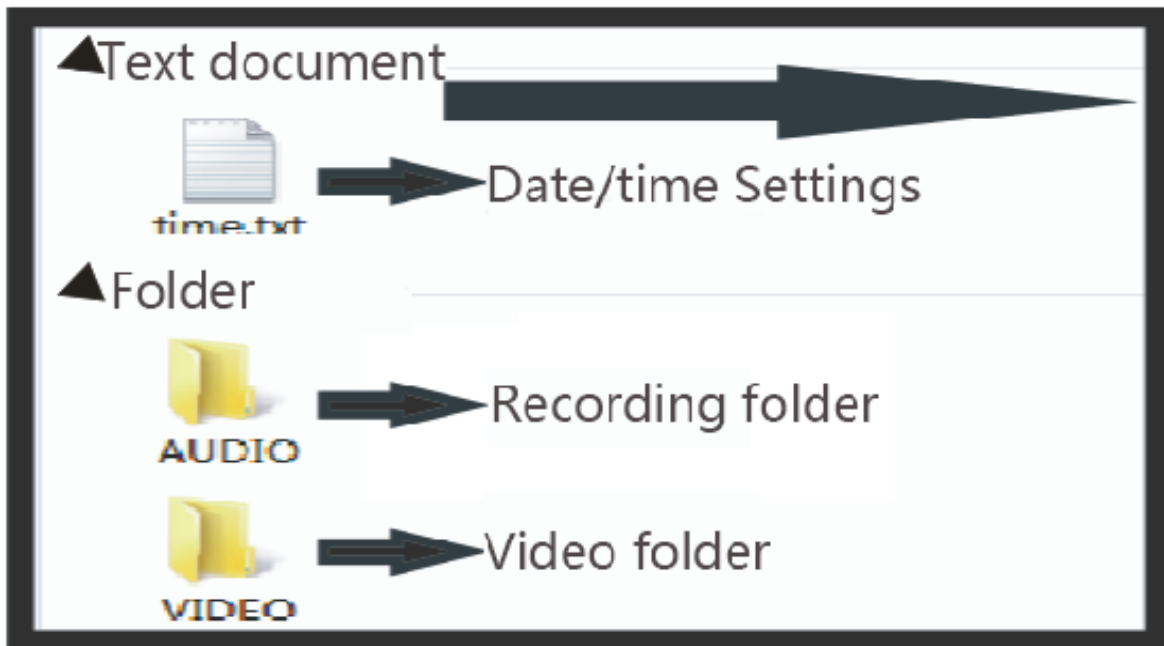

7. Resolution is small, with a memory card can be recorded for a long time.

8. A synchronous time watermark in a video can be chosen independently for display.

9. The video cycle function allows you to choose whether to open or not.

Digital voice recorder

NOTE: 1.Video motion detection: video process if not detected moving objects with light changes, the machine in order to save storage space in 1 minutes will stop recording (blue light), when the objects move or change the light will automatically continue recording (lights).

If the battery does not recharge the battery for long periods of time, the system will recover. Please reconnect the computer to synchronize the system time!

PC Camera (webcam)

 
Connect the machine to the computer and eject the "removable disk" logo, then light the power source up and down, then the "removable disk" automatically exits.

You can open the video dialogue software (such as: PC Camera., Tencent QQ) when you can.

Connect the computer

1.Plug one end of the USB line into the native USB port, and the other end into the USB port of the computer. After a few seconds, the computer will recognize and eject the removable disk logo.

Digital voice recorder

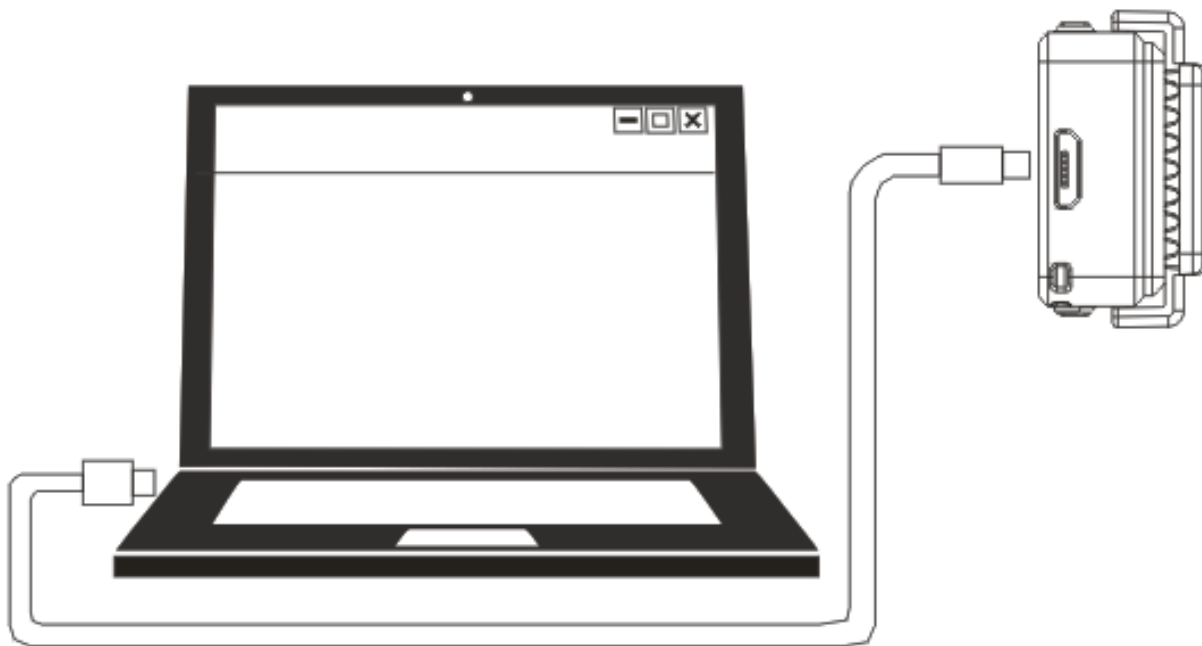

2.Connected to the computer, the red light, and can carry out data transmission.

Prompt:

Please use the normal method to remove the removable disk to prevent data loss.

If the computer does not recognize it, or if the Removable Disk logo is not displayed after a few seconds, please reset and unplug it again.

It is recommended to use the card reader to read the video content in the TF card. The transmission may not keep up because the amount of data is too large, which leads to playback is not smooth.

Charge

1)One end of the USB line is inserted into the USB port of the machine, and the other end is plugged into the USB port of the computer or charger. The charging time is usually about 4 hours.

Digital voice recorder

When the charging is on, the indicator light is red and the lamp is full.

2) When the machine is recording / recording the status of the charger, the machine can charge and record / record it at the same time.

Technical specifications

Dimension	3.86 X 1.02 X 0.47 Inches
USB Interface	USB 2.0 High Speed
TF Card	4GB – 32GB (up to 32GB)
Battery Capacity	3.7V/1100 mAH Lithium battery

Digital voice recorder

Audio Format	WAV	512Kbps
Video Format	AVI	1920*1080P 1280*720P 640*480P
Video coding	MJPEG	
Image Ratio	4:3	
8GB TF Card Storage Time	Audio	36 hours
	Video	70minutes(dynamic screen situation)
Operating Temperature Range	-5 – 40°C	
Frames number	30 frames	
Playback Software	Real Player、KM Player	
Resolution	1920*1080P 1280*720P 640*480P	
Feature	audio / video / driving records	
auxiliary functions	Magnets, auxiliary lamp, clip function	
Weight	2.75 OZ	

Notifications:

Please be sure to back up your data in the course of using. The Company assumes no responsibility for loss or damage to personal data caused by incorrect operation of the software or

Digital voice recorder

hardware, maintenance of the product, replacement of batteries or other unforeseen circumstances, nor for any other consequential damages arising therefrom. At the same time, we cannot control the user that may cause misunderstanding to this manual. Therefore, the Company will not be responsible for unexpected damage that may occur during the use of this manual and shall not be liable for third party claims arising from the use of the product. (The local system software will account for part of the capacity of space. There is a little difference between the nominal capacity and the actual capacity, which is a normal phenomenon.)

This product is only used for learning and training. Please abide by the relevant state laws strictly. Do not do any illegal acts. The Company does not make any commitment to the consequences of illegal and responsible.

Tips:

If the unit is not used for a long time, please charge/discharge it at least once every 3 months.