Assembly for "Universal " Bear Spray Cradle

One Second Counts Bear Safety It's all about Deployment

Your Bear Spray Cradle can only be deployed by pulling it out from the top of the cradle. It will not easily pull out from the bottom or sideways from the cradle. Practice the motion of deployment each time you re-locate your cradle to new gear.





























