


Record Pistol Operating Instructions

1. Pull hammer all the way back to the locked position
2. Insert .22 cal. Blank in hole under leashing edge of hammer. Be SURE the small spring clip is over the edge of the blank.
3. Slowly place the launcher on safety before loading the 15mm banger, cracker or whistler. Grasp the hammer with two fingers, release trigger and slowly lower the hammer to the catch slightly above the crimped blank. The hammer will need to be re-cocked as a final step before firing.
4. Insert banger, cracker or whistler into pistol. Ensure the pyrotechnic is not inserted backwards!
5. Point pistol in the safe direction you want to shoot and pull the trigger.

Ensure the pyrotechnic cartridge is not inserted backwards!

- **Banger: Black end into pistol**
- **Cracker: Hollow end into pistol**
- **Whistler: Hollow end into pistol**

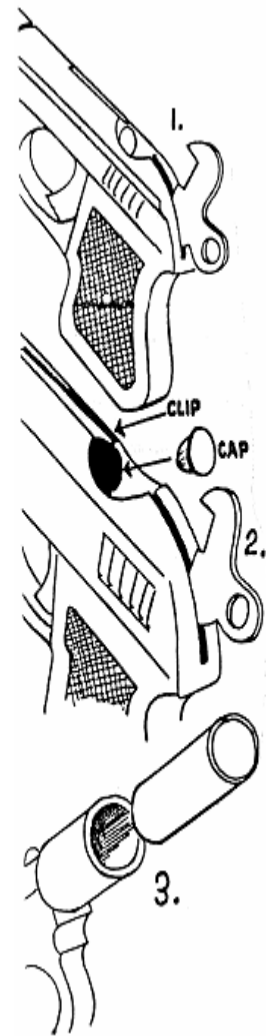

Cleaning the Record Pistol Launcher

The crimped blank chamber, barrel and muzzle adaptor must be kept free of deposits. Clean your pistol launcher after each use with a 6mm bore brush and water. Dry thoroughly. Proper maintenance will improve the performance and life of your launcher.

Safety

Ensure the pellet is inserted with the correct end into the pistol. Hold the pistol above your head when firing. Eye & ear protection must be worn when firing the pistol. Never point the pistol at another person. DO NOT use in enclosed spaces. Keep out of reach of children. This pistol is restricted to persons 18 years or older and is intended solely for the purpose of wildlife management & control. Never load or fire this launching device from a vehicle or vessel. Do not fire at humans, animals, buildings, dry fields, or in the direction of any flammable materials or liquids. Always keep this instructional sheet with the launcher. Never store launcher with crimped blanks or pyrotechnical cartridges inserted.

