
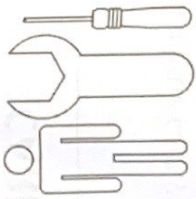


1



Step1:
Attach the table top(A) to the 4 legs(C) using 1bolt (H), and 1 washer and nut(D,E,F). Do not over tighten.

Step2:
Attach the legs(C) to the legs support(B) using 2 washers and nuts(D,E,F). Do not over tighten.

Step3:
Upon completion of full assembly and bolted up-all screws can be lightened down. Add the protect hats (G).

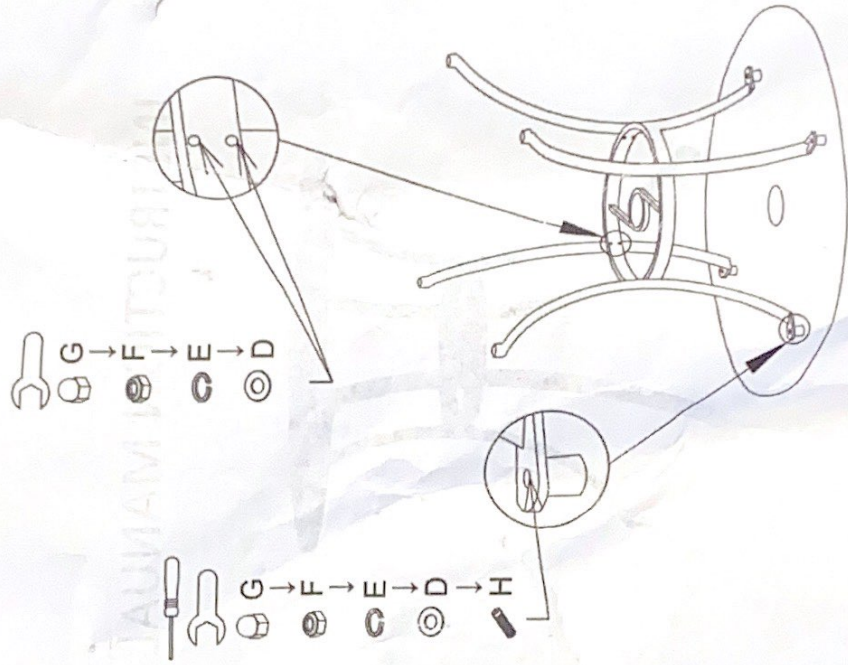


Part Number	Images and Sizes	Qty.
A		1
B		1
C		4
D	M8*ø18	12
E	M8*ø12	12
F	M8	12
G	M8	12
H	M8*34	4

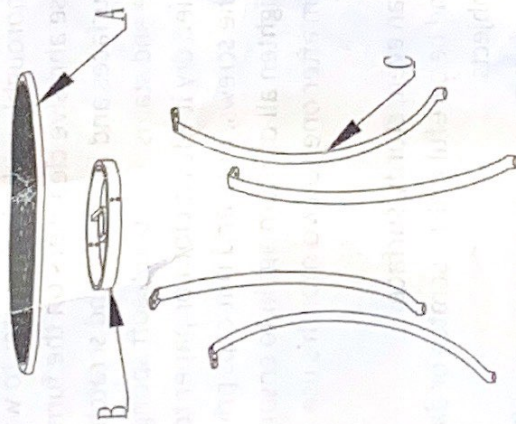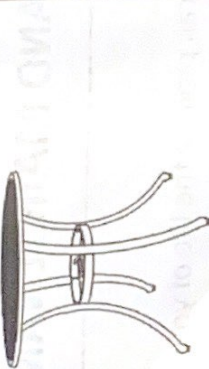

KINGER

HOME

INSTRUCTION MANUAL

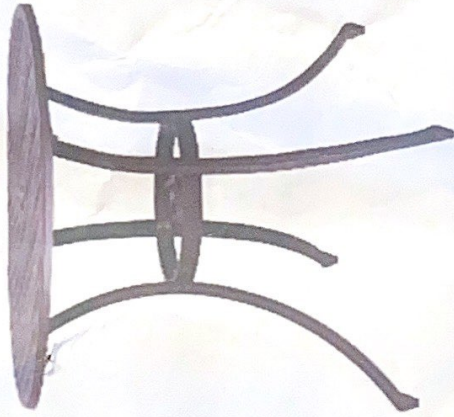

CARE AND MAINTENANCE

With a little care you can prolong the life of your furniture. Follow the instruction for the materials of your special product to make sure that it stays in the best shape for as long as possible. The information below is only intended as a general guideline. For more information, please enquire where you bought the furniture.

- Only need to rinse it thoroughly with clean water to wash away dirt and grime. Never use abrasive cleansers on the furniture, since it can attack the surfaces and leave behind scratch marks.
- For the stubborn grime and stains, just use a soft sponge and mild soapy water and then dry it with a cloth or paper towel.
- Check the stability of the screws, nuts and nut caps prior to each use. If necessary, tighten all of them again to ensure it is secure. Tighten up them after one to two month's use whenever required.
- Place the furniture on an even, sturdy surface.
- Avoid improper use, and be careful not to scratch or damage the surface with sharp objects.
- When you move your furniture, make sure you lift it rather than pulling or pushing it to avoid damaging the floor, legs and mounting.