



Instruction Manual

Fixed Lamp

Important Safety Instructions

- The lamp shall not be exposed to humidity. Use it only in dry rooms.
- Pull the main plug out of the wall outlet before you clean it with a moistened cloth or before changing the light bulb.
- Connect the lamp only to a correctly installed wall outlet, which main voltage matches with the technical data of the lamp.
- Pull the main plug out of the wall outlet before you open the casing for replacing the light bulb.
- Do not insert any objects in the openings or ventilation slots; you could come into contact with live parts.
- Do not put the lamp in operation, if it or the mains cable shows visible damages.
- Do not conduct changes on the product by yourself. All repairs and maintenance, as replacing the mains cable, have to be done by a qualified repair shop or by the Service Center in order to avoid a hazard.
- Danger of burns: Keep a minimum distance of 30 cm to all flammable materials and do not cover the lamp.
- For type Y attachments
If the external flexible cable or cord of this luminaire is damaged, it shall be exclusively replaced by the manufacturer or his service agent or a similar qualified person in order to avoid a hazard.

Changing the light bulb

Caution: Pull the main plug out of the wall outlet and let the appliance completely cool down before you open the casing for changing the light bulb.

Technical Data

Model: Archer Table & Floor Lamp

Mains voltage: 220-240V~50Hz

Light bulb: E27 Max 40W

Class II

Declaration of Conformity / Disposal



The appliance is in accordance with the requirements, which are mandatory for the CE certification.



Old household electrical appliances must not be disposed of in the normal unsorted municipal waste stream. Please return any electrical appliances that you will no longer use to the collection points provided for their disposal.