

BCH 50 T Brushcutter



Documents

Engine

Transmission

Starter assy and clutch

Tank and air filter

Carburetor

Head

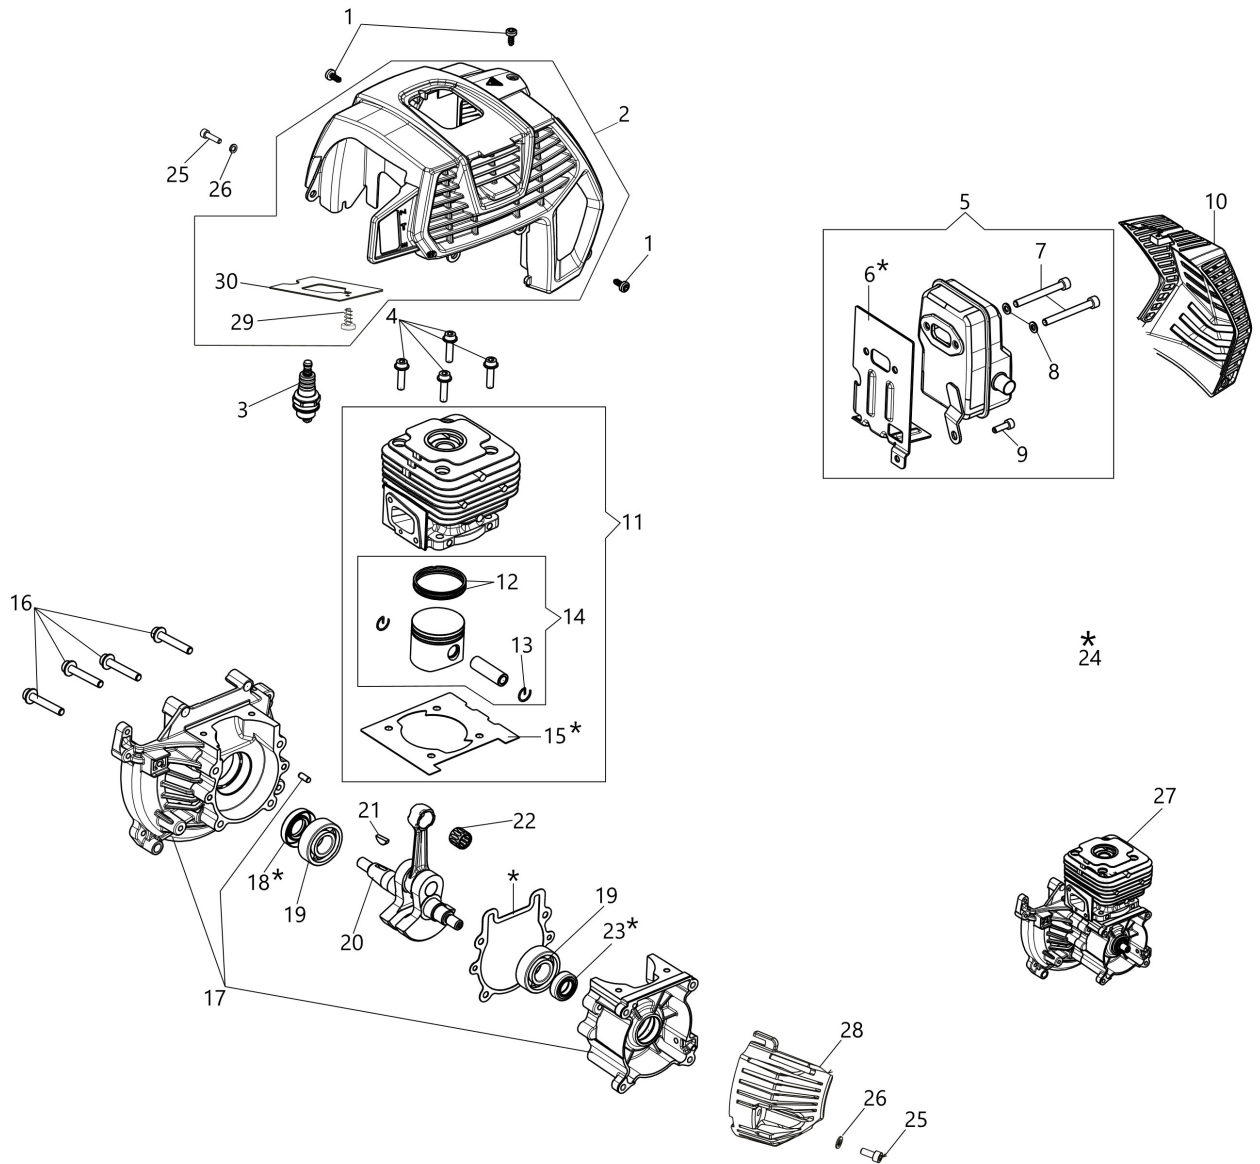


Illustration Engine

Ref.Nu	Qty	Part number	Description	Validity from	Validity till	Notes	Bulletin
1	3	3960121R	Screw				
2	1	61510106	Engine cover				
3	1	3055104R	Spark plug				
4	4	3860095R	Screw				
5	1	61450206R	Muffler assy				
6	1	61450242AR	Gasket				
7	2	3801065R	Screw				
8	2	3916006R	Washer				
9	1	3801011R	Screw				
10	1	61450367R	Muffler cover				
11	1	61510103	Complete cylinder				
12	2	50080013R	Piston ring				
13	2	61450013R	Ring				
14	1	61510009R	Piston assy				
15	1	61450127AR	Gasket				
16	4	3860096R	Screw				
17	1	61452001BR	Crankcase assy				
18	1	3050056R	Oil seal				
19	2	3035065R	Bearing				
20	1	61450001BR	Crankshaft				
21	1	3028020R	Key				
22	1	50110044R	Bearing				
23	1	3050057R	Oil seal				
24	1	61450443	Gasket set				
26	2	3801009R	Screw				
25	2	3916005R	Washer				
27	1	61510104R	Short block				
28	1	61510080R	Carter				
29	1	3960167R	Screw				
30	1	61510055AR	Deflector				

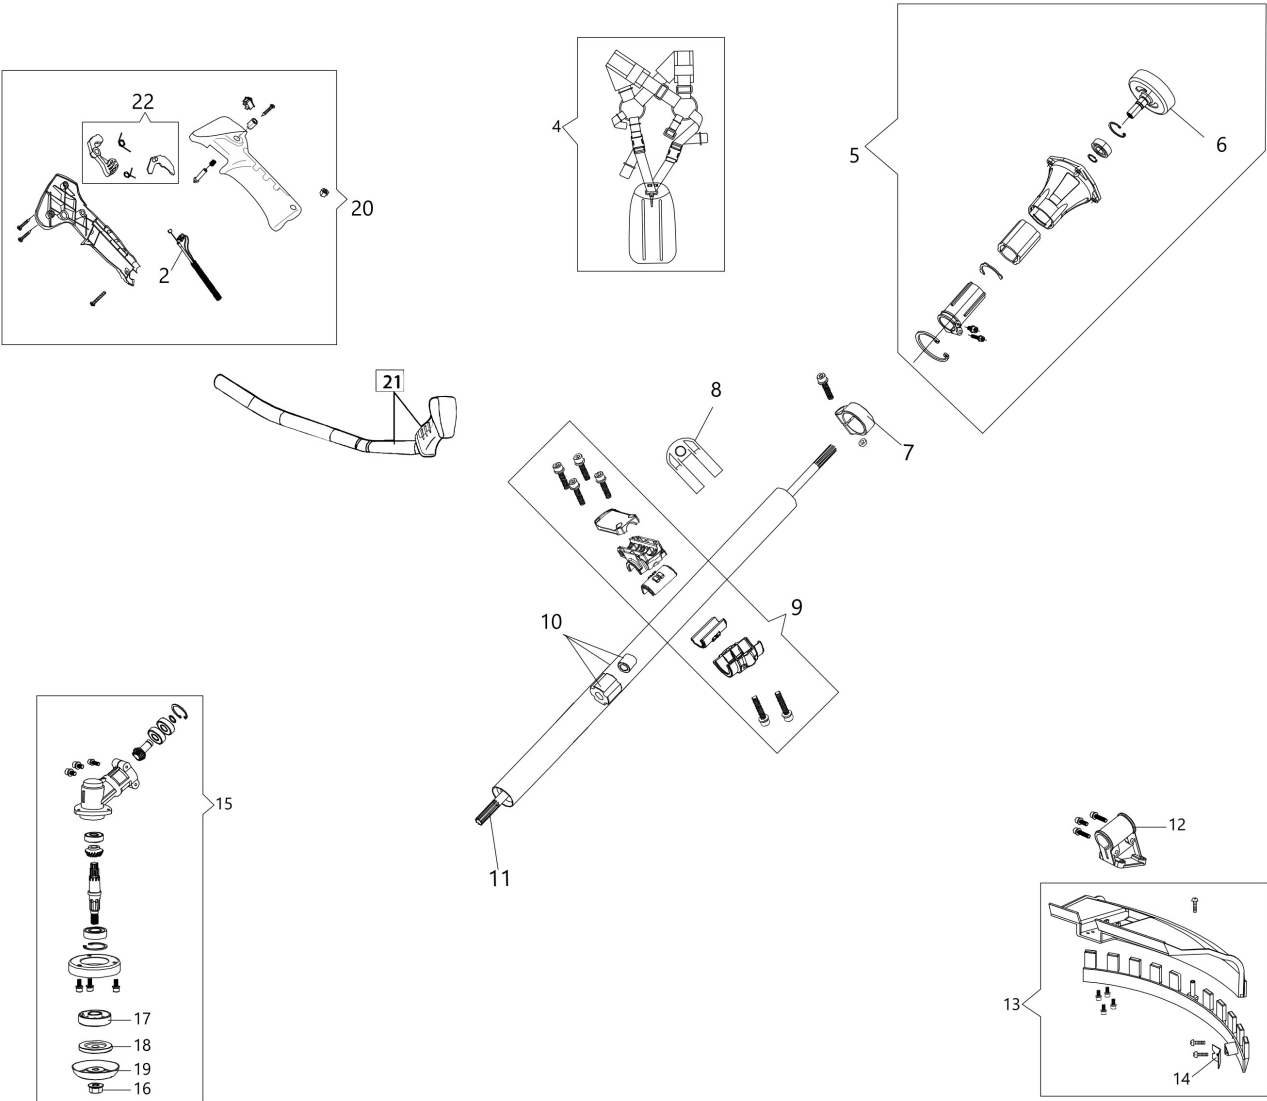


Illustration Transmission

Ref.Nu	Qty	Part number	Description	Validity from	Validity till	Notes	Bulletin
2	1	BF000145R	Throttle cable				
4	1	63070003AR	Harness				
5	1	BF000124R	Starter case				
6	1	BF000011R	Clutch drum				
7	1	BF000117R	Band				
8	1	BF000118R	Support				
9	1	BF000125R	Complete clamp				
10	1	BF000130R	Tube Ø32				
11	1	BF000126R	Drive shaft				
12	1	BF000127R	Bracket				
13	1	BF000029R	Guard kit				
14	1	BF000009R	Blade				
15	1	BF000128R	Bevel gear				
16	1	BF000007R	Nut				
17	1	BF000037R	Hub				
18	1	BF000038R	Flange				
19	1	BF000129R	Guard				
20	1	BF000059R	Complete handle				
21	1	BF000058R	Handle and knob				
22	1	BF000149R	Throttle lever assy				

Illustration Starter Assy and Clutch

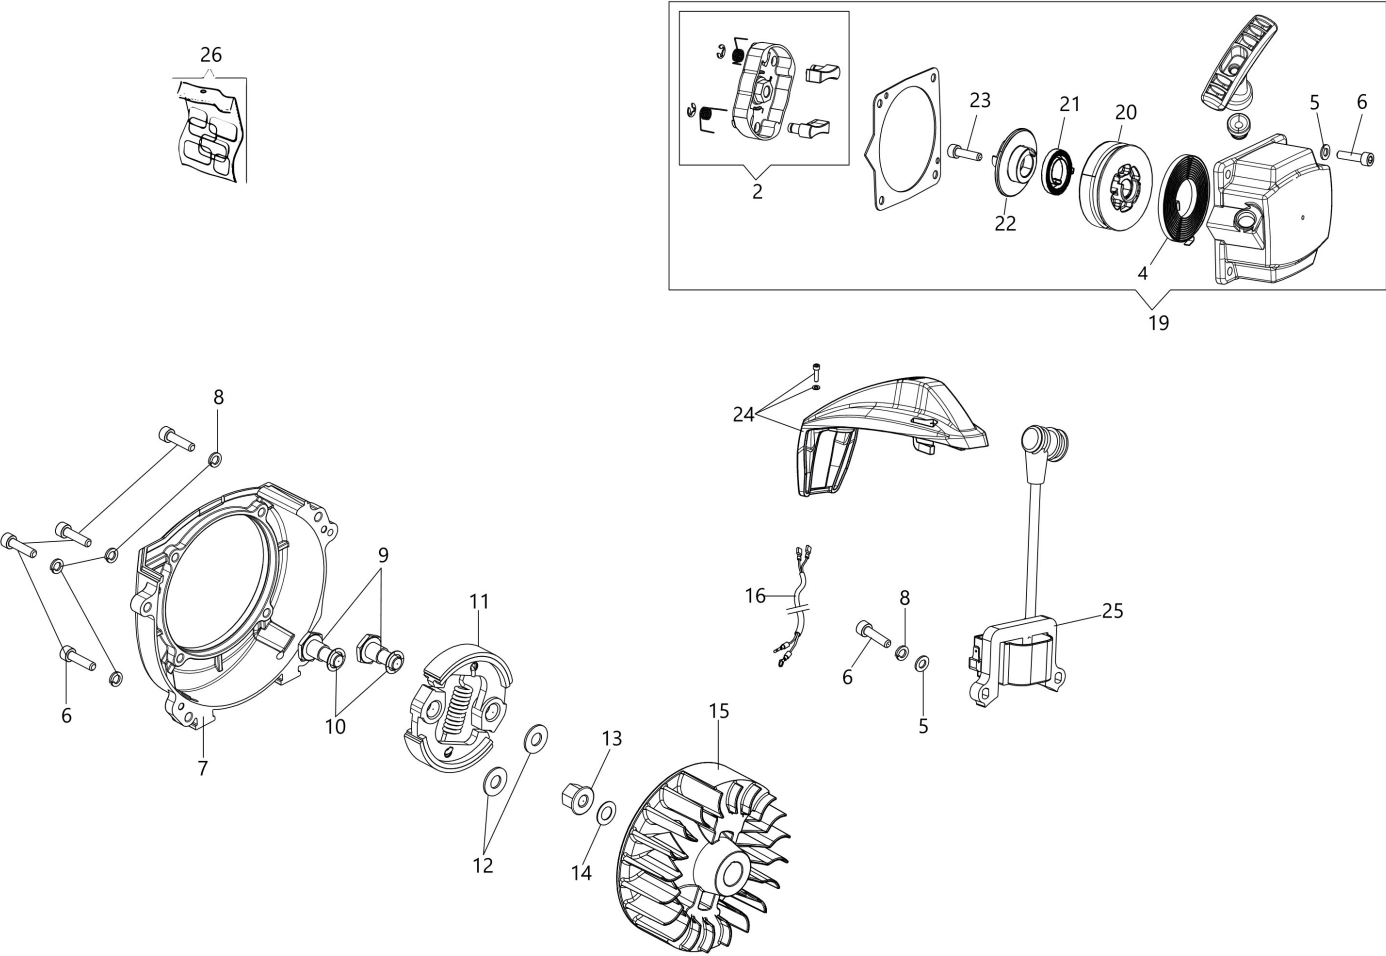


Illustration Starter assy and clutch

Ref.Nu	Qty	Part number	Description	Validity from	Validity till	Notes	Bulletin
2	1	61450193AR	Clutch driver				
4	1	61450044AR	Starter spring				
5	6	3916005R	Washer				
6	10	3801013R	Screw				
7	1	61452083BR	Flange				
8	6	3819006R	Washer				
9	2	61450070R	Pin				
10	2	61450072R	Washer				
11	1	61450277R	Clutch				
12	2	61450071R	Washer				
13	1	50010148R	Nut				
14	1	3833080R	Washer				
15	1	61450310R	Flywheel				
16	1	BF000030R	Cable				
19	1	61460066	Easy-on starter assembly				
20	1	61450024R	Starter pulley				
21	1	61450496R	Spring				
22	1	61450025R	Sprocket				
23	1	3801009R	Screw				
24	1	61450085	Set cover				
25	1	2501030AR	Ignition coil				
26	1	61510107	Labels kit				

Illustration Tank and air filter

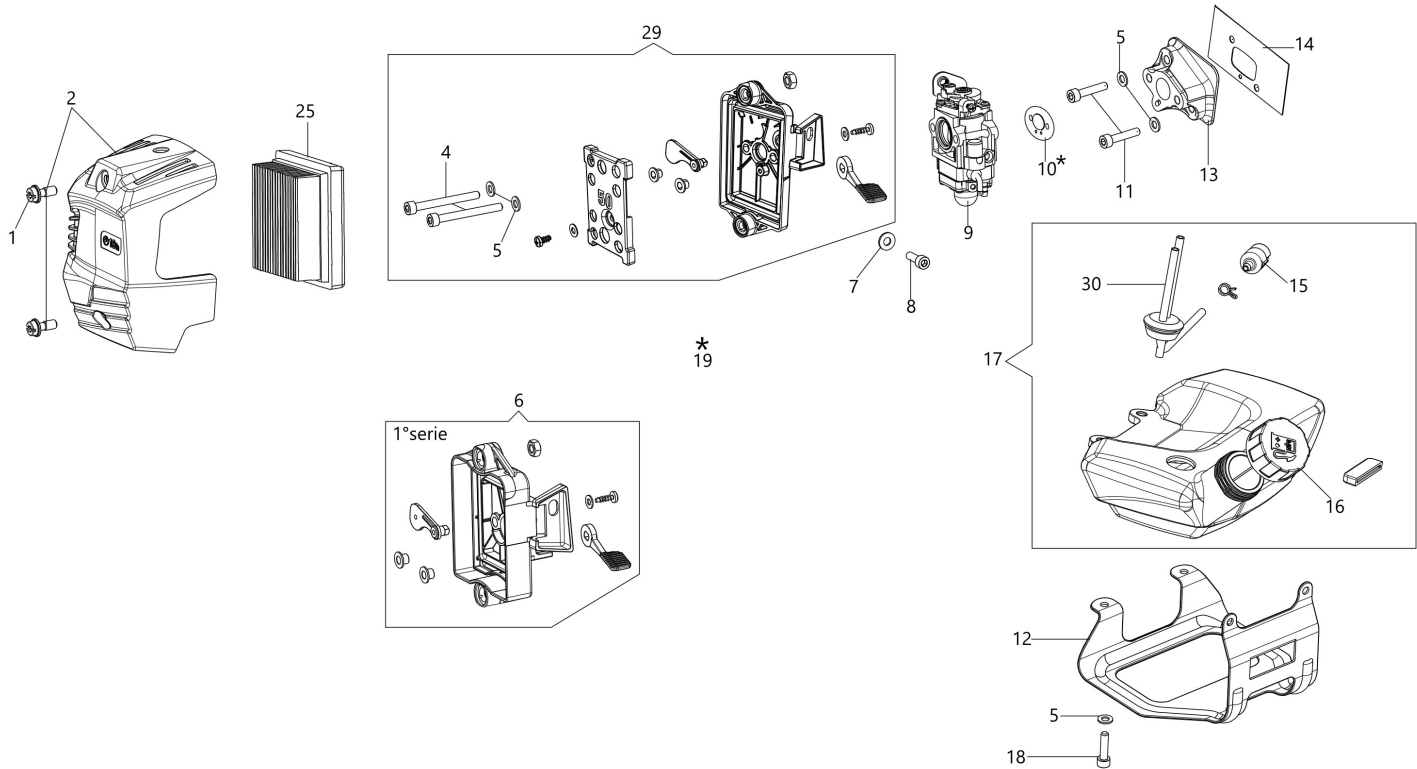


Illustration Tank and air filter

Ref.Nu	Qty	Part number	Description	Validity from	Validity till	Notes	Bulletin
1	2	61330040AR	Screw				
2	1	61510112	Air filter cover				
4	2	3801012R	Screw				
5	4	3916005R	Washer				
6	1	61510109	Air filter support				
7	1	3918010R	Washer				
8	1	3801011R	Screw				
9	1	61450508R	Carburetor				
10	1	61450054AR	Gasket				
11	2	3801015R	Screw				
12	1	61510079R	Tank shield				
13	1	61450053AR	Insulator				
14	1	61450052AR	Gasket				
15	1	094600450R	Fuel filter				
16	1	BF000024R	Tank cap				
17	1	61510110R	Tank assy				
18	2	3801013R	Screw				
19	1	61450443	Gasket set				
25	1	61120018R	Air filter				
29	1	61510130R	Air filter support				
30	1	BF000031R	Kit tubes				

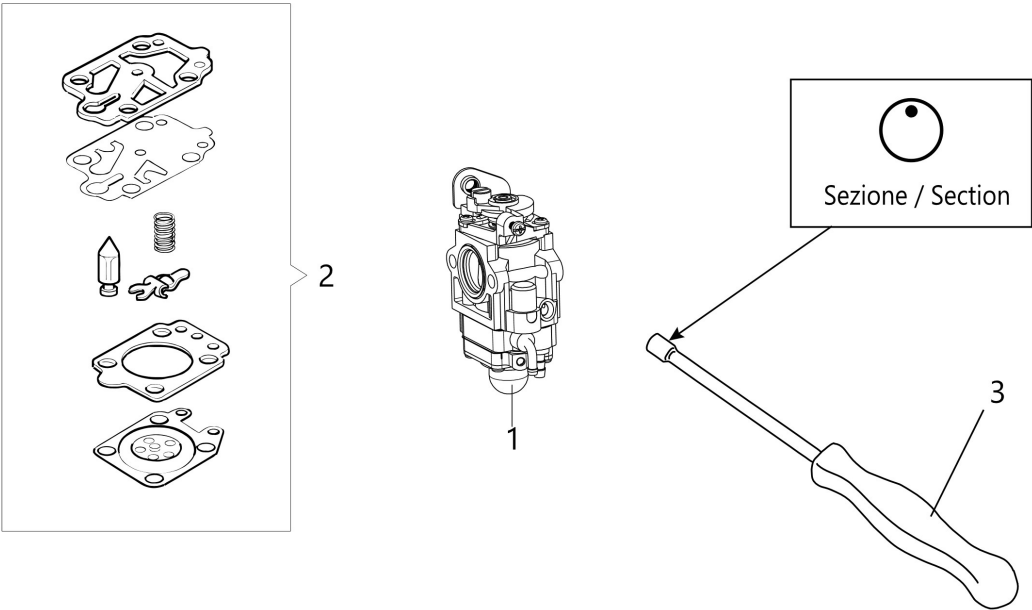


Illustration Carburetor

Ref.Nu	Qty	Part number	Description	Validity from	Validity till	Notes	Bulletin
1	1	61450508R	Carburetor				
2	1	2318025R	Repair kit				
3	1	3055155R	Special screwdriver				

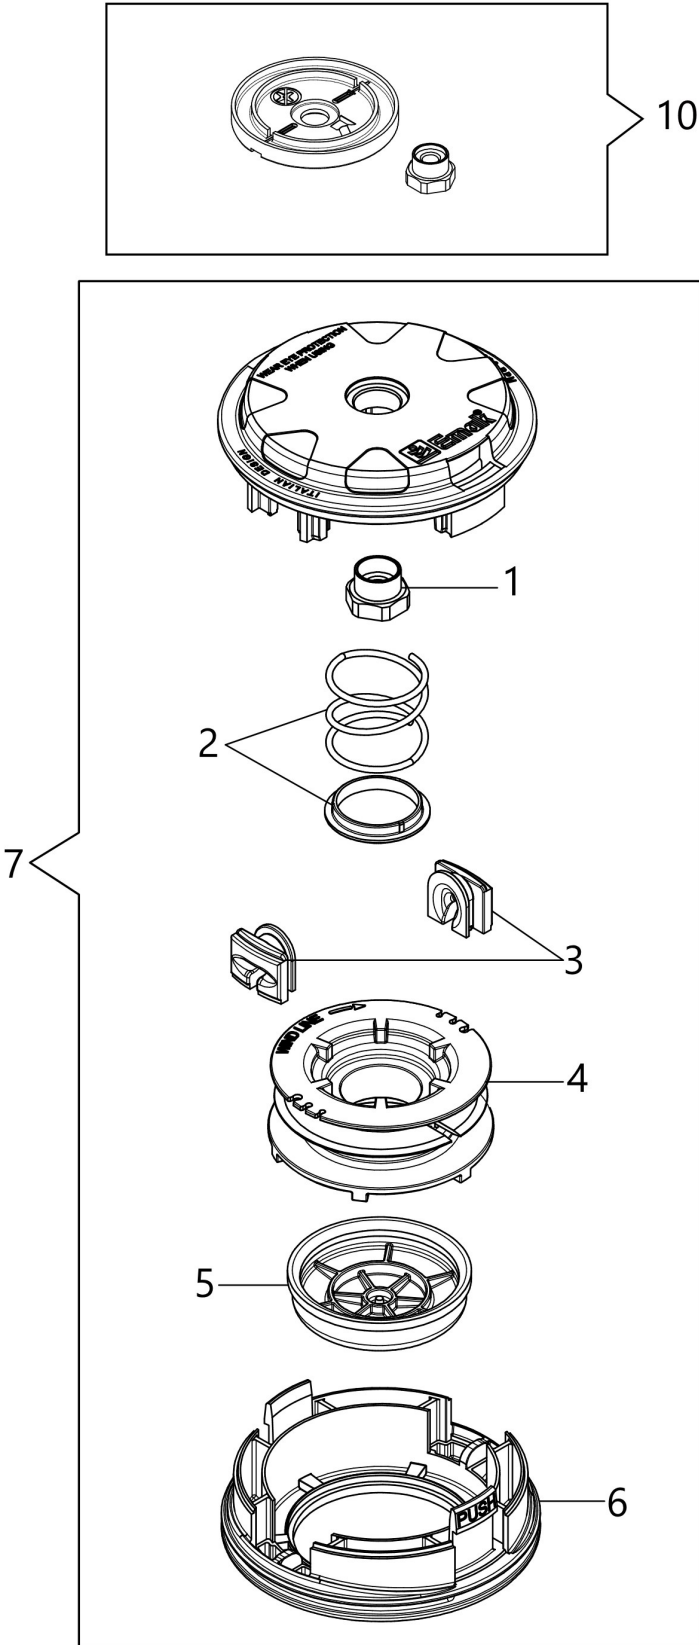


Illustration Head

Ref.Nu	Qty	Part number	Description	Validity from	Validity till	Notes	Bulletin
1	1	63120040R	Nut				
2	1	63120031R	Kit spring				
3	2	63120001R	Bushing				
4	1	63120010R	Nylon spool				
5	1	63120011R	Knob kit				
6	1	63120012R	Lower cover				
7	1	61459100	Complete nylon head Ø 2,4				
7	1	61459102	Complete nylon head Ø 3				
10	1	61460055	Guard kit				