


HTF-04 Tap Water Filter Manual

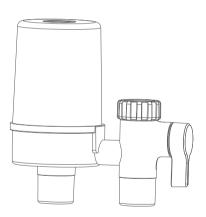



Thank you for choosing the HTF-04 Tap Filter. In order to use and maintain this product correctly, please read the manual carefully before use.

www.redrhino.co.za



Technical Parameter


Model No · TF-04

Product Dimension: 133×68×131mm

Feed water: Municipal tap water Operation pressure: 0.1-0.4MPa Operation temperature: 5-45°C

Flow rate of pure water: 1.5-2.5L/min

Installation: Install it to faucet

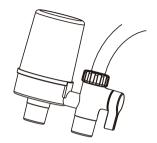

Kindly Reminder:

please read the manual carefully before installation.

If the filter cannot be connected with faucet directly. please use an adapter between them.

Type A M20 Faucet with male thread







- 1 Unscrew the faucet aerators
- (2) Connect Hexagon connection to faucet
- 3 Rotate the connector to Hexagon connection

Type B M20/M23 Faucet with female thread







 
- 1 Unscrew the faucet aerators
- 2 Connect Hexagon connection to faucet
- 3 Rotate the connector to Hexagon connection

Universal Rubber Connector









Diameter15-19mm

Diameter19-24mm

Other Type Diameter 15-19mm

1 Unscrew the faucet aerators 2 Connect Universal Rubber Connector to faucet 3 Use a screwdriver to tighten metal clamp on the connector

Other Type Diameter 19-24mm

- 1 Unscrew the faucet aerators 2 Take out the rubber inside and then connect it to faucet
- 3 Use a screwdriver to tighten metal clamp on the connector