



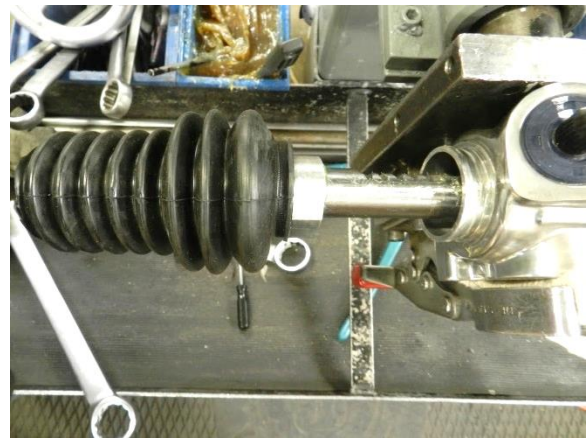


## Cross-Steer Replacement Outer Boot Instructions

8027700


1. You can replace the bellow with the rack on or off of the car. First cut the zip tie off.

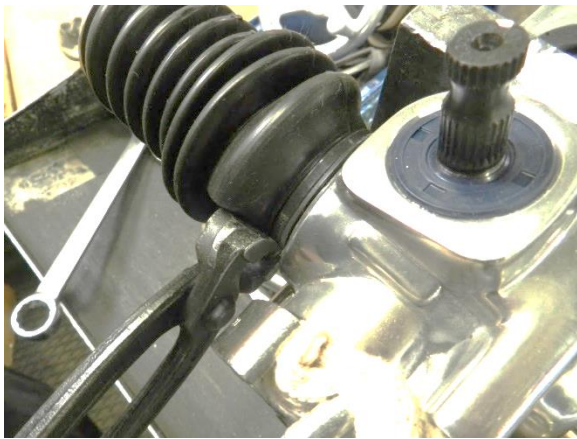

2. Next pull the O-ring off.

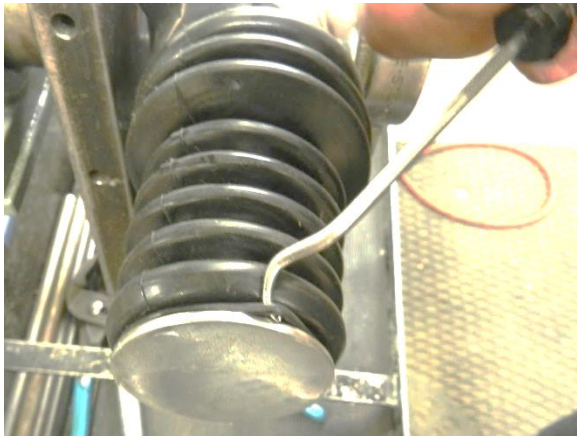

4. Clean out any debris inside the rack, drain water out if any, and re-grease the teeth if needed. Turn rack all the way over to expose as many teeth as possible when doing this.

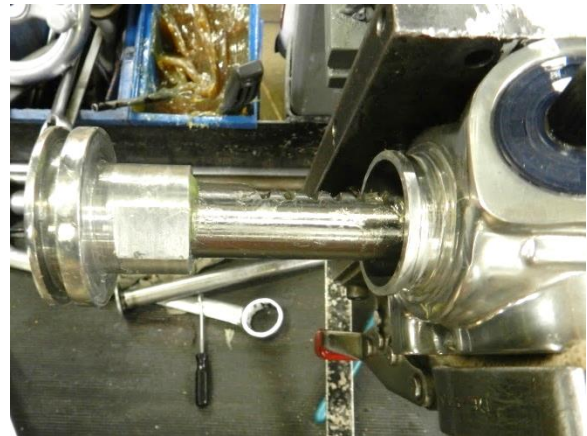


3. Then pull the boot off of the rack.

5. Center the rack back if it is not to make the install easier. Lubricate the inside lip of the new boot to help slide it onto the rack.




6. Pop the inside lip onto the rack housing where it belongs.

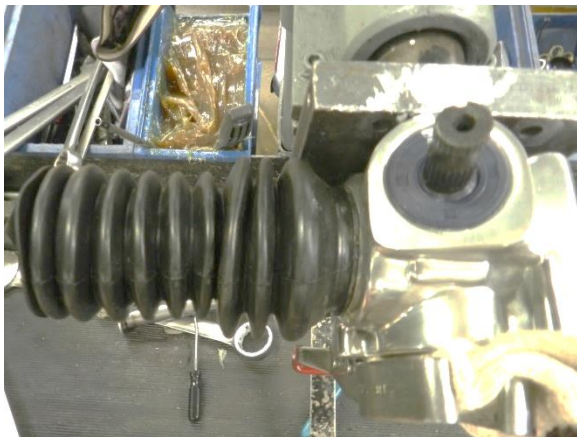

7. Push the boot all the way in so that the outer lip of the boot is covering the end cap of the rack. Then slip the new O-ring into the 2<sup>nd</sup> valley in on the boot so that it sits into the groove on the end cap. Push the O-ring down all the way around so that it is seated tightly into the groove.



8. Use the new zip-tie around the inside boot lip. Tighten it down and cut.

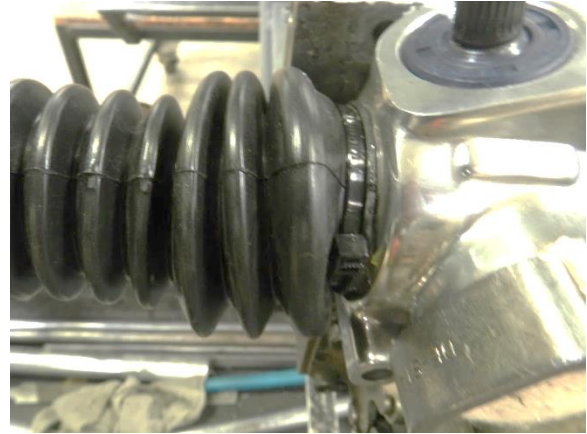

9. With a sharp blade carefully cut around the outer edge of the O-ring against the end cap to give a nice clean look.



If you have any questions or problems regarding this product, please contact:

**1555 Enterprise Parkway  
Twinsburg OH 44087  
800-338-9080  
[WWW.UNISTEER.COM](http://WWW.UNISTEER.COM)**

Copyright © by UniSteer Performance Products. All rights reserved.

No part of these materials can be reproduced or utilized in any form or by any means, electronic or mechanical, including photocopying, recording or by any information storage and retrieval system, without permission in writing from UniSteer Performance Products.