


**AIRTX POWER SUPPLIES with
LIGHTED POWER INDICATOR
(UL and CE Listed)**



6320 Wiehe Road, Cincinnati, Ohio 45237
Phone: 1-513-631-0660 / www.airtx.com

MODEL 50000	(115V)	7500V Outlets (4)	MODEL 50002	(115V)	6000V Outlets (2)
MODEL 50000-1	(230V)	7500V Outlets (4)	MODEL 50002-1	(230V)	6000V Outlets (2)

While Power Supply is unplugged, attach the ground lead ring terminal to ground terminal on Power Supply. Remove one of the two red caps on the end of the Power Supply. Insert power lead into connector and screw in locking nut.

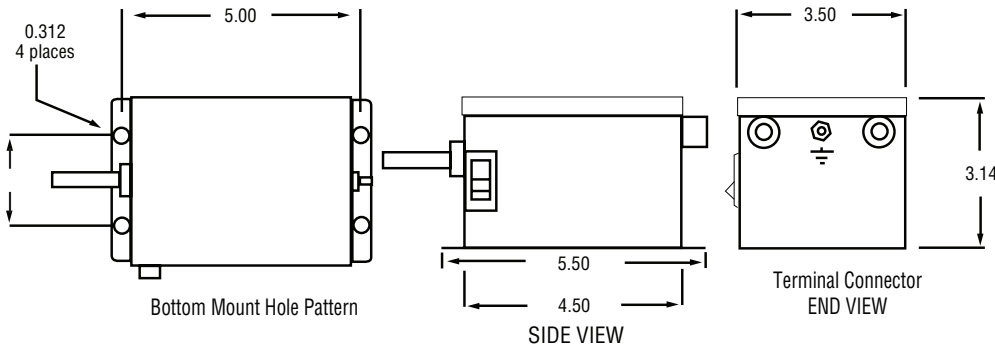

Drawing Represents 6000V Power Supply
(All Power Supplies have lighted Power
Switch & 50/60Hz)

WARNING
DO NOT REMOVE LID WITHOUT FIRST UNPLUGGING THE POWER CABLE FROM THE ELECTRICAL WALL SOCKET!

REMEMBER TO TURN UNIT OFF WHEN NOT IN USE!

02/2018


**AIRTX POWER SUPPLIES with
LIGHTED POWER INDICATOR
(UL and CE Listed)**



6320 Wiehe Road, Cincinnati, Ohio 45237
Phone: 1-513-631-0660 / www.airtx.com

MODEL 50000	(115V)	7500V Outlets (4)	MODEL 50002	(115V)	6000V Outlets (2)
MODEL 50000-1	(230V)	7500V Outlets (4)	MODEL 50002-1	(230V)	6000V Outlets (2)

While Power Supply is unplugged, attach the ground lead ring terminal to ground terminal on Power Supply. Remove one of the two red caps on the end of the Power Supply. Insert power lead into connector and screw in locking nut.

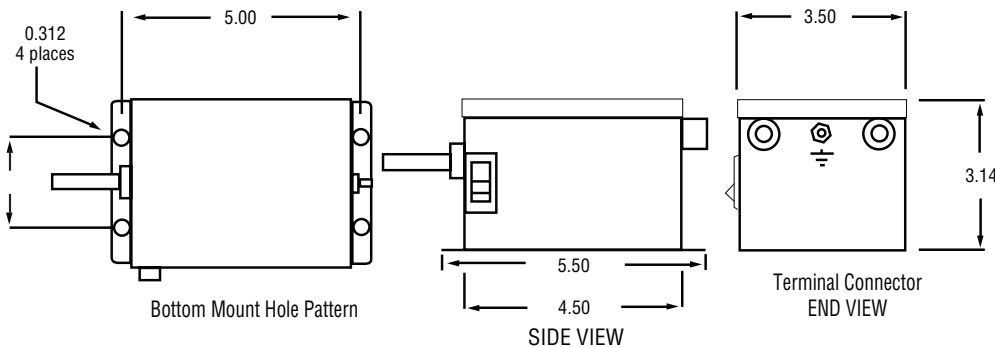

Drawing Represents 6000V Power Supply
(All Power Supplies have lighted Power
Switch & 50/60Hz)

WARNING
DO NOT REMOVE LID WITHOUT FIRST UNPLUGGING THE POWER CABLE FROM THE ELECTRICAL WALL SOCKET!

REMEMBER TO TURN UNIT OFF WHEN NOT IN USE!

02/2018