
cleanology touchless DISPENSER HAND SANITIZER GEL



User Guide

IN THE BOX

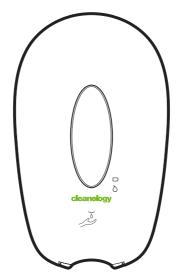

Touchless dispenser



User guide



3M double-sided tape




2x scrow




2x screws

2x anchors

PRODUCT DETAILS

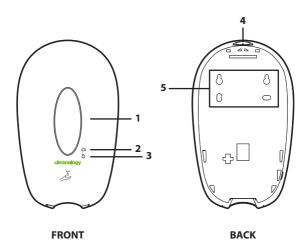

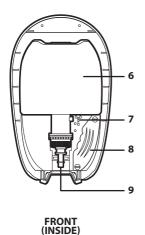

- 1. Cover
- 2. Low battery indicator
- 3. Refill indicator
- 4. Key slot (to open the cover)
- 5. Wall mounting holes
- 6. Container
- 7. Dispenser switch
- 8. Battery compartment
- 9. Nozzle

MOUNTING THE DISPENSER

Mount the dispenser with tape: Use the included tape to mount the dispenser to the wall's surface.

- 1. Wipe the back of the dispenser thoroughly with a clean, dry cloth.
- 2. Peel one side of the tape and align it to the top section of the dispenser's back as shown.
- 3. Thoroughly clean the area where you plan to mount the dispenser.
- 4. Using a pencil or label, mark the area where the bottom of the dispenser will be located.
- 5. Align the bottom edge of the dispenser with the marked area and press the dispenser firmly onto the mounting surface.


Mount the dispenser with screws: Use the included screws and anchors shown below to mount the dispenser to the wall.



NOTE: The bottom of the dispenser must be at least 10" above the surface below it.





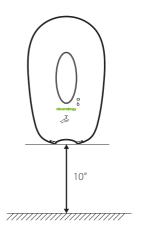


INSTALLING BATTERIES

1. Pop open the dispenser's cover using the key as shown below.




2. Unscrew the battery compartment cover and insert four AA alkaline batteries (not included).

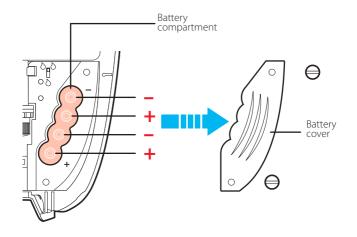

NOTE: Battery life is approximately 20K dispenses.

LED INDICATORS


The dispenser includes LED indicators to let you know when the batteries need to be replaced or when it's time to refill the container.

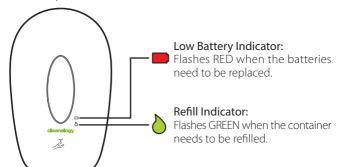


Malfunction Indicator:

When the RED and GREEN indicators are both lit (not flashing), it means that the dispenser is experiencing a malfunction. When a malfunction is detected, try following these tips below to solve the issue:

  Thoroughly clean out the container and nozzle as the gel may have solidified over time.



2) Make sure the pump head is clean of gel residue and gently move it up and down to make sure it's free of any foreign material.

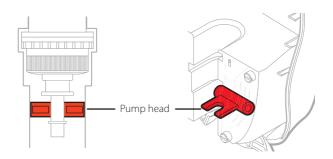

FILLING THE CONTAINER

1. Remove the container.




Push down on the dispenser and gently wiggle the container left and right.






Do not try to remove the container from the nozzle as it is delicate and may be damaged this way.

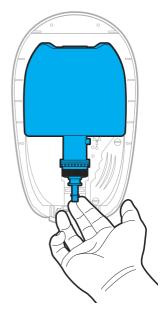

2. Remove the container cap and fill the container with hand sanitizer gel or liquid soap. Seal the container with the cap once you have refilled it.

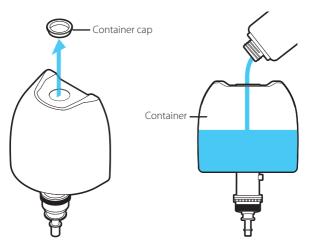


3. Place the container firmly back into the dispenser and close the cover.



NOTE: When refilling the container, avoid getting liquid into the dispenser's circuitry.

USING THE DISPENSER

1. Place your hand about 2" under the sensor as shown below.

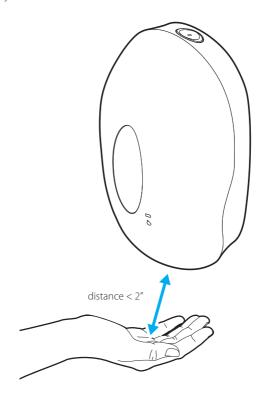


2. Wait until all the gel has been dispensed before moving your hand.



ADJUSTING THE DISPENSER SETTINGS

You can adjust the dispenser settings using the Dispenser Switch.

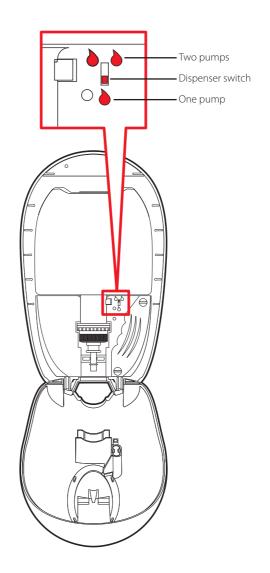


REPLACING THE NOZZLE

If the nozzle breaks or is not performing properly, just unscrew the broken nozzle and replace it with a new one.

Replacement nozzles available at:

www.cleanologyproducts.com

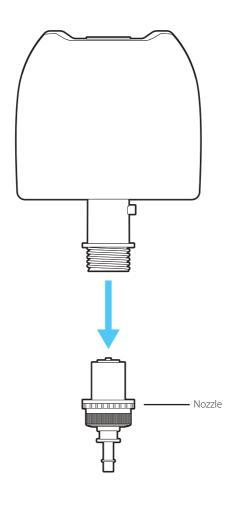

USING DIFFERENT HAND SANITIZERS AND SOAPS

The dispenser supports most types of hand sanitizer gels and liquid soaps. Try to avoid using thick soaps as they may clog the pump.



You can purchase Cleanology hand sanitizer refill bags at:

www.cleanologyproducts.com



WARRANTY INFORMATION

Warranty:

This product is covered by a 1-Year limited warranty. For assistance, please visit www.southerntelecom.com and select "support" and then select "Cleanology".

cleanology

www.cleanologyproducts.com Distributed by: Southern Telecom, Inc. Brooklyn, NY 11220 Cleanology is a trademark of Southern Telecom, Inc. Made in China