
cleanology touchless DISPENSER HAND SANITIZER GEL



User Guide


PRODUCT DETAILS:

- 1. Power button/Indicator light
- 2. Spout
- 3. Sensor
- 4. Pump
- 5. Container
- 6. Battery compartment

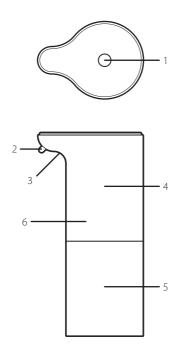


INSTALLING BATTERIES:

 Disconnect the pump from the container, as shown below.

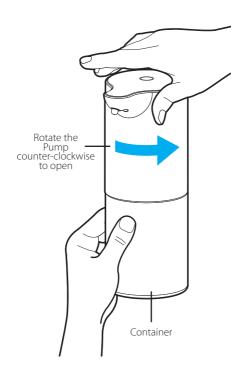


2. Open the battery cover, and insert four AA alkaline batteries (not included).

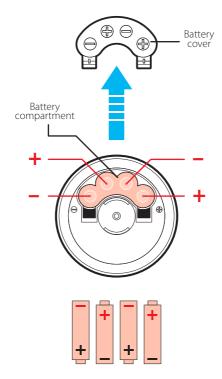

Make sure to align the batteries as shown above

POWER ON:

 Press the Power button, the light will flash white, indicating the dispenser is powered on.



POWER OFF:

Press the power button, the light will flash blue, indicating the dispenser is powered off.



Note: If the indicator light works and the pump fails to operate, please check the polarity of the batteries.



When the indicator light flashes blue, that means the batteries require replacement. Please make sure to replace all four batteries and do not mix old and new batteries as that will affect the pumps performance.

USING DIFFERENT HAND SANITIZERS AND SOAPS:


The dispenser supports most types of hand sanitizers and soaps. Try to avoid using thick dish soaps as they may clog the pump.




Dish Soap

FILLING THE CONTAINER:

 Pour the hand sanitizer or liquid soap into the container.

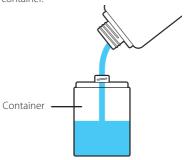


Please make sure to avoid getting liquid into the pump's circuitry.

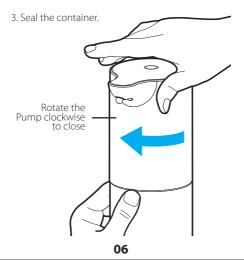

USING THE DISPENSER:

1. Place your hand about 2" under the sensor as shown below.

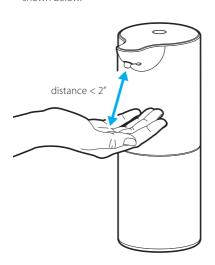

2. Wait until all the gel has been dispensed before moving your hand.



You can purchase Cleanology hand sanitizer refill bags at www.cleanologyproducts.com



This product is covered by a 1-Year limited warranty. For assistance, please visit **www.southerntelecom.com** and select "support" and then select "Cleanology".

cleanology

www.cleanologyproducts.com
Distributed by: Southern Telecom, Inc. Brooklyn, NY 11220
Cleanology is a trademark of Southern Telecom, Inc.
Made in China

cleanology