

12V TRAVEL CAMPING OVEN USER MANUAL

SH-OVEN-0147

V1.0

Your oven has been carefully designed to operate safely during normal cooking procedures.
Please keep the manual for future reference.



ABOUT US

Founded in 2018, the San Hima brand stands for passion and enthusiasm for exploring the spectacular nature of the great outdoors. Since its inception, the trusted solutions and proven designs that San Hima offers to the market have made adventure and travelling flexible and enjoyable!

Based in Australia, San Hima has under its umbrella a wide selection of outdoor solutions, including cargo systems, vehicle protection accessories and tow & trailer parts, that are designed to help you carry your gear wherever your passion takes you and boost your performance when conquering the peaks!

At San Hima, we have wild souls and we are committed to designing products that are tough enough to take on any adventures and at the same time, making them safe and easy to use. These values in our conviction are what drive us to make innovations. Since pursuit your passion shouldn't be complicated.

Live the Peak, Conquer the Everest, San Hima is your brand of choice!

SPECIFICATIONS

Current: 10A

Wattage: 120W

Maximum Temperature: 180°C

Oven Timer: 40-120 Minutes

Fuse Rating: 15A

Insulation: Fibreglass


Material: Steel housing with electrostatic coating

Preheat Time Recommendations: 1 Hour

BEFORE YOU START

- Read this manual and take special note of the 'Important Safety Instructions' section.
- Remove all the packaging and check that you have all the accessories listed below.
- Make sure you follow the instructions under 'Operating Instructions' before using your San Hima oven for cooking or baking.

OVERVIEW

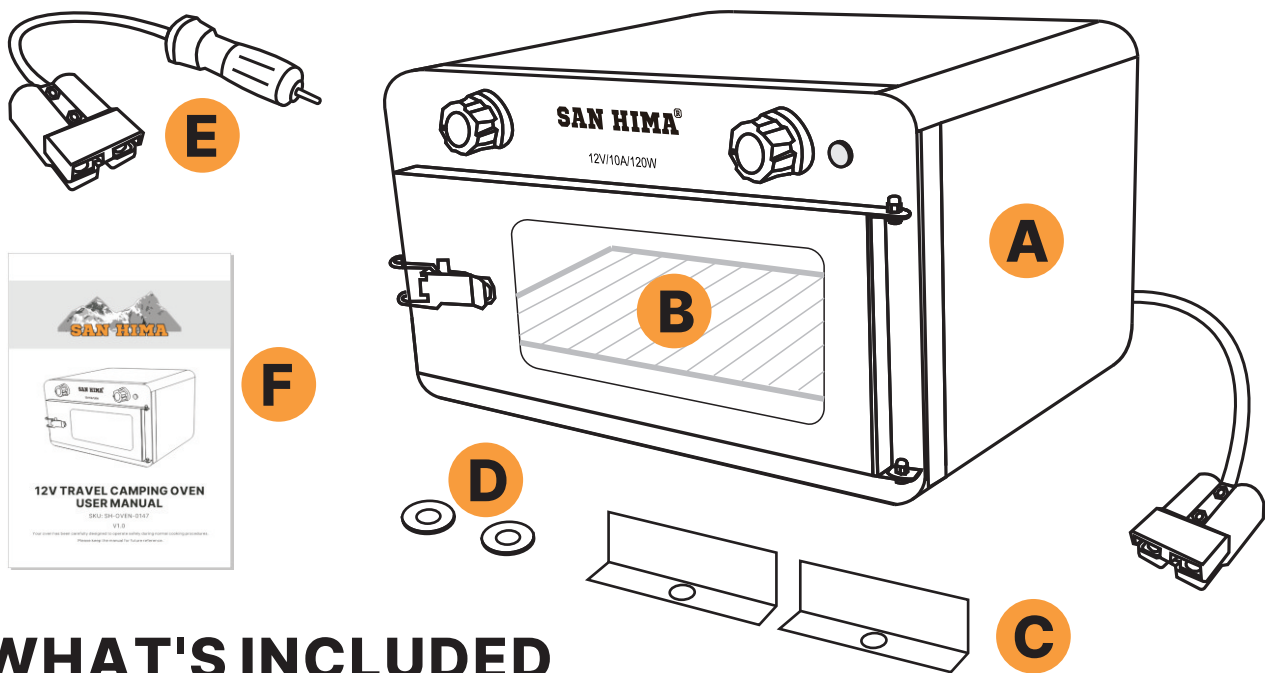

WHAT'S INCLUDED

- A: 1 PC(s) San Hima 12V Camping Oven
- B: 2 PC(s) Removable Trays
- C: 2 PC(s) Mounting Brackets
- D: 2 PC(s) Washers
- E: 1 PC(s) Anderson to Cigarette Adapter
- F: 1 PC(s) User Manual

IMPORTANT SAFETY INSTRUCTIONS

- Read all the instructions before using the camping oven. Use the oven ONLY for its intended purpose as described in the instructions.
- Turn the oven off before cleaning and maintenance. Failure to follow this advice may result in death or electrical shock.
- Flammable materials should NOT be stored in this oven or near its surface.
- NEVER use this oven for warming or heating purposes. Persons could be burned or injured or a fire could start.



- Surfaces of this product may become hot enough to cause burns - among these surfaces are the oven vent, the surface near the oven vent, and the oven door. Failure to follow this advice could result in burns and scalds.
- Use oven mitts or other protection when handling hot surfaces such as oven trays or dishes.
- Take care when opening the oven door. Let hot air or steam escape before removing or replacing food.
- DO NOT touch the interior surfaces of the oven when cooking is finished. Because the interior surfaces are hot enough to cause burns.
- During and after use, DO NOT touch, or let clothing or other flammable materials contact heating elements or interior surfaces of the oven until they have had sufficient time to cool.
- Make sure this oven is connected to a circuit which incorporates an isolating switch providing full disconnection from the power supply.
- DO NOT leave children alone. Children should not be left alone or unattended in the area where the oven is in use.
- Children or persons with a disability that limits their ability to use this product, should have a responsible person to instruct them in its use. The instructor should ensure that they can use this product without danger to themselves or their surroundings.
- DO NOT place heavy objects on the oven door.
- DO NOT wear loose fitting or hanging garments when using this product, which could ignite or melt if they touch an element or hot surface and you could be burned.
- DO NOT repair or replace any part of this product without authorization from San Hima.
- DO NOT use water on grease fires. Smother the fire or flame or use a dry chemical or foam type extinguisher.
- DO NOT heat unopened food containers. They can build up pressure that may cause the container to burst and result in injury.
- Leave food in the oven for as short a time as possible before and after cooking. This is to avoid contamination by organisms which may cause food poisoning. Take particular care during warm weather.
- ALWAYS keep oven vents unobstructed.
- DO NOT use harsh/abrasive cleaners, scourers or sharp metal scrapers to clean the oven, since they will scratch its surface.
- DO NOT store things children might want above the oven. Children could be burned or injured while climbing on the oven to retrieve items.
- DO NOT install or operate the oven if it is damaged or not working properly. If you receive a damaged product, contact San Hima immediately.
- Use ONLY bakeware approved for oven use. Follow the bakeware manufacturer's instructions.
- Take care since some edges are sharp.
- This camping oven needs separate M8 screws, not included in this package.



OPERATING INSTRUCTIONS

Cooking with the San Hima camping oven

1. Preheat the oven to the desired temperature. It is recommended to preheat for an hour.
2. Place food on the racks. Ensure you don't overload the oven.
3. Set the oven timer to the desired cooking time.
4. Check food occasionally and rotate/turn when necessary.
5. When cooking is finished, remove your food from oven and turn off.

Oven Timer

1. Rotate the timer clockwise to set to desired cooking time.
2. The timer tone will sound when the set time is reached.
3. To switch the timer off early, rotate the timer counter-clockwise to the desired time.

Oven Light

- The light will turn off once the desired temperature has been reached.
- Any adjustments to the temperature whilst in use will turn the light back on, until the desired temperature has been reached.

COOKING TIPS

- It is important that the oven not be overloaded as this will extend cooking time.
- Properly prepare for the amount of food you are cooking and the initial temperature. When cooking large quantities of food it is more effective to divide it into smaller portions for cooking than it is to heat a large amount for longer.
- Make sure that frozen food has been completely thawed before cooking; incomplete thawing will result in uneven cooking. Cook food immediately after defrosting.
- Stir food several times during cooking to ensure that the heat is distributed evenly.
- Make sure that you wait the proper amount of “standing” time after cooking. Standing time allows the cooking process to complete allowing for better heat distribution within the food.



WARRANTY

San Hima ("Manufacturer") warrants, to the original purchaser ("User") that its camping oven, if purchased from manufacturer or an authorized distributor or dealer, will be free of defects in material and/or workmanship under normal usage from the date sold and for the duration (the "Warranty Period") of 1 YEAR.

This warranty shall ONLY be effective for the original purchaser and apply ONLY to the San Hima camping ovens that are correctly installed and used. San Hima will either repair, replace the product or provide you with a refund at our discretion provided that the fault is found to have been caused by a design or manufacturing defect that results in its failure to perform correctly as described. The limited warranty is the only one that applies to this product, and it sets forth all the responsibilities of San Hima.

EXCLUSIONS:

This warranty does not cover defects, failure or damage caused by intentional damage, misuse or abuse. It is recommended that the installation should be performed by suitably qualified technicians or the warranty will be voided. For further clarity, this warranty is also void if the camping oven:

is used for anything other than reasonable personal cooking,
is operated outside of its technical specifications,

is repaired, altered or modified by anyone other than San Hima, or without San Hima's authorization.

is damaged by adverse weather, extreme temperature, accidents, negligence, normal wear and tear, acts of God, alteration, incorrect installation, improper, commercial or continuous use, is damaged due to purchaser's failure to ensure that instructions for use are observed, and any other cause reasonably beyond the control of San Hima.

CLAIMS:

If a San Hima product is suspected of being defective, you'll need to provide proof of purchase (e.g. a screenshot of the order) and a picture and a video of the damaged product in its entirety to sales@sanhima.com. If the product is found to be defective and covered by this limited warranty, the remedy is repair, replacement or refund, at San Hima's option. No charges will be accepted for external labour or materials.