

# Rocker Climber Tutorial



Double Rocker

WIWIURKA

Greetings from Wiwurka workshop. Thank you for purchasing a handmade toy.



Assembly time: 40 min.

Difficulty level: basic.

Por favor asegúrate de tener las siguientes piezas:

Parts



X2



X36 / X48 / X48

Small Rocker  
Double Rocker  
XXL Rocker



X9 / X12 / X12

\*The colors will depend on the color selection while placing the order. Our listing shows the item in Rainbow colors.

# WIWIURKA




## For the assembly you will need:

Electric screwdriver or Phillips screwdriver a toothpick, drill bit or alike tool.



## Before starting:

- Assemble this item on a soft surface such as cardboard or carpet, to protect finish.
- Remove all wrapping material before you start to assemble.
- Organize all your pieces in advance. Sorting will make assembly more efficient.
- Do NOT tighten all screws until completely assembled.
- Keep hardware parts out of reach of children.
- NOTE: If your rocker has ramp the point where to fit it will be the free space between slats marked as 3 and 4; these slats are slightly narrower than the rest.

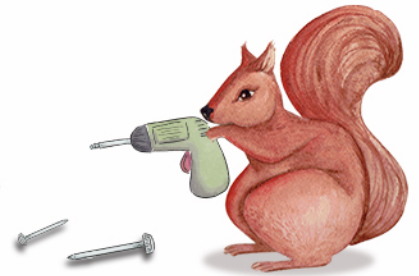

## Instructions:

NOTE: Please make sure to screw your pieces at a low speed to avoid the slats/boards from cracking.

Place one of the Rocker's side boards as shown in the picture to locate the pre-drilled slots and Wiwiurka's seal. This is the outer face of the side board




Align each slat with its corresponding slot using a toothpick, drill bit or another alike tool. If they are not properly aligned, the screw may pierce through the side board. Screw only half way.





# WIWIURKA

Once all slats are attached to the first side board place the whole structure with the side board upside down (4). Carefully align the second side board on top (5). Use your guiding tool to align the slats with their corresponding slots (6) and attach only half way using the screws (7).

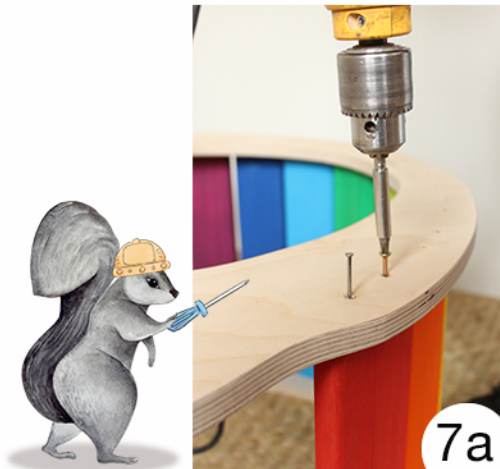

Place the Rocker upside down and exercise downward pressure with your body to make sure everything is perfectly leveled. **NOTE:** if not leveled verify that you don't have a lightly twisted slat, if so you should flip it over and screw again (8). When everything is leveled screw the Rocker completely



## Safety & Care instructions:

- Place the Rocker Climbing Board on a non-slip mat or surface.
- Maximum weight limit: SMALL: 88lb DOUBLE: 120lb XXL: 165lb
- Avoid contact with water as this may damage the wood.
- Wipe with a soft dry cloth to protect finish, avoid the use of chemicals or household cleaners.
- Never leave children alone without adult supervision.



## Questions and suggestions:

[hola@jugueteswiwiurka.com](mailto:hola@jugueteswiwiurka.com)