

ULTRASONIC DIFFUSER TRANQUILLITY



OPERATING MANUAL - MODEL 887

FEATURES

- Humidifies the air
- Safe and cool to touch
- Up to 17 hours operation
- Auto switch off
- 8 LED light options

Please read the Operating Manual carefully and retain for reference.

• Operating times:


- Continuous ON

Water capacity 200mL

- Interval (15s on/15s off)

How the Bosisto's Ultrasonic Diffuser works:

Using high frequency oscillation (vibration), water and essential oils are converted into a fine mist and dispersed into the air.

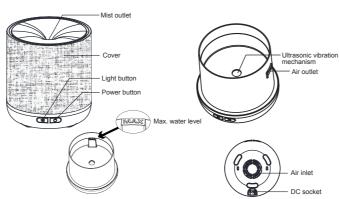


OPERATING INSTRUCTIONS

1. Holding upright, carefully remove the 4. Replace the cover. To avoid spillage, cover from the base.



 - 2. Connect the DC adapter into the DC socket in the base of the diffuser. Plug the AC adapter into the power supply. Add clean, cold tap water to the water tank, without exceeding the maximum waterline. DO NOT spill any water outside the tank. DO NOT use hot water or refill while the unit is in
- 3. Add 6-9 drops of essential oil to the



- DO NOT tilt the unit.
- 5. MIST: Press the 'POWER' button once for continuous on. Press again for interval setting (15s on/15s off). To power off press a third time.

LIGHT: Press the 'LIGHT' button once or rotating colour. Press a second time to hold colour. Press a third time to turn

Note: Hold for 2 seconds to turn mist and light off.



6. If the water level inside the unit runs low, it will automatically stop operating and will not allow further operation.

THINGS TO NOTE

- . The amount and intensity of mist produced will vary, but this is not unusual and should not be considered as a fault.
- · Factors that affect this include water type, humidity, temperature and air
- If there is no water in the water tank pressing the POWER button will cause the light to "flash" 3 times to remind you to add water. The unit will not work without water.
- Only essential oils and diffuser oils can be used in unit. Those containing chemical fragrance, spice or impurities will cause malfunction and void the warranty.
- Use 6-9 drops of essential oil or diffuser oil per 200mL water at a time. Too much essential oil will clog the system and cause malfunction. Clean the unit as per the Maintenance instructions, before changing to a new type of essential oil.

ACCIDENTAL LEAKAGE

In the event of the unit being knocked over or tipped during use, please follow the steps below to avoid malfunction

1. Unplug the unit and remove cover.



2. Pour any remaining water out of the water tank.



3. Shake the unit gently to drain any then allow to dry for at least 24 hours.

MAINTENANCE

To ensure you enjoy the best results and long-term satisfaction, we recommend that you follow the operating and maintenance instructions carefully. Please follow the steps below if the unit has been used for 5-6times or for 2-3 days.

STEP 1: Disconnect the AC adapter from the power supply. Take off the cover while keeping the unit stable.

Disconnect the DC plug from the unit.

STEP 2: If there is water left in the tank. remove the cover and pour it out from the drain side. DO NOT pour from the air outlet side or water may flow into

STEP 3: Use a damp cloth or cotton ud with water or diluted mild kitchen detergent to clean the outside or inside of the unit.

DO NOT use chlorine, acidic (vinegar) the outside or inside of the unit.

IMPORTANT: DO NOT press heavily or mechanism in the water tank during

STEP 4: If there is any dirt inside the

- with a cotton bud.
- Remove the lid insert and clean with a

Re-attach the lid insert into the top of

STEP 5: Add water into the tank, Install the cover. Activate the unit to operate for 30 minutes. Rinse it after pouring out the remaining water



PRECAUTIONS AND SAFETY WARNINGS

- Do not fill the unit to over 200mL. • Do not switch on power when the tank is empty.
- Do not touch the ultrasonic vibration
- Clean regularly as per Maintenance instructions to avoid malfunction.
- remaining water from "DRAIN SIDE" of tank, and wipe with a clean, dry
- Essential oils can stain. In the event of spillage or contact with surface,
- please wipe away with a soft cloth. • Only use a cup to add water to the
- Do not let mist blow directly onto furniture, clothing, walls etc.
- Keep away from direct sunshine and heat sources.

To ensure safety in operating this unit, please follow the instructions below:

- Always unplug from power supply before cleaning or maintenance.
- · For hygiene reasons, after use, pour
- tank. Never fill directly from the tap.
 - Do not use the unit if the power lead has been damaged or the

mist outlet.

Always keep on stable flat surfaces.

equipment such as computer, TV

mechanism and cause malfunction.

• Use tap water only. Do not use hot

water, mineral or sparkling water.

• Do not touch any part of the unit

Keep out of reach of children and

capabilities, lack of experience and

knowledge, unless they have been

Do not cover the unit or block the

given supervision or instruction.

pets. This appliance is not to be

used by persons with reduced

physical, sensory or mental

• Do not tip the unit as this may

Do not place on carpet.

and audio equipment.

cause water to enter the

Keep away from electronic

TROUBLESHOOTING

Please refer to the table below in the event of the unit operating abnormally

ISSUE	POSSIBLE CAUSE	SOLUTION	
Will not switch on-switch off early	Is there enough water in the tank? Is the power cord connected properly?	Add water to the tank Disconnect, check cables and re-connect carefully.	
No mist or abnormal mist	Not enough water? Too much water? Dirt on the ultrasonic vibration mechanism? Cover and inner cover are not installed properly? Dirt on the air suction port on the underside of the base?	Add suitable amount of water in the tank. Water must never be filled over 200mL (MAX) line. Please refer to Maintenance instructions Remove and re-install correctly, so vapors can be released freely. Clean the air suction port of any dust. Restricted airflow will affect mist.	
Water leakage from product	Cover is not installed properly? Has the unit been tipped over? Low temperature or high humidity?	Remove and reinstall correctly, so vapors can be released freely. Follow accidental leakage instructions. Under these conditions, the mist may condense quickly into water droplets.	

SPECIFICATIONS - MODEL 887

SPECIFICATIONS - MODEL 887				
Dimensions	115mm (d) x 130mm (h)	Water Capacity	200mL	
Weight	Approx. 315g	Mist Capacity	15-20mL/Hr	
Power	Special Adapter Input: AC 100-240V 50/60Hz 0.35A Output: DC 24V 500mA Length of power line: Approx. 180cm Power: Approx. 12W	Accessories	Special AC Adapter Operating Manual	
Timer	Continuous ON and Interval (15s On/15s Off)	Ultrasonic Frequency	2.4 MHz	
LED Light	8 colours			
LED Light	8 colours			

1 YEAR WARRANTY

This product has been produced with the greatest care for normal, household use. Following directions carefully will ensure dependable operation. If you experience unsatisfactory operation or are dissatisfied with your Bosisto's Tranquillity Iltrasonic Diffuser (Model 887) please contact our friendly Customer Service team at FGB Natural Products

Modification to the product by the consumer or failure to follow the manufacturer's operating instructions will void the warranty.

If repair is required under the warranty period, the product should be returned with proof of purchase

The purchaser assumes responsibility for the proper care and use of the product in accordance with the printed Operating Manual. The purchaser or user must make nis or her judgment as to when to use the product and the length of use. Keep the Operating Manual available as it is your guide to safe, efficient operation.

Our goods come with guarantees that cannot be excluded under the $\mbox{\sc Australian}$ Consumer Law 2011. You are entitled to a replacement of the faulty unit or refund

For warranty claims please call 1800 655 841 or contact us at bosistos.com.au



Felton Grimwade & Bosisto's Pty. Ltd.
61–81 Clarinda Road (PO Box 74), Oakleigh South, VIC 3167, Australia
Website www.bosistos.com.au Free Call 1800 655 841