

COMPACT **ULTRASONIC DIFFUSER**



OPERATING MANUAL

FEATURES

 
- · Humidifies the air
- Cool to touch
- Up to 4 hours operation
- · Auto switch off
- Intermittent (9s on/9s off)


· Operating times:

- Continuous ON

Read the Operating Manual carefully and retain for reference. How the Bosisto's Compact Ultrasonic Diffuser works:


Using high frequency oscillation (vibration), water and essential oils are converted into a fine mist and dispersed into the air.



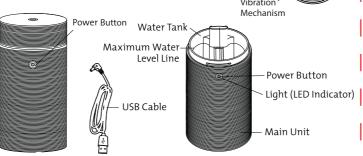

OPERATING INSTRUCTIONS

- 1. Holding upright, carefully twist and unlock the top cover. DO NOT tilt the unit if there is water remaining
- 2. Add clean, cold tap water to the 7. If the unit is not going to be used water tank without exceeding the maximum water line. DO NOT spill any water outside the tank or refill while the unit is in operation.
- 3. Add 6-9 drops of Bosisto's diffuser oil or essential oil blend.
- 4. Replace and lock the top cover. To avoid spillage, DO NOT tilt the unit
- 5. Plug the unit into the power adaptor or USB port.

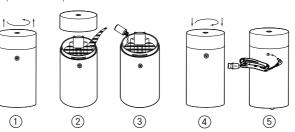

6. MIST: Press the 'POWER' button

once for continuous on Press

again for intermittent setting

third time.

(9s on/9s off). To power off, press a

for a long time, disconnect unit

from power supply and drain any

ensure optimal ongoing operation.

NOTE: If the water level inside the

unit runs low, it will automatically

stop operating and will not allow

remaining water. Wipe with a

Maintenance instructions to

clean, dry cloth. Follow

 
further operation.

THINGS TO NOTE

- Auto switch off after 4 hours operation.
- The amount and intensity of mist produced will vary, but this is not unusual and should not be considered as a fault. Factors that affect this include water type, humidity, temperature and air currents.
- The unit will not work without
- Only diffuser oils and essential oil blends can be used in the unit. Those containing chemical fragrance, spice or impurities will cause malfunction and void the
- Use 6-9 drops of diffuser oil or essential oil blend per 55mL water at a time. Too much essential oil may clog the system and cause malfunction. Clean the unit as per the Maintenance instructions, before changing to a new diffuser oil or essential oil blend.

ACCIDENTAL LEAKAGE

- In the event of the unit being knocked over or tipped during use. please follow the steps below to avoid malfunction:
- 1. Unplug the unit and remove
- 2. Pour any remaining water out of the water tank, away from power button and air outlet.



3. Shake the unit gently to drain nechanism and then allow to dry for at least 24 hours.

MAINTENANCE

To ensure you enjoy the best results and long-term satisfaction, follow the operating and maintenance instructions carefully. Follow the steps below if the unit has been used for 2-3 times, for 2-3 days, when changing to a new diffuser oil or essential oil blend, or when not using for

STEP 1: Disconnect the device from the power supply. Take off the cover while keeping the unit

STEP 2: Empty the water tank if there is any water remaining.

DO NOT pour from the air outlet side or water may flow into the

STEP 3: Use a damp cloth with water or diluted mild kitchen detergent to clean the outside ultrasonic vibration mechanism, gently use a damp cotton bud to remaining water. wipe away oil build up.

DO NOT press down or scratch the mechanism. For high oil build up, dab cotton bud with rubbing alcohol to clean. Always follow cleaning agents'

DO NOT use chlorine, acidic (vinegar) or enzyme-based detergents to clean the outside or inside of the unit.

STEP 4: If there is any dirt inside the mist outlet, clean with a cotton bud.

STEP 5: Install the cover Activate the and inside of the unit. To clean the unit to operate for 30 minutes. Rinse water tank after pouring out the

PRECAUTIONS AND SAFETY WARNINGS

To ensure safety in operating this unit, follow the instructions below:

- Do not switch on power when the tank is empty.
- Use clean cold tap water only Do not use hot, mineral or sparkling water.
- Do not tip the unit as this may cause water to enter the mechanism and cause malfunction.
- Diffuser oils and essential oils can stain. In the event of spillage or contact to surfaces, wipe away with a soft cloth.
- Do not cover the unit, block the mist outlet or let mist blow directly onto furniture, clothing, walls, etc.
- Do not touch any part of the unit with wet hands.
- Always keep on stable flat surfaces. Do not place on carpet.
- Ensure adequate airflow around

- Clean regularly as per Maintenance instructions to avoid malfunction.
 - Always unplug from power supply before cleaning or maintenance.
 - Do not use the unit if the USB cable has been damaged or the socket is
 - Do not attempt to modify, dismantle or repair the machine. See Warranty information.
 - Keep away from electronic equipment such as computers, TV and audio equipment.
 - Keep away from direct sunshine and heat sources.
 - Keep out of reach of children and pets. This appliance is not to be used by persons with reduced physical, sensory or mental capabilities, lack of experience and knowledge, unless they have been given supervision or instruction.

TROUBLESHOOTING

Please refer to the table below in the event of the unit operating abnormally:

ISSUE	POSSIBLE CAUSE	SOLUTION	
Will not switch on-switch off easily	Is there enough water in the tank? Is the USB cable connected properly?	Add water to water tank Disconnect, check cables and re-connect carefully.	
No mist or abnormal mist	Not enough water? Too much water? Dirt or oil build up on the ultrasonic vibration mechanism? Dirt on the air suction port on the underside of the base? Is water too cold?	Add suitable amount of water in the tank. Water must never be filled over 55mL (MAX) line. Refer to Maintenance instructions Clean the air suction port of any dust. Restricted airflow will affect mist.	
Water leakage from product	Cover is not installed properly? Has the unit been tipped over? Low temperature or high humidity?	Remove and reinstall correctly, so vapors can be released freely. Follow Accidental Leakage instructions. Under these conditions, the mist may condense quickly into water droplets.	

SPECIFICATIONS				
DIMENSIONS	71mm (d) x 140mm (h)	WATER CAPACITY	55mL	
WEIGHT	Approx. 150g	MIST CAPACITY	Approx. 11mL/h	
ADAPTOR POWER	Input: AC 100-240V ~ 50-60Hz Output: DC 5V 1000mA Length of USB Cable: Approx. 100cm Power: 5W max		7mL/h intermittent	
		NOISE	<40dB	
TIMER	Continuous ON and Intermittent (9s On/9s Off)	ACCESSORIES	1 USB Cable 1 Adaptor 1 Operating Manual	
APPLICABLE AREA	10-20m ³	ULTRASONIC FREQUENCY	3MHz	
MATERIAL	BPA Free PP, BPA Free ABS			

1 YEAR WARRANTY

This product has been produced with the greatest care for normal, household use. Following directions carefully will ensure dependable operation. If you experience unsatisfactory operation or are dissatisfied with your Bosisto's Compact Ultrasonic Diffuser, please contact our friendly Customer Service team at FGB Natural Products

Modification to the product by the consumer or failure to follow the manufacturer's operating instructions will void the warranty.

If repair is required under the warranty period, the product should be returned with proof of purchase.

The purchaser assumes responsibility for the proper care and use of the product in accordance with the printed Operating Manual. The purchaser or user must make nis or her judgment as to when to use the product and the length of use. Keep the Operating Manual available as it is your guide to safe, efficient operation.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law 2011. You are entitled to a replacement of the faulty unit or refund

For warranty claims please call 1800 655 841 or contact us at bosistos.com.au



Felton Grimwade & Bosisto's Pty. Ltd. 61–81 Clarinda Road (PO Box 74), Oakleigh South, VIC 3167, Australia Website www.bosistos.com.au Free Call 1800 655 841