

ClearSounds[®]

TABLET

 


QUICK START
GUIDE

ClearSounds[®] Tablet




Type-C USB Cable



Tablet-to-USB
Connector
(Allows connection to
another USB.)




Charger

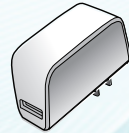


Quick Start Guide



GETTING TO KNOW YOUR TABLET

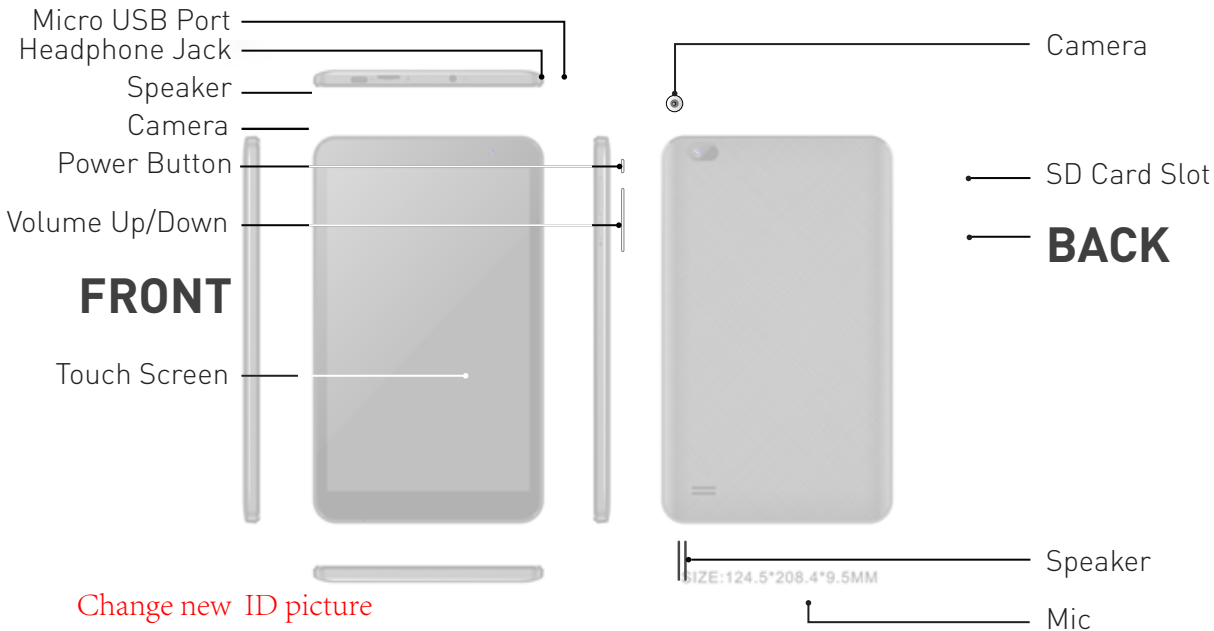


To use some of the best features of your new tablet, you will need to connect to the internet. Don't worry, it's easy. The First-Time Setup in this Quick Start Guide will walk you through the process. **To connect your tablet to the internet, you must have an internet connection and a wireless network.**

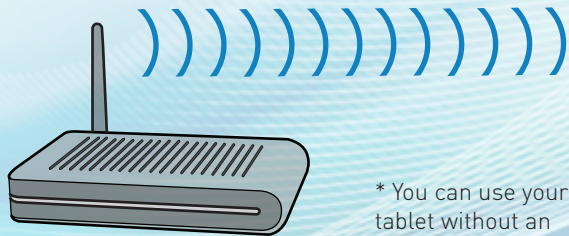


**High-Speed
Wireless Router**

* You can use your tablet without an internet connection, but some features will be unavailable.

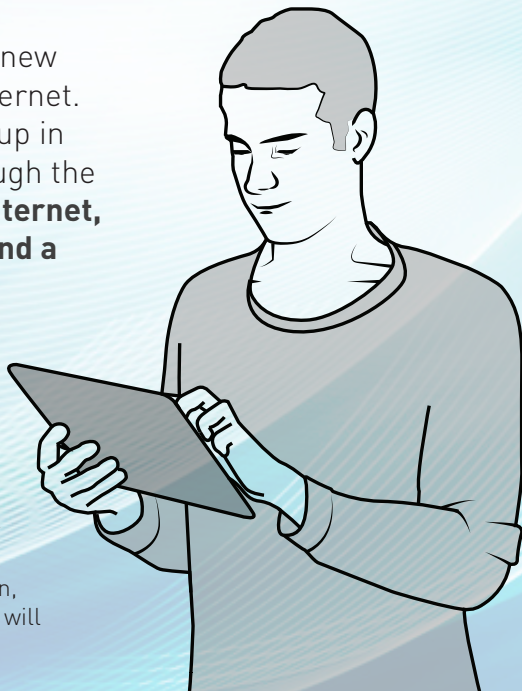


FIRST-TIME SETUP

1. Press and hold the **Power** button for approximately 5 seconds to turn the tablet on.

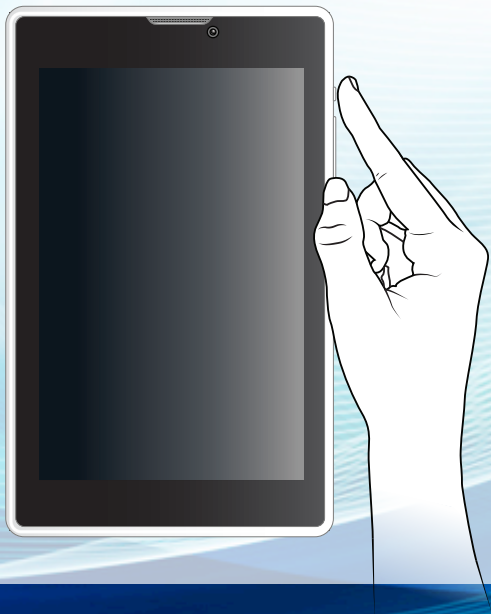


2. Slide the **Padlock** up to unlock the screen.

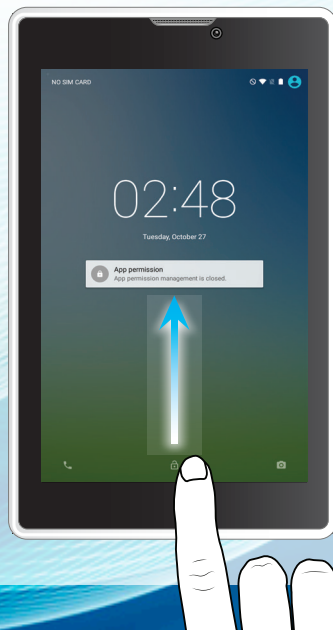


FIRST-TIME SETUP

3. From the home screen, tap the gear icon labeled **"Settings"**.

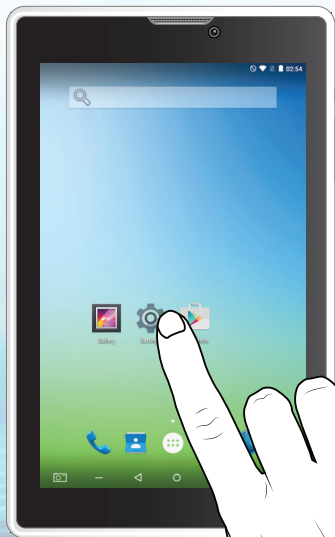


4. Tap the **Wi-Fi** box on the top left side of the screen.

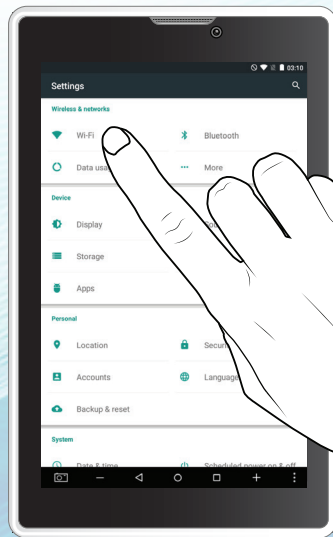

FIRST-TIME SETUP


5. Slide the circle icon in the upper right corner to the right.

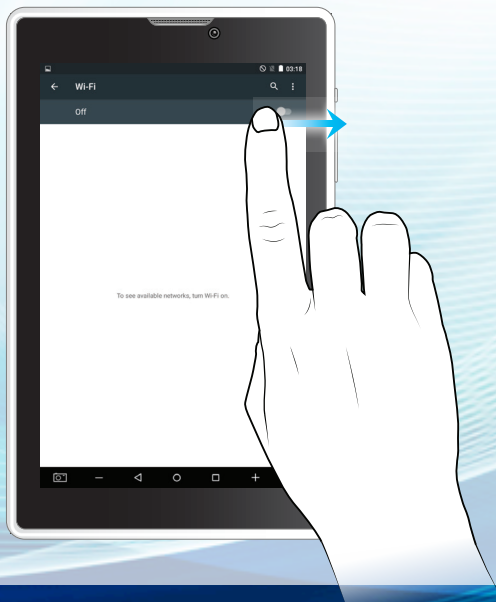


6. Select your **Network** from the displayed available networks.



7. Enter your WiFi Network password.

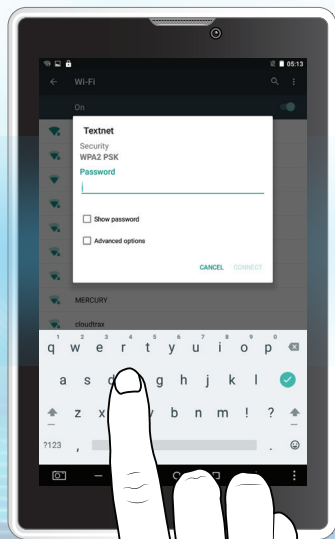


8. You WiFi Network will now be listed as **Connected**.

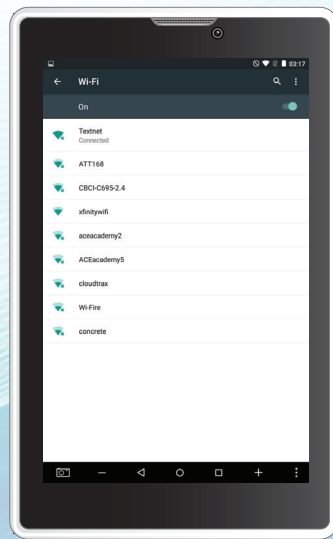


To use the apps and other tablet features, you will need to create and register a Gmail email address.

9. Register your Gmail from the **Settings** screen. Under **Personal**, tap **Accounts** then tap **Add account**.

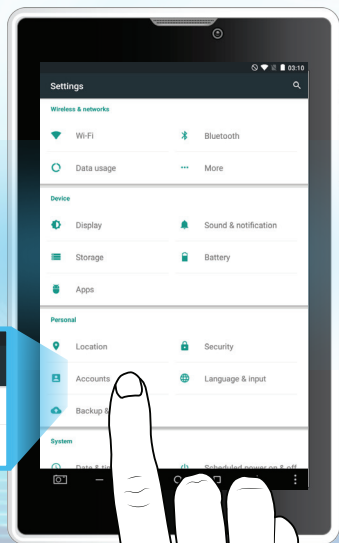


10. Select **Google**. Enter your name, email, and password. Complete registration.

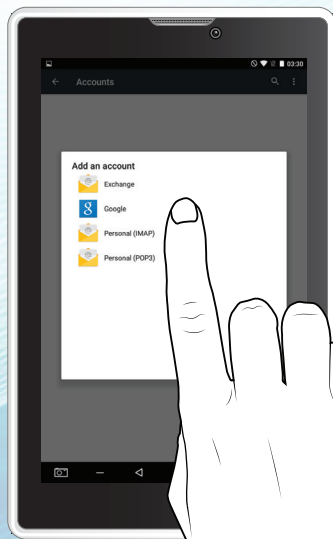



CHARGING THE TABLET

1. Connect the **Type-C** USB Cable to the tablet.

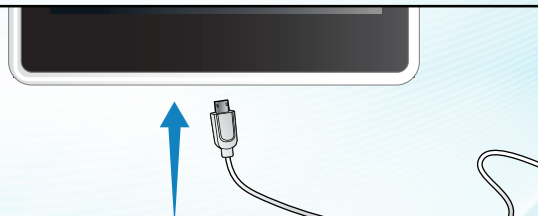

2. Connect the USB Cable to the Charger, then plug the Charger into an electrical outlet.

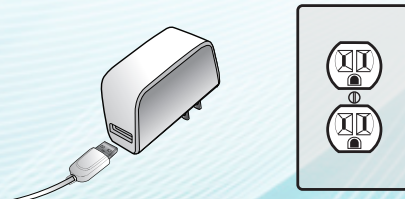

3. The  symbol in the battery icon means the tablet is charging. When the battery icon has five full bars, the tablet is fully charged.



SLEEP MODE AND UNLOCKING THE TABLET

The tablet screen will turn off automatically after 5 minutes if it is not being used. This is called sleep mode. You can also press the **Power** button to put the tablet in sleep mode. To wake the tablet, press the **Power** button. The Lock screen will be displayed. Hold your finger on the padlock, and swipe up to unlock the screen.



TURNING YOUR TABLET ON AND OFF

To turn off your tablet:

Press and hold the **Power/Lock** button for 3 - 5 seconds until you see the Device Options menu. Touch the **Power Off** item. Alternatively you can touch the restart item if you just want to restart it.


Note: Your tablet is designed to stay on at all times. The tablet doesn't run when it's off, so it won't remind you of appointments and won't collect e-mail, nor will you hear any alarms you've set.



To turn on your tablet:

Press and hold the **Power/Lock** button until you see "Telclast" appear on the screen (approx 5 seconds).

Your tablet will boot up to the Android 5.1 "Lollipop" operating system.

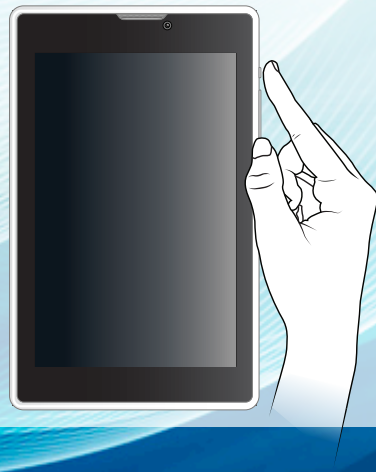

USING THE TOUCH-SENSITIVE BUTTONS

Your tablet can be used in portrait or landscape mode.



Landscape Mode



Portrait Mode



Tap the **CAMERA QUICK** button to activate the camera.



Tap the **VOLUME DOWN** button to decrease the volume.



Tap the **BACK** button to go to the last screen you were viewing. If the on-screen keyboard is open, use **BACK** to close it.



Tap the **HOME** button to return to the Home screen. Any app you were using will continue to run in the background.



Tap the **RECENT SCREEN** button to open a menu showing recently visited screens.



Tap the **VOLUME UP** button to increase the volume.



Tap the **WIDGETS** button to isolate your widgets and personalize your wallpaper..

STAYING ORGANIZED

Tap and hold the screen to add new wallpapers or change the background image.



Slide your finger down from the top of the screen to see new notifications.

Slide your finger from left to right or right to left to access more pages.

To add an app to a Category or another page, touch and hold the app icon you want to add. When the Options menu is displayed, move the app to the page you want it to appear on.

ADDING MORE APPS

Before adding new apps, you will need a registered Gmail account (refer to page 8).

From the home screen, find your apps by tapping the center circular button at the bottom of the screen. Tap the **'Play Store'** icon to explore new apps.

Android Market™ or **Play Store** offers quick, easy access to a wide variety of apps developed specifically for the Android™ platform. These have been created by developers all over the world, and have been rated by your fellow Android users. To shop for new apps, select the **Play Store** icon from the Home screen. You'll see the following:

- **Featured** - Scroll through the icons at the top to view featured apps
- **Applications** - Browse all apps or sort by category




ADDING MORE APPS

- **Games** - Browse all games or sort by category
- **Search** - Search the Market for apps
- **My downloads** - View the apps that you've already installed on your device

You will need an Internet connection to download new apps from the Android Store. If you don't already have a free Google account, you can sign up for one in the Google Play Store application.

For more information, visit www.android.com/tablets

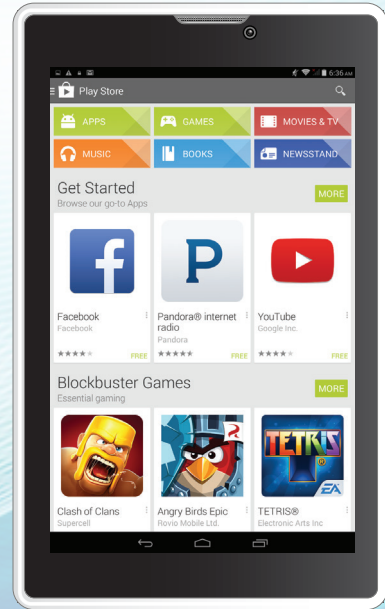

FREQUENTLY ASKED QUESTIONS

How do I change the background image on the Lock screen?

To customize the background image, or wallpaper, on the Lock screen or the wallpaper, touch and hold anywhere on the home screen > then select **Choose Image**. Select an image from your collection. The image you select is set to display on the Lock screen.

How do I bookmark a favorite Web page in the Browser app?

Open the **Browser** app and navigate to the Web page you want to bookmark. Tap the **Bookmark** icon in the upper right corner. Your current bookmarks will be displayed as thumbnails. Tap the **Add** thumbnail image. Your Web page is bookmarked.

How do I erase my viewing history in the Browser app?

Open the **Browser** app and tap the **Bookmark** icon in the upper right corner. Tap **History**. Press the **Menu** button. Tap **Clear History**. Your browsing history is erased.

How do I set a new home page for the Browser app?

Open the **Browser** app, then press the **Menu** button. Tap **More**, then tap **Settings**, then select **Set home page**. Use the on-screen keyboard to enter the URL of the new home page, or tap **Use current page** to use the Web page you are currently viewing.

How do I reset my Tablet to the factory default settings?

Tap **Settings**, then choose **Backup & Reset**. To confirm you want to reset your tablet, tap **Reset device**. This will erase all data from your tablet's internal storage, including your Google account, system settings, app settings, and downloaded apps.

IMPORTANT SAFETY INFORMATION

Read all the safety information below before using your tablet. For additional information, read the User Manual available in your giftbox.

DRIVING SAFELY

Use of your tablet while driving may cause distractions and may be prohibited in some places. Always comply with local laws and regulations when driving. Driving safely is your primary responsibility, but if using your tablet, NEVER type or read email or messages, navigate on the web or perform any other activity that takes your attention from driving. ALWAYS keep your eyes on the road and your hands on the wheel, use voice-activated commands and focus on your driving.

SEIZURES/BLACKOUTS

Some people may be susceptible to epileptic seizures or strokes when exposed to flashing lights such as when playing games or watching video, even if those conditions have not been previously diagnosed. If you or anyone in your family has a history of seizures or strokes, or if you have any other reason to think you or someone under your supervision may be susceptible to epileptic seizures or strokes, consult a doctor before playing games or watching video. If you experience headaches, blackouts, seizures, convulsion, eye or muscle twitching, loss of awareness, involuntary movement, or disorientation, stop using your

tablet and consult a doctor. To reduce risk, hold your tablet at a distance from your eyes, use it in a well-lit room, take frequent breaks and stop if you are tired.

WARNING ABOUT HEARING DAMAGE

Exposure to loud sounds can damage your hearing, causing hearing loss and tinnitus (ringing or buzzing in the ears). With continued exposure to loud noises, ears may become accustomed to the sound level, which may result in permanent damage to hearing without any noticeable discomfort.

Loud Sounds + Time = Hearing Loss

The more time you spend exposed to loud sounds, the more likely you are to damage your hearing.

- Limit the amount of time you spend using headphones, or earpieces.
- Do not turn up the volume to block out surrounding noise.
- If you can't hear people speaking, turn down the volume.

If you experience a sensation of pressure or fullness in your ears, ringing in your ears or muffled speech, or believe you may have experienced noise-induced hearing loss, you should have your hearing checked by an ear doctor.

REPETITIVE MOTION

Repetitively performing actions, such as pressing keys or typing, may result in occasional discomfort in your hands, arms, shoulders, neck, or other parts of your body. Take breaks often, and if you continue to have discomfort during or after such use, stop use and see a doctor.

GLASS PARTS

Your tablet may contain glass parts. Dropping your tablet on a hard surface or a substantial impact to your tablet could break this glass. If the glass breaks, do not touch or attempt to remove it. Stop using your tablet until the glass is replaced by an authorized service center.

POTENTIALLY EXPLOSIVE ATMOSPHERES

When you are in an area with a potentially explosive atmosphere, turn off your tablet. Do not remove, install, or charge batteries, as this may create sparks that can cause an explosion or fire, resulting in serious injury or even death. Areas with potentially explosive atmospheres are often, but explosion or fire resulting in serious injury or even death. Areas with potentially explosive atmospheres are often, but not always, clearly marked. Potential areas may include fueling areas; fuel or chemical transfer or storage facilities; areas where the air contains chemicals or particles, such as grain, dust, or metal powders; or areas where you would normally be advised to turn off your

engine.

CARE & MAINTENANCE

Do not use volatile solvents to clean this product. Such chemicals may damage it. To clean product, gently wipe it with a clean, dry, soft cloth.

BATTERY DISPOSAL & RECYCLING

You must dispose of this product properly, according to local laws and regulations. Because this product contains electronic components and a battery, it must be disposed of separately from household waste. Contact local authorities to learn about disposal and recycling options.

RADIO FREQUENCY (RF) EXPOSURE

Your tablet contains radio transmitters and receivers. The antenna on your tablet is around the perimeter. For optimal device performance, and to be sure that human exposure to RF energy does not exceed the guidelines set forth in the relevant standards, always follow this precaution: place your tablet with the antenna away from your body. Your tablet is designed to comply with local regulatory requirements concerning exposure to RF energy. For more information about your tablet compliance with the Specific Absorption Rates (SAR) limits set by the FCC visit www.ClearSounds.com. For additional information from the FCC about exposure to RF energy, see: www.fcc.gov/oet/rfsafety. The World Health

(WHO) notes that present scientific information indicates that exposure to RF within the limits set by the ICNIRP guidelines (from 0-300 GHz) does not produce any known adverse health effect. Additional information can be found at www.who.int/emf.

RF ENERGY INTERFERENCE/COMPATIBILITY

RF transmitting electronic equipment, such as your tablet, is subject to, and may cause, interference with other electronic equipment. Always follow instructions to avoid interference problems and turn off your Tablet in any location where posted notices instruct you to do so.

Aircraft

Turn off your tablet whenever instructed to do so by airline staff. If your tablet has an airplane mode or similar feature, consult airline staff about using it in flight.

Implantable Medical Devices

If you have an implantable medical device, such as a pacemaker or defibrillator, consult with your doctor before using your tablet. Persons with implantable medical devices should observe the following precautions:

- When your tablet is ON, always keep it more than 15 centimeters (6 inches) away from the implantable medical device.
- Immediately turn your tablet OFF if you have any reason to suspect that interference is taking place.

Read and follow the directions from the manufacturer of your implantable medical device. If you have any questions about using your tablet with your implantable medical device, consult with your doctor.

OPERATING TEMPERATURE

Your tablet is designed to operate between the temperatures of 32° to 95° F (0° to 35° C).

TECHNICAL SUPPORT

Hours of operation:

Monday - Friday: 8 am to 5 pm (CDT)

Phone, Fax, Email, and Web Support

Phone: 800.965.9043

888.814.5359 TTY

Email: info@clearsounds.com

Web: www.clearsounds.com

LIMITED WARRANTY

ON PARTS AND LABOR

Covers units purchased as new (only in the United States and Puerto Rico). ClearSounds provides a warranty to the original purchaser of a new Product against defects in materials and workmanship for a period of one year of non-commercial usage and ninety (90) days of commercial use. If a Product covered by this warranty is determined to be defective within the warranty period, ClearSounds will either repair or replace the Product at its sole option and discretion. To obtain warranty service, contact ClearSounds Technical Support via email: info@clearsounds.com or via phone at 800.965.9043, 888.814.5359 TTY from 8:00AM to 5:00PM, Monday through Friday Central Time, or visit www.ClearSounds.com.

PRE-AUTHORIZATION

MUST BE OBTAINED BEFORE SENDING ANY PRODUCT TO A ClearSounds SERVICE CENTER. Proof of purchase in the form of a purchase receipt or copy thereof is required to show that a Product is within the warranty period.

Parts and Labor

There will be no charge for parts or labor during the warranty period. Replacement parts and Products may be new (or certified refurbished at ClearSounds's sole option and discretion). Replacement parts and Products are warranted for the remaining portion of the original

warranty or for ninety (90) days from warranty service or replacement, whichever is greater.

Type of Service

Defective Products must be sent to a ClearSounds service center to obtain warranty service. ClearSounds is not responsible for transportation costs to the service center, but ClearSounds will cover return shipping to the customer. **PREAUTHORIZATION IS REQUIRED BEFORE SENDING ANY PRODUCT TO A ClearSounds SERVICE CENTER FOR WARRANTY SERVICE.** Product returns to ClearSounds's service centers must utilize either the original carton box and shipping material or packaging that affords an equal degree of protection. ClearSounds Technical Support will provide instructions for packing and shipping the covered Product to the ClearSounds service center.

Limitations and Exclusions

ClearSounds's one-year limited warranty only covers defects in materials and workmanship. This warranty does not cover, for example: cosmetic damage, normal wear and tear, improper operation, improper voltage supply or power surges, signal issues, damages from shipping, acts of God, any type of customer misuse, modifications or adjustments, installation and set-up issues, or repairs attempted by anyone other than a ClearSounds authorized service center. Products with unreadable or removed

serial numbers, and products requiring routine maintenance are not covered. This one year limited warranty does not cover Products sold "AS IS", "FACTORY RECERTIFIED", or by a non-authorized reseller.

THERE ARE NO EXPRESS WARRANTIES OTHER THAN THOSE LISTED OR DESCRIBED ABOVE. ANY IMPLIED WARRANTIES, INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, SHALL BE LIMITED IN DURATION TO THE PERIOD OF TIME SET FORTH ABOVE. CLEAROUNDS' TOTAL LIABILITY FOR ANY AND ALL LOSSES AND DAMAGES RESULTING FROM ANY CAUSE WHATSOEVER INCLUDING CLEAROUNDS' NEGLIGENCE, ALLEGED DAMAGE, OR DEFECTIVE GOODS, WHETHER SUCH DEFECTS ARE DISCOVERABLE OR LATENT, SHALL IN NO EVENT EXCEED THE PURCHASE PRICE OF THE PRODUCT. ClearSounds SHALL NOT BE RESPONSIBLE FOR LOSS OF USE, LOSS OF INFORMATION OR DATA, COMMERCIAL LOSS, LOST REVENUE OR LOST PROFITS, OR OTHER INCIDENTAL OR CONSEQUENTIAL DAMAGES. SOME STATES DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS OR THE EXCLUSION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATIONS OR EXCLUSIONS

MAY NOT APPLY TO YOU. THIS WARRANTY GIVES YOU LEGAL RIGHTS, AND YOU MAY ALSO HAVE OTHER RIGHTS, WHICH VARY FROM STATE TO STATE. THIS WARRANTY IS SUBJECT TO CHANGE WITHOUT NOTICE. CHECK www.ClearSounds.com FOR THE MOST CURRENT VERSION.

We want you to be fully satisfied with every item that you purchase. If you are not satisfied with your new product, you may return it within 30 days of purchase for a full refund, minus shipping, handling or other additional charges.

To ensure full credit, the item must be returned with a Return Authorization number (issued by Customer Solutions), with the original receipt/Proof of Purchase, in good condition, in its original packaging and with all paperwork, parts and accessories.

A 10% Restocking Fee or the price of the missing pieces (whichever is less) will be applied to returns received which are incomplete. A 10% Restocking Fee will also be applied to items received which are damaged during return shipping due to insufficient or improper packing.

OTHER CLEARSOUNDS PRODUCTS




Quattro 4.0

Connect and stream your cell phone, your television, up to five devices to your Quattro 4.0 Adaptive Bluetooth Listening System for a complete listening experience like no other.

CS-QT4

\$299.95

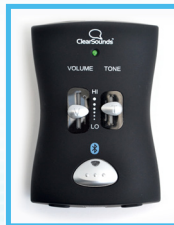

QH2 Hub

Connect a Bluetooth headset, neckloop or streamer to your home or office phone for hands-free and cord-free conversation.

CSQH2

\$229.95




QLinkTV

An advanced Bluetooth Adapter that allows you to link a variety of sound emitting devices.

CSQLINKTV

\$69.95

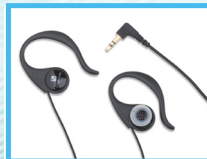

SmartSounds Earbuds

Because of the reversed position of the speaker unit, the SmartSound™ earbuds significantly reduce pressure on the eardrum & middle ear.

CSRS062

\$49.95



UG 03022016 © 2016 CLEAROUNDS, INC. ALL RIGHTS RESERVED.

YOUTUBE, GOOGLE TALK, GOOGLE MAPS, ANDROID, ANDROID MARKET, GMAIL, AND GOOGLE PLACES ARE TRADEMARKS OF GOOGLE, INC.