 


L.O.L. Surprise!™ Smartwatch & Camera 2.0

L.O.L. Surprise!™ Smartwatch & Camera 2.0 is packed with interactive games, dual P.O.V. and selfie cameras, and more! You can dance with Sprints, interact with Beats, and customize Diva's fashions!

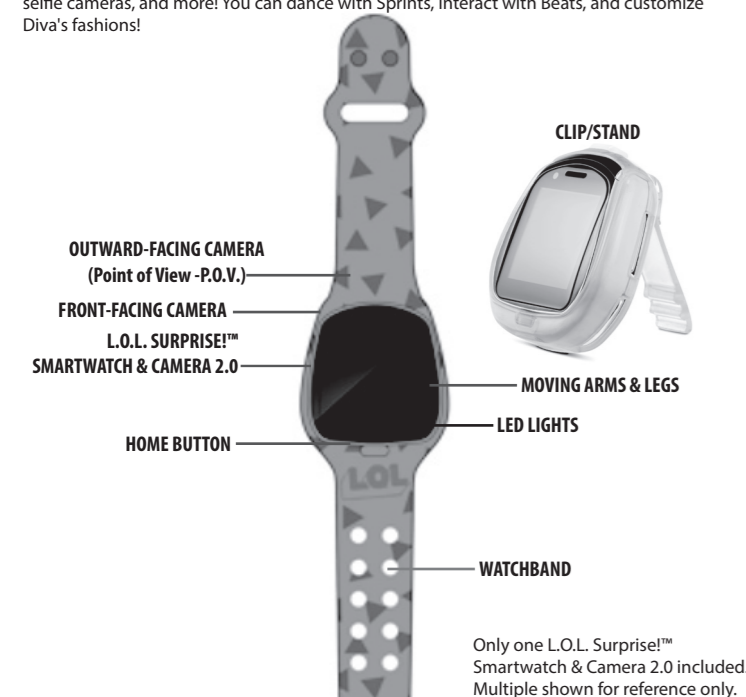

CONTENTS

- L.O.L. Surprise!™ Smartwatch & Camera 2.0
- Watchband
- Clip/Stand
- Micro-USB Cable

To turn on the device, press and hold the home button for about 5 seconds until the screen turns on and a sound plays.

Prior to giving this product to a child, remove all packaging material including plastic covers, tape, ties, tags and packaging locks. The plastic cover over the smartwatch surface is packaging material included for protective purposes and should be removed prior to use.

SPECIFICATIONS

Display	Curved 1.54" 240 x 240
Supported Languages	English, Spanish, French, Dutch, German, Italian, Polish
Photo Resolution	VGA (640 x 480 pixels)
Video Resolution	QVGA 14fps (320 x 240 pixels)
Focus Range	3 ft. (1m)
Internal Memory	512MB Some used for program data. Memory available for storage is less.
Storage Capacity	Photos: 3000 QR Video: 30 min. Storage capacity is approximate.
File Format	Photo: JPEG Video: AVI
Connectivity	Wireless Connectivity: 3.0 & BLE + EDT Micro-USB Cable: 2.0 HS (Included for connecting to computer)
Battery	Lithium Polymer battery (non-replaceable) Low Usage: 5 Days Typical Usage: 2 Days Heavy Usage: 8 Hours
Optimum Operating and Charging Temperature	14°F (-10°C) ~ 140°F (60°C)
Frequency Band(s)	240.2MHz-2480MHz
Max. Radio Frequency Power Transmitted	-0.5dBm

MICRO-USB PORT

NOTE: An adult must charge the device and connect to a computer.

Use the included Micro-USB Cable to connect the device to your computer to transfer photos and videos and to charge the device.

 
- Open the cover over the Micro-USB port on the smartwatch.
- Insert the Micro-USB side of the cable into the port.
- Insert the large USB end into a USB port on your computer.

BATTERY CHARGING

Prior to use, it is recommended that you fully charge your L.O.L. Surprise!™ Smartwatch & Camera 2.0 for optimal performance.

NOTE: The device should be OFF prior to charging. To power OFF, hold the home button for about 5 seconds, until a sound plays and the device shuts off.

- Remove the watchband or clip/stand from around the smartwatch.
- Insert the larger end of the Micro-USB cable into a USB port on your computer.
- Lift open the cover over the Micro-USB port on the smartwatch and insert the Micro-USB cable into the port.
- A battery symbol will turn green on the screen once the device is fully charged. Remove the device from the Micro-USB cable. Do not over charge the battery.
- You can now turn on the device, add your favorite accessory and begin playing.

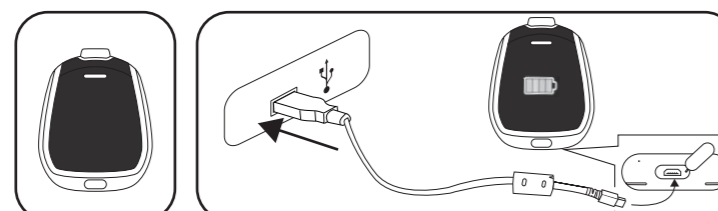

NOTE:

 
• See page 24 for more **BATTERY INFORMATION**.

SYSTEM REQUIREMENTS

Compatible systems include Microsoft® Windows XP, Windows® 7, Windows® 8, and Windows® 10 Operating System or a Macintosh Computer with macOS X version 10.13 and 10.14. Other operating systems may be compatible or eligible for upgrade to a compatible system. USB port required.

USING THE DUAL CAMERAS

There are two cameras on the L.O.L. Surprise!™ Smartwatch & Camera 2.0, a front-facing camera on the smartwatch's surface and an outward-facing (P.O.V.) camera on the top of the device. Open the Camera or Video applications to use the camera. View your images and videos in their respective galleries on your device. For more information, see pages 18-19.

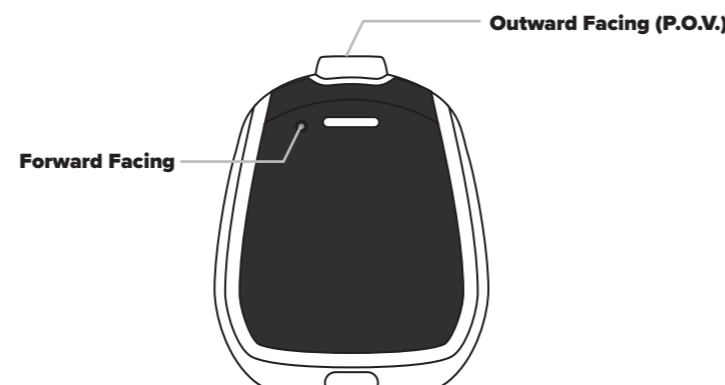

NOTE:

For your security, the camera and microphone on your device cannot be accessed when connecting to a computer with the Micro-USB Cable, as the device should be off. Properly eject the device from your computer, unplug the Micro-USB cable, and turn the device on before using these features.

TRANSFERRING FILES FROM THE SMARTWATCH

The device should be OFF prior to transferring files. To power OFF, hold the home button for about 5 seconds until a sound plays and the screen turns off.

Plug the device into your computer using the included Micro-USB cable, and follow the instructions on page 4.

On your computer, you will see a removable drive called LOL 2. Click on this drive to transfer files from the device to your computer using the folders called PHOTOS and VIDEOS. Copy and paste the files in these folders to the desired location on your computer.
TIP: Photo and video files will not be deleted from the smartwatch until you manually delete them on the device by pressing the trash can icon in the photo and video apps.

You cannot load photos or videos from other devices onto the L.O.L. Surprise!™ Smartwatch & Camera 2.0, as the file types may not be compatible.

NOTE: Once the device is connected to your computer, do not disconnect the smartwatch or the cable while files are transferring. Once your smartwatch completes the transfer, properly eject the device from your computer. Then, physically disconnect the cable and the smartwatch.

HOME BUTTON

 
Press and hold the home button on the front of the smartwatch for about 5 seconds to turn it on.

Once the smartwatch is turned on, press the home button once to rotate the display between **BEATS MODE**, **MENU MODE** and **WATCH SCREEN MODE**.

From **BEATS MODE**, press the home button to switch to **MENU MODE**.

From **MENU MODE**, press the home button to switch to **WATCH SCREEN MODE**.

From **WATCH SCREEN MODE** press the home button to switch to **BEATS MODE**.

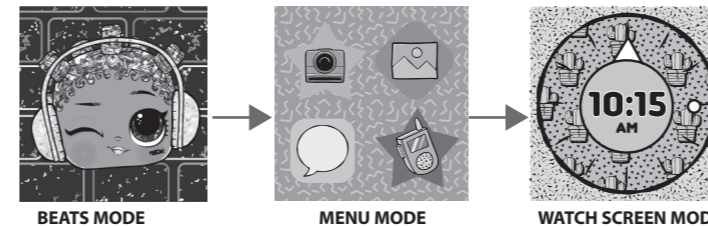

QUICK MENU VIEW

Swipe down on the touchscreen to quickly see the volume, time, wireless connectivity, daily steps, and battery charge level. Swipe up to make this quick view menu disappear or it will disappear after a few seconds. Tap on the volume or wireless connectivity icons to make changes to those settings.

NOTE: The quick view menu will not appear by swiping down on the screen while the smartwatch is listening to you in Beats Mode.

BEATS MODE

Press the home button on the front of the smartwatch to rotate the display to **BEATS MODE**.

- Touch the screen in Beats Mode for fun animations and to make the device's arms and legs move!
- Shake Beats around to make her dizzy!
- Leave Beats alone and watch her yawn or whistle.
- Swipe right to tickle Beats and make her giggle.
- Swipe left to make Beats wink!
- Swipe up to see the Beats Mode Menu then open Nurture icon.
 - Select the Emoji icon on the Beats Mode Menu for fun emojis
 - for her to interact with and express herself!
 - Selects the Beats Talk icon, then open the Beats Talk app for Beats
 - to listen to you! Try saying, "Hi Beats," or asking a question to
 - hear her response.
 - Swipe down, left, or right on her face to disable the listening mode.
- Sometimes Beats will suggest a game to play or an app to use with a speech bubble icon. Click on the icon to open the app Beats suggests. This will also boost her happiness on the stat bar (see HEALTH on page 16).

PLUS SO MUCH MORE! What else can your L.O.L. Surprise!™ Smartwatch & Camera 2.0 do?

 
ARCADE GAMES MENU

All games will get more challenging as you get better at playing. See if you can win each game!



A-Maze-Ing Balance:


- Guide the colored balls into the hole with the matching color.
- If you are wearing the smartwatch on your wrist, move your wrist around to roll the balls. If the smartwatch is in the clip/stand, rotate the device to roll the balls.
- Earn 5 points for every ball you match correctly!

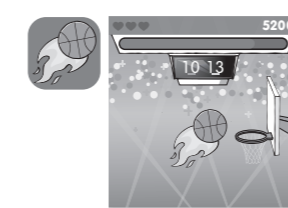

Dunk n'Slam Hoops:


- Tap the ball to bounce it towards the basket. Stop tapping the ball once it gets close to the basket.
- Players only control when to bounce the ball, timing is key to success.
- Earn 5 points each time you make a basket.
- You will lose a heart when the time runs out.
- While in a 2-player game, two scores will be shown.

 Play Head-to-Head Gaming with another L.O.L. Surprise!™ Smartwatch & Camera 2.0 user.

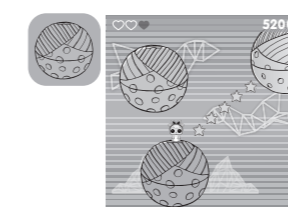

Ball Bouncer:

 
- Move from planet to planet by tapping on the rotating planet.
- To earn points, make sure your character lands on a ball.
- You will lose a heart if you send your character into space, onto the sun or into a black hole.

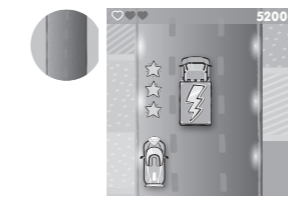

L.O.L. Surprise!™ Drive:


- Earn stars by driving through them.
- To avoid crashing into cars, tap on the screen to switch lanes.
- You will lose a heart each time you crash into a car.

 FITNESS MENU

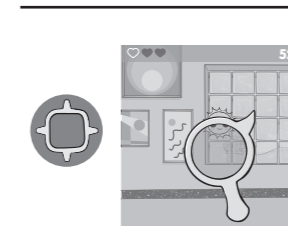

Treasure Hunt:

 - Start walking around with your smartwatch.
- Walk around until L.O.L. Surprise!™ balls appear.
- Aim the spy glass over a ball, and try to match the object in the lower left corner to the object in the ball.
- Keep trying until you collect the right object!
- For each correct object, earn 5 points!

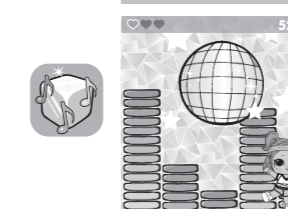


Freeze Dance:

- Dance until the music stops!
- When the music stops and a hand is on the screen, make sure to freeze!
- Don't move while the music is stopped.
- Don't stop moving while the music is playing.
- Earn 5 points for each minute of play when you freeze at the right time! If you are still dancing when the music stops, if you move while the music is still stopped, or if you stop moving while music plays, try again!



L.O.L. Says:

 
- Watch the move that Sprints wants to you copy.
- Perform that move the number of times that the screen shows.
- The number will count down as you perform the move repetitively.
- Earn stars for completing moves!

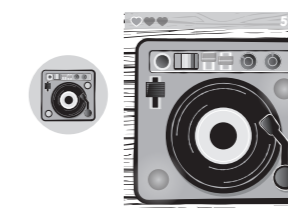

L.O.L. Remix:

- After the countdown, add sound effects to the movie by moving to the music and sounds you create.
- Different sounds play each time you tap the screen, run, jump or sway your arms from left to right.
- The longer you move the more points you earn!
- The music will stop when you stop moving.

 STATS

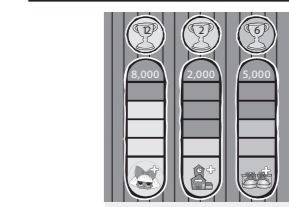


Rewards:

• See all the trophies you've earned from playing games and interacting with Beats.

Reward Scoring:

- Doll Mode: Gain one bar for every 7.5 minutes of playtime within 24 hours.
- Game Mode: Gain one bar for every 7.5 minutes of playtime within 24 hours.
- Walk Mode: Gain one bar for achieving 1/4 of the targeted steps goal, set by the player, until the goal is fully met.

 FASHION

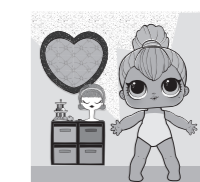

Fashion Show:

- From the Beats Mode Menu, select the dress icon at the bottom left of the screen to begin.
- Swipe left or right on the touchscreen to see all of the L.O.L. Surprise!™ rooms and four different dolls!
- Open the diamond icon in the top-left corner to see fashion items, pets, and other items.
- Swipe up or down to see all of your options.
- Press the back arrow to go back without an item.
- Tap an item and press the check mark to add it to the doll and room you're in.
- Press and hold the item to move it around, and then press the check mark when you're happy with it.
- Uncheck the icon to move the item.
- Drag the item to the sides of the screen to remove it.
- How many ways can you mix and match?

CALCULATOR

Calculator: Solve math problems using your L.O.L. Surprise!™ Smartwatch & Camera 2.0

- Tap on the numbers and symbols.
- Press the equal symbol to get your answer.

HEALTH

Breathe:

- Take a break and breathe with Beats.
- Wait for Beats to count down to one and breathe in and out.

STARTING UP THE SMARTWATCH

To turn on the L.O.L. Surprise!™ Smartwatch & Camera 2.0, press and hold the home button on the front of the device for about 5 seconds until the screen turns on and a sound plays. When you first start the smartwatch, ensure the firmware is up to date, as mentioned above. Make sure the device is fully charged (see page 4). To begin, you'll be prompted to set the language, date format, time, and name of the device. For more information on how to set these features, see **SETTINGS** on pages 15-16.

FIRMWARE UPDATE

Before beginning, it is important to check for any available firmware updates so that your L.O.L. Surprise!™ Smartwatch & Camera 2.0 is operating optimally. To update the firmware:

- On your computer, download the latest firmware pack from mgae.com/customer-care/firmware.
- Unzip the firmware pack.
- Turn off the smartwatch by pressing and holding the home button on the front of the device for about 5 seconds until a sound plays and the screen turns off.
- Follow the steps on page 4 to connect the Micro-USB Cable to the device and your computer.
- Look for the drive on your computer named LOL 2. A charging icon will show on the device's touchscreen.
- Quickly tap the screen 5 times to unlock. Then, an unlock icon will appear on the device's touchscreen.
- Copy all files in the firmware pack folder to the drive on your computer named LOL 2.
- Choose "Replace all files in destination" when the computer prompts you to do so.
- Properly eject the device from your computer when copying is finished. Then, remove the Micro-USB Cable.
- Turn on the smartwatch. A firmware update screen will be displayed on the device. Press the check mark icon on the screen to complete the firmware update.

NOTE: After the device cycles back on, it is recommended you turn it off and back on again to confirm the update was successful.

WAKE UP THE SMARTWATCH

After about 25 seconds of inactivity, the touchscreen will go dark. If you're wearing the L.O.L. Surprise!™ Smartwatch & Camera 2.0 on your wrist, raise your arm and turn the device toward you to wake it up and light up the touchscreen. If it is in the clip/stand, lift the L.O.L. Surprise!™ Smartwatch & Camera 2.0 to light up the touchscreen. You can also press the home button once to wake up the device.

WIRELESS CONNECTIVITY

Your L.O.L. Surprise!™ Smartwatch & Camera 2.0 can connect to other L.O.L. Surprise!™ Smartwatch & Camera 2.0's using wireless connectivity. To connect, open the Menu Mode and select the wireless connectivity icon in **SETTINGS**. Make sure wireless connectivity is toggled to the ON position (button turns blue). Now, you can share photos and message with other L.O.L. Surprise!™ Smartwatch & Camera 2.0 users. Users must be close by to connect over wireless connectivity. For example, about 50 ft. (15m) or less unobstructed. The device must also have sufficient battery power to connect wirelessly and share photos and messages. **NOTE:** Wireless connectivity is only compatible with other L.O.L. Surprise!™ Smartwatch & Camera 2.0 devices, and will not connect to other types of devices. Users receiving messages must accept the message from their device before they can view it.

WEARING THE SMARTWATCH

As with all wearable devices, some users may have skin sensitivities that are irritated by wearing the watchband for extended periods. Irritation may occur from moisture, sweat, soap or other irritants that get caught between the band and the skin. If irritation occurs, remove the watchband. It is not recommended to wear the watchband to bed at night or for extended periods. Always keep your wrist and the watchband dry and clean. To clean the band, wipe it off regularly with a damp cloth and dry thoroughly.

 
Avoid wearing the watchband too tightly, which is also may contribute to skin irritation. The band should not be too loose so that it does not stay in place properly, but it should also not be so tight that is uncomfortable to wear. If you notice any redness or swelling or other skin irritation, remove the watchband and consult a doctor if necessary.

If you do find that your skin is sensitive to the watchband, it is recommended you use the included clip/stand to play with the L.O.L. Surprise!™ Smartwatch & Camera 2.0.

USING THE CLIP/STAND

In addition to wearing the L.O.L. Surprise!™ Smartwatch & Camera 2.0 on your wrist, you can use the included clip/stand to attach it to your clothing or use it as a display stand on a table. The smartwatch will still count your activity, steps, and motion if you clip it to your clothing, but will not track activity if used as a stand. For the most accurate activity tracking, wear the device on your wrist or clipped onto your waistband.

TIP: For both the watchband and the clip/stand, make sure the device's arms and legs are able to move in and out of the casing. Ensure a proper fit before use.

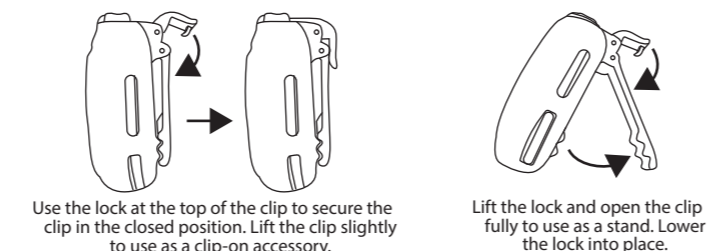

MENU MODE

Select from a variety of action-packed games and activities which include your favorite L.O.L. Surprise!™ characters, access dual P.O.V. and selfie cameras, and send messages! Press the icons on the screen to open sub-menus (indicated by an arrow next to the icon).

To exit a menu selection, press the home button.

There are four main menu screens, and three sub-menus for games, fitness games/tracking, and settings. Swipe left or right on the smartwatch to navigate between the four menu screens.


CAMERA
MESSAGING
BRAIN GAMES
L.O.L. Surprise!™ Time, Yeah Math!, Pair It Up and Tic-Tac-Toe
ARCADE GAMES
Dunk n'Slam Hoops, A-Maze-Ing Balance, L.O.L. Surprise!™ Drive, Ball Bouncer
ALARM CLOCK
TIMER
CALCULATOR
BREATHE
EMOJI
FASHION

IMAGE GALLERY
WALKIE TALKIE
FITNESS
Treasure Hunt, Freeze Dance, L.O.L. Says and L.O.L. Remix Game
REWARDS
CALENDAR
STOPWATCH
SETTINGS
Date, Date Format, Time, 12 or 24 Hour Clock, Brightness, Volume, Language, Device Name, Firmware Version, Wireless Connectivity and Parental Controls.
ACTIVITY TRACKER
NURTURE
BEATS TALK

Swipe up while in **Beats Mode** to access **Beats Mode** features. See page 8 for more information.

BRAIN GAMES MENU

 All games will get more challenging as you get better at playing. See if you can win each game!

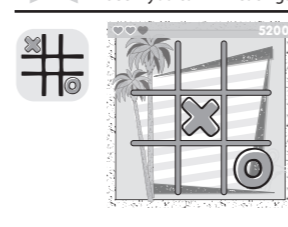


Tic-Tac-Toe:

- Play a game of Tic-Tac-Toe against the device.
- Pick a section to place your X. Three X marks in a row wins! Three O icons in a row means the smartwatch won that round.
- Earn 5 points for each game you win!
- Chose two players when prompted and the device will search for another L.O.L. Surprise! Smartwatch & Camera 2.0 nearby.

L.O.L. Surprise!™ Time:

 - Match the digital time to the analog time on the screen to earn 5 points.
- The clock will select a random analog time.
- Touch the digital numbers. Then, swipe up or down to enter the time shown on the analog clock.
- When you think the time you have set is correct, press the check mark to submit your answer.
- After 5 correct answers, Beats' face will show up with a fun animation!
- A new clock time will appear, so keep playing!
- Earn 5 points as you enter the correct time!

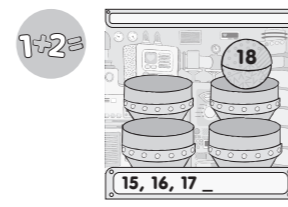

Yeah Math!:

- Solve the math problem by selecting the correct number on the L.O.L. Surprise!™ ball when it pops up on the screen.
- If you answer correctly, you'll earn 5 points!
- Try again if you select the wrong answer.



Pair It Up:

- Match the images before the time runs out.
- Tap on two cards to flip them over.
- If they match, you will earn a point.
- If they don't match, they will flip back over and you will have to try again.

MESSAGING / WALKIE TALKIE

REMEMBER: Your smartwatch can connect to another L.O.L. Surprise!™ Smartwatch & Camera 2.0 using wireless connectivity. To connect, open the Menu Mode and select the wireless connectivity icon in **SETTINGS** (making sure it is toggled to the ON [Blue] position). Now, you can send messages with other nearby L.O.L. Surprise!™ Smartwatch & Camera 2.0.

NOTES: Wireless connectivity is only compatible with other L.O.L. Surprise!™ Smartwatch & Camera 2.0, and will not connect to other devices. If wireless connectivity is turned off under Parental Control, it will not allow another L.O.L. Surprise!™ Smartwatch & Camera 2.0 to connect. The device name will appear on the screen with an option to allow the connection. An adult will need to enter the passcode to allow the connection.

Messaging:

- Message another nearby L.O.L. Surprise!™ Smartwatch & Camera 2.0!
 - Send emojis or click the images icon in the top-left corner to send pictures from your gallery.
 - Press the send icon in the bottom-right corner to send your message.
 - Select the L.O.L. Surprise!™ Smartwatch & Camera 2.0 device you want to send the message to.
 - Two L.O.L. Surprise!™ figures will be on the screen, and then a chat bubble will pop up on the receiving L.O.L. Surprise!™ Smartwatch & Camera 2.0 device when your message has sent.
 - The receiving device must press the chat bubble to view the message.
- NOTE: Pictures sent to another L.O.L. Surprise!™ Smartwatch & Camera 2.0 device cannot be saved on that device. They will disappear after about 15 seconds.**

Walkie Talkie:

- Press the middle button to record.
- Press it again to stop recording.
- Press the icon on the left-hand corner to select fun voice effects, like extra fast, slow-mo, robot, chipmunk or no effect.
- Press the trash can icon to delete the message.
- Press the play button to play your message back.
- Press the icon on the top right-hand corner to send the message to a nearby L.O.L. Surprise!™ Smartwatch & Camera 2.0 device.
- Select the L.O.L. Surprise!™ Smartwatch & Camera 2.0 device you want to send the message to. Two L.O.L. Surprise!™ Smartwatch & Camera 2.0 characters will appear on the screen, and then a chat bubble will pop up on the receiving L.O.L. Surprise!™ Smartwatch & Camera 2.0 device when your message has sent.
- The receiving device must press the chat bubble to view the walkie talkie message.

NOTE: Messages sent to another L.O.L. Surprise!™ Smartwatch & Camera 2.0 device cannot be saved on that device. They will disappear after about 15 seconds.

 
SETTINGS MENU

To cycle through each setting, swipe left or right on the screen. Make the appropriate changes. If the setting is already accurate, press the check mark to continue or swipe left to the next screen.



Date Selection:

- Press on the month, day and year or swipe up and down to set the date.
- Press the button to set the date format.




Time Selection:

- Press the hour and minute numbers or swipe up and down on the numbers to change the time. Then, press the AM/PM button to finish setting the time.
 - Choose how you want to display the time by pressing the 12/24 hour cycle button.
- NOTE:** L.O.L. Surprise!™ Smartwatch and Camera 2.0 will not automatically change for Daylight Savings Time.



Language Selection:

 - Tap on the language name to cycle between
 - English · Spanish · French · Dutch · German · Italian · Polish
- REMEMBER:** L.O.L. Surprise!™ Smartwatch and Camera 2.0 does not speak any language. The only apps that use language are the calendar, activity tracker, parental control and game re-start.



Brightness Setting:

- Use the + and - symbols to



SETTINGS (CONT.)

L.O.L. Surprise!™ Smartwatch & Camera 2.0 Device

- Name:**
- Your device is named LOL 2 by default, but you can add onto the LOL prefix to customize it!
 - Should you choose a new name, press the + and - buttons to select a letter or number.
 - Press the letter or number to set it.
 - Press the X to clear the letter or number you've selected.
 - Press the check mark to save your new device name.
- NOTE:** Your device name will always start with LOL 2. The first four characters LOL 2 cannot be erased.



ACTIVITY TRACKER

 
Activity Tracker:

- View your daily activity steps.
 - Set a step goal by clicking on the target icon.
 - Your goal can be as low as 1,000 steps per day. Increase the goal in 1,000 step increments up to 100,000 steps.
 - Press the green check mark to set your goal.
- REMEMBER:** Always consult a doctor before starting new physical activities.

WATCH SCREEN MODE

Press the home button to rotate the display to WATCH SCREEN MODE.

Swipe left or right on the touchscreen smartwatch surface to select from over 50 watch faces. Stop swiping to set the watch face that you like.

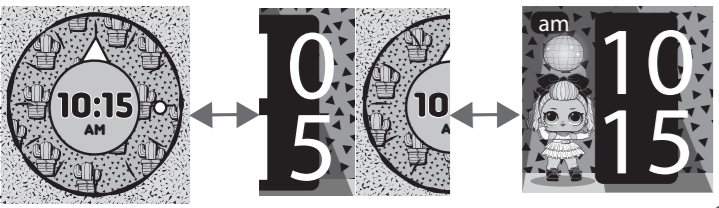

PARENTAL CONTROL

After entering the passcode, press the check mark and cycle through each setting by swiping left or right on the screen. Then, make the appropriate changes.

Create Passcode:

- Creating a passcode is optional.
 - To create a passcode, tap on the star keys to change the numbers. Then, press the check mark to set the passcode.
- NOTE:** To reset the passcode, press and hold the lock icon for five seconds.

Wireless Connectivity:

- Use the toggle button to turn wireless connectivity on (blue) or off (red).
- To allow another L.O.L. Surprise!™ Smartwatch & Camera 2.0 to connect, enter the passcode and press the check mark when the device's name displays on the screen.

 
Screentime:

- To set a time limit, follow the below steps. By default, there is no time limit set.
 - Use the toggle button to turn screentime on (blue) or off (red).
 - Tap on the time bar. It will cycle between 00:30, 1:00, 1:30, 2:00, 2:30, 3:00, 3:30, 4:00, 4:30, 5:00, 5:30 and 6:00.
 - Screentime will lock L.O.L. Surprise!™ Smartwatch & Camera 2.0 Mode and Games, but you will still be able to access Watch Screen Mode when the time is up.
- NOTE:** When the time is up, it will ask for the passcode in order to allow additional time. Tap the time bar and press the check mark to allow more time.



CAMERA

REMEMBER: For your security, the camera and microphone on your device cannot be accessed when connecting to a computer with the Micro-USB Cable, as the device should be off. Properly eject the device from your computer, unplug the Micro-USB cable, and turn the device on before using these features.

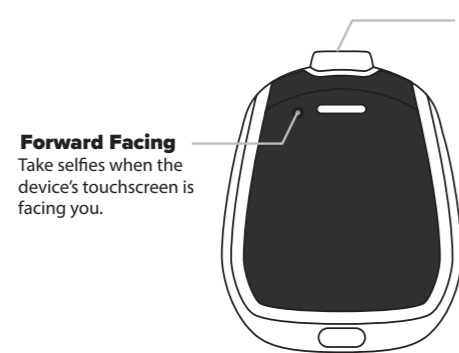

Forward Facing
Take selfies when the device's touchscreen is facing you.

Outward Facing (P.O.V.)
Hold the device parallel to the ground to shoot objects in front of you. Hold the device upright to shoot objects above you.

Camera:

- Take selfies or P.O.V. photos with your device!
- Use the camera icon at the bottom right of the screen to switch between selfie and P.O.V.
- Swipe left or right on the preview screen to select between camera or video camera.
- Press the shutter button on the bottom of the screen to take your picture.

 
Selfie Gesture:

- Activate the selfie and timer with a simple hand gesture. Slightly twist your wrist two times and on the second twist, look at the smartwatch's forward facing camera.
- NOTE:** This gesture only works if the camera is open.

Video Camera:


- Record selfies or point of view (P.O.V.) videos with your device!
- Use the camera icon at the bottom right of the screen to switch between selfie and P.O.V.
- Press the circle button on the bottom of the screen to start recording, and press the square button to stop recording your video.

CALENDAR & TIMERS

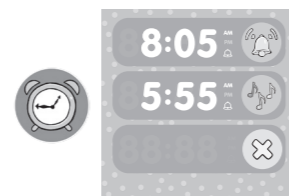

Alarm Clock:

 - Set up to four different alarms with custom wake up sounds.
- Press the X icon next to the time to select that timer.
 - Press on the empty alarm to set the alarm time.
 - Next, press the numbers to select that alarm.
 - Press the hour and minute numbers to change the selection.
 - Continue changing the hour numbers to switch between AM and PM.
 - Press the icon next to AM/PM to set the alarm sound, like a bell, a puppy barking, a rooster, music, and water.
 - When your alarm goes off, Beats will appear.
 - Press the stop icon to turn the alarm off.
- NOTE:** The alarm will stay set for the next day unless you cycle back to the X icon to clear the alarm.

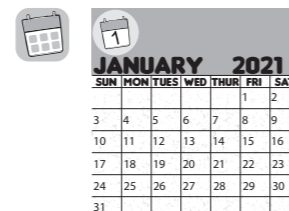

Calendar:

- Click on the Calendar icon in the top left corner to switch from monthly to daily view.
- Swipe left or right on the month calendar view to see different months of the year.
- In the day view, press the stamp icon in the upper right-hand corner to access stickers to mark special occasions, like travel, pets, birthday cake, holidays and more!
- Swipe left or right to cycle through the sticker options.
- Press the check mark to add the sticker to the date.
- Press the X icon to remove it.



TROUBLESHOOTING

The smartwatch has stopped working.	1. Turn the power OFF by pressing and holding the home button until the device turns off. 2. Turn the device back ON by pressing and holding the home button until the device turns on. NOTE: If the device still does not work, charge the battery (see page 4) and follow the steps above.
The touchscreen is not responding properly.	1. Turn the power OFF by pressing and holding the home button until the device turns off. 2. Turn the device back ON by pressing and holding the home button until the device turns on. It should now work properly. NOTE: If the device screen still does not work, charge the battery (see page 4) and follow the steps above. TIP: Use the tip of your finger rather than your finger nail for best results using the touchscreen.
The image or video taken is not clear.	1. Ensure the lighting in the area you are shooting is sufficient. 2. Check that the camera lens is clean. If dirty, wipe with a dry, soft cloth and blow on it to remove debris. See CARE AND MAINTENANCE on page 23.
Cannot connect the device to a computer.	1. Ensure there is a good connection between the device and the computer via the Micro-USB Cable. See MICRO-USB PORT on page 4 and other supporting sections for more information. 2. If the cable is damaged, contact consumer service. Do not attempt to use the cable if it is damaged.
Wireless connectivity is not working properly.	1. Stay within close proximity (about 50 ft./15m with nothing in the way) of other L.O.L. Surprise!™ Smartwatches when connecting wirelessly. 2. The device must have a sufficient amount of battery power to connect wirelessly. Recharge the device using the included Micro-USB cable.
The device is not charging.	1. Only use the included Micro-USB cable to charge the device. 2. It is recommended you only charge the device using a USB port on your computer. 3. Make sure to charge the device regularly, even if it is not in use. A battery that has not been charged in a long time may no longer accept a charge.

LiPo BATTERY SAFE USAGE

This device is equipped with a Lithium Polymer (LiPo) rechargeable battery. Please pay attention to the following cautions for safety use:

- Before recharging, allow the battery to cool for at least 10 minutes after use.
- Do not dispose of the battery in fire or extreme heat.
- Do not use or leave the battery near a heat source such as a fire or a heater.
- Do not strike or throw the battery against hard surfaces.
- Do not immerse the battery in water.
- Keep the battery in a cool, dry place.
- When recharging, only use the Micro-USB Cable specifically included for that purpose.
- Do not over-charge the battery.
- Do not directly solder the battery and pierce the battery with a nail or other sharp object.
- Do not disassemble or alter the battery.
- Charge the battery as necessary. Failure to charge the battery frequently may result in a battery that will no longer accept a charge.
- Do not transport or store the battery with metal objects such as necklaces, hairpins, etc.
- Please recycle a used battery after covering the battery wires/terminals with electrical tape or by inserting it into an individual poly bag. Check local laws and regulations for recycling and/or disposal information.
- Under the environment with electrostatic discharge, the product may malfunction and require the user to reset the product by turning it off and back on again.
- Rechargeable batteries are only to be charged by an adult.

BATTERY LIFE AND MAINTENANCE

Check the battery charge level on the quick menu view. If the battery is yellow, it's time to charge soon. If the battery is red, charge the battery as soon as possible.

USAGE	BATTERY LIFE
Low Usage	5 Days
Typical Usage	2 Days
Heavy Usage	8 Hours

Charge the battery regularly to maintain optimum performance, even when the device isn't regularly in use. For example, charge the device at least once every six months. Turn the device OFF before charging the battery. Keep the device OFF when the device will not be in use for an extended period.

This chart is only an estimate of the projected battery life before charging is needed.

FCC COMPLIANCE

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
 - Increase the separation between the equipment and receiver.
 - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
 - Consult the dealer or an experienced radio/TV technician for help.
- This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.
- Caution: Modifications not authorized by the manufacturer may void users authority to operate this device.
- This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions: 1. This device may not cause interference. 2. This device must accept any interference, including interference that may cause undesired operation of the device.
- CAN ICES-3 (B)/NMB-3(B).



USER GUIDE

Illustrations are for reference only. Styles may vary from actual contents.

6+

576303, 576310

CALENDAR & TIMERS (CONT.)



Timer:

 
- Set a custom timer by swiping up or down on the minutes and seconds numbers to set the desired duration of time.
- Select a preset timer by pressing the icon in the top left. By default these times are:
 - Brushing Teeth: 2 Minutes
 - ZZZ: 30 Minutes
 - Book: 15 Minutes
 - Broom: 15 Minutes
 - Sleep Mask: 2 Minutes
 - Music: 30 Minutes
 - Phone: 15 Minutes

NOTE: You can change the default time on the preset timer by pressing the numbers.

- Press the check to set the timer.
- Press the play button to start the timer.
- Press pause to pause the timer.
- An animation of the timer you selected will appear when the timer is done.

Stopwatch:

- Time yourself doing various activities and having fun!
- Press the play button to start the stopwatch.
- Press the stop button to stop the stopwatch.
- Press the X button to reset the stopwatch.

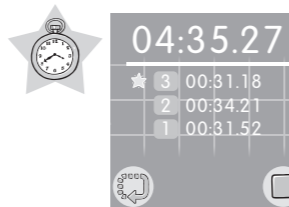

WARNING

This toy produces flashes that may trigger epilepsies in sensitized individuals. A very small percentage of people, due to an existing condition, may experience epileptic seizures or momentary loss of consciousness when viewing certain light patterns or flashing lights. While this product does not contribute any additional risks, it is recommended that parental supervision is enforced during play. If you experience any dizziness or altered vision, disorientation or convulsions, IMMEDIATELY discontinue use and consult a physician. Focus on screens in close proximity for an extended amount of time may cause fatigue or discomfort. For every one hour of play, take a 15 minute break, or take breaks more frequently as needed.

CARE AND MAINTENANCE

- Always keep the port cover closed during use to prevent water or debris from entering the device. Only open the port cover to connect the device to your computer.
- Keep the device clean by wiping it off with a slightly damp cloth and drying it thoroughly. Do not place the device under running water or use harsh chemicals or abrasive materials to clean.
- Remove the device from the watchband and clip/stand to clean. Wipe the accessories with a damp cloth regularly to keep them clean. Always air dry; do not subject to heat.
- Keep the device and accessories out of direct sunlight for long periods of time. Do not expose the device or accessories to direct heat sources.
- Do not drop the device on a hard surface to prevent damage.
- Keep the camera lens clean. If pictures are blurry, it could be because dust or dirt is covering the camera lens. Wipe clean with a dry, soft cloth and/or blow gently on the lens to remove any debris.
- If you do not plan to use the device for an extended period, it is recommended that you turn the device off. Regularly charge the battery when not in use to ensure the battery accepts a charge. See **BATTERY LIFE AND MAINTENANCE** on page 24.

SPLASHPROOF

- While your device can withstand splashes from washing your hands or dancing in the rain, it is not recommended to submerge the device in water.
- To prevent water damage:
 - Always ensure the cover over the Micro-USB port is completely closed to prevent water from getting inside the smartwatch.
 - Do not place the device under running water.
 - Do not submerge in water or wear while showering, bathing or swimming.

RESTARTING THE WATCH

If your device is unresponsive or if you wish to reset the watch to the way it was upon unboxing, press and hold the home button for 8 seconds to reset the watch. **NOTE:** You may need to reset all custom settings.

 
BATTERY DISPOSAL

'Let's care for the environment!'
The wheeled bin symbol indicates that the product must not be disposed of with other household waste. Please use designated collection points or recycling facilities when disposing of the item. Do not treat old batteries as household waste. Take them to a designated recycling facility.

BATTERY REMOVAL INSTRUCTIONS


This toy contains a battery that is non-replaceable. Do not attempt to open the device unless you are permanently disposing the device. Opening the device for any other reason could void the warranty. Battery removal is permanent, and the device will no longer work after removing the battery.

CAUTION: An ADULT must remove the battery for proper disposal. Always wear protective safety goggles in case of battery leakage.

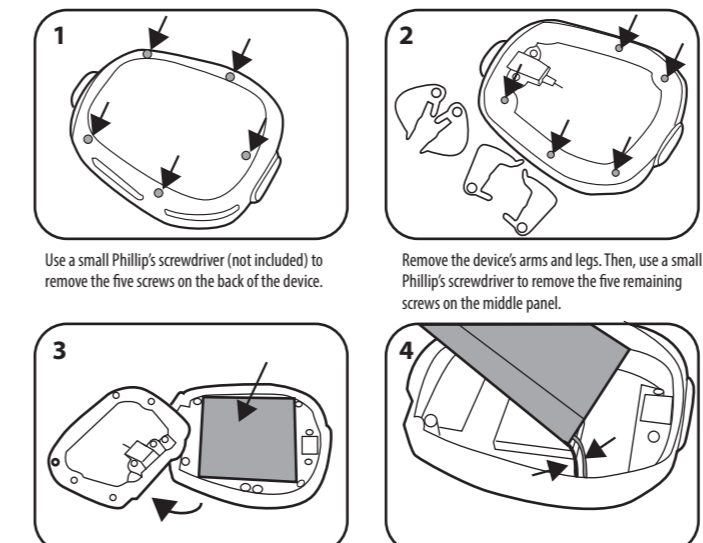

Use a small Phillip's screwdriver (not included) to remove the five screws on the back of the device.

 Remove the device's arms and legs. Then, use a small Phillip's screwdriver to remove the five remaining screws on the middle panel.

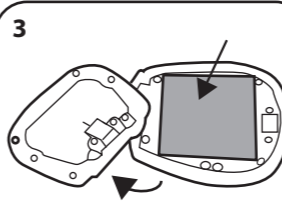

Remove the middle panel to reveal the battery.

Lift out the battery. Use scissors to carefully cut the black and red wires **ONE AT A TIME**. Cover the wires/terminals with electrical tape and properly dispose of the battery.

DATED SALES RECEIPT REQUIRED FOR PROOF OF PURCHASE

For more information including the latest instructions, visit:
WWW.MGAE.COM



WWW.LOLSURPRISE.COM
©2021 MGA Entertainment, Inc.
L.O.L. SURPRISE!™ is a trademark of MGA in the U.S. and other countries.
All logos, names, characters, likenesses, images, slogans, and packaging appearance are the property of MGA.

Microsoft® and Windows logos are trademarks of Microsoft Corporation in the United States and other countries.
Macintosh and Mac logos are trademarks of Apple Inc. in the United States and other countries. All other trademarks are the property of their respective owners.

MGA Entertainment, Inc.
9220 Winnetka Ave. Chatsworth,
CA 91311 U.S.A.
(800) 222-4685

MGA Entertainment UK Ltd.
50 Presley Way, Crownhill,
Milton Keynes,
MK8 0ES, Bucks, UK
+0800 521 558

MGA Entertainment (Netherlands) B.V.
Baronie 68-70, 2404 XG Alphen a/d Rijn,
The Netherlands
Tel: +31 (0) 172 758038

Imported by MGA Entertainment Australia Pty Ltd.
Suite 2.02, 32 Delhi Road
Macquarie Park NSW 2113
1300 059 676