



TREEHOUSE


WARNING:
CHOKING HAZARD-Small parts.
Not for children under 3 years.

SKU: 577157

For ages 3+
ADULT SUPERVISION REQUIRED

CONTENTS

- | | | |
|------------------------|------------------------|---|
| A. Treehouse | G. Bridge | M. Elevator (located on the back of big tree) |
| B. Removable Clubhouse | H. Stool | N. Hammer and Saw |
| C. Spinning Lookout | I. Tomato Floor Pillow | O. Paint Bucket and Paint Brush |
| D. Telescope | J. 2 Nut Hammocks | P. Juice Box and Sandwich |
| E. Wind Up Basket | K. Ladder | Q. 2 Mini Lalaloopsy™ Dolls |
| F. Donut Tire Swing | L. Zip-Line | R. 2 Mini Lalaloopsy™ Pets |

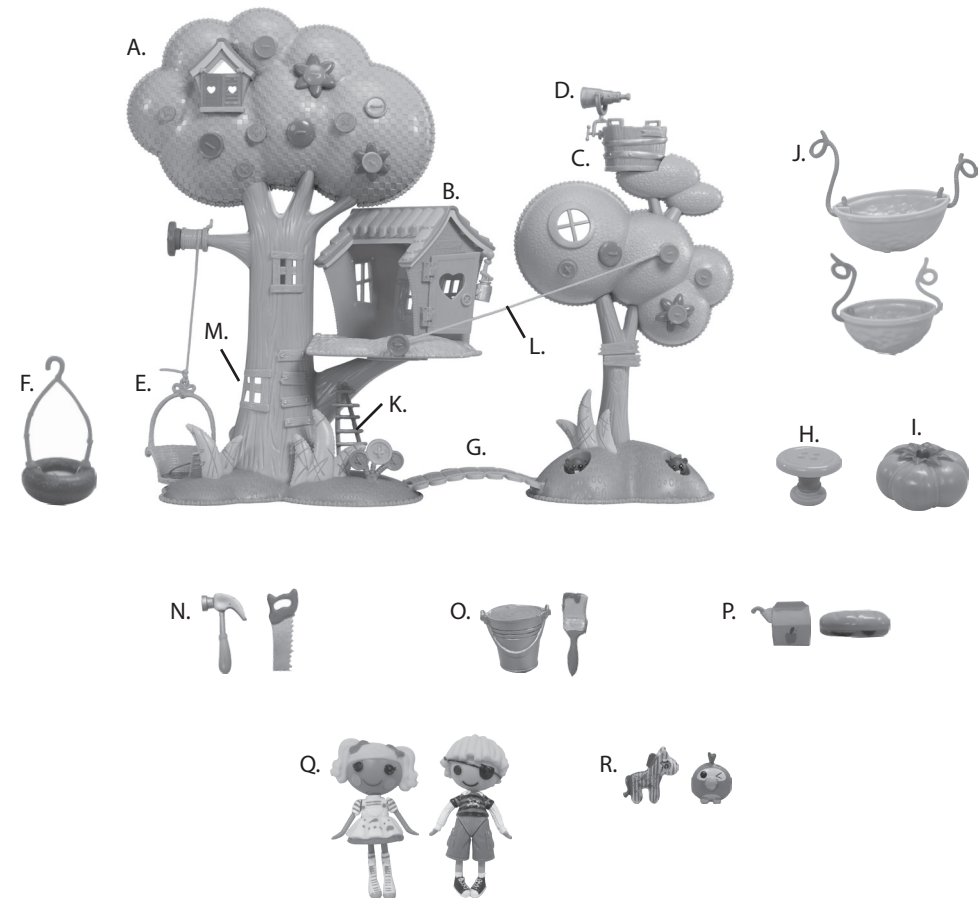

Please keep this manual as it contains important information.



0222-1-EINT
Printed in China

©2022 MGA Entertainment, Inc.
LALALOOPSY™ is a trademark of MGA in the U.S.
and other countries. All logos, names, characters,
likenesses, images, slogans, and packaging
appearance are the property of MGA.

The preferred method of contact for
Customer Service is through our
e-mail contact form at
www.mgae.com

MGA Entertainment, Inc.
9220 Winnetka Ave, Chatsworth,
CA 91311, U.S.A.
(800) 222-4685

MGA Entertainment UK Ltd.
50 Presley Way, Crownhill
Milton Keynes, MK8 0ES, Bucks, UK
+ 0800 521 558

MGA Entertainment (Netherlands) B.V.
Baronie 68-70, 2404 XG Alphen a/d Rijn
The Netherlands
Tel: +31 (0) 172 758038


Imported by MGA Entertainment Australia Pty Ltd.
Suite 2.02, 32 Delhi Road
Macquarie Park NSW 2113
1300 059 676

Illustrations are for reference only. Styles may vary from actual contents.
Please remove all packaging including tags, ties & tacking stitches before giving this product to a child.

QUICK START

FRONT

The clubhouse can be removed and reattached to face the front or back of the treehouse. When removing and reattaching the clubhouse, make sure the tabs on the clubhouse align with the slots on the tree.

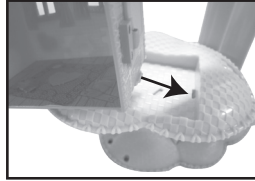

Turn the button knob to lower or raise the basket.

Secure doll by inserting it in the belt.

Spin the lookout!

Secure the doll by placing it into the slit in the donut tire swing.

To add tension to the zip-line, wrap the rope around the two buttons.

Connect the trees by attaching the bridge.

Poppin' Gophers: Push down the gophers one at a time.

BACK

Hang the hammocks by inserting the pegs on the trees into the ropes' loops. Hang the smaller hammock inside the small tree and the bigger hammock inside the big tree.

Elevator Clip

Elevator Handle

Secure the doll into the elevator clip and use the elevator handle to slide the elevator up or down.


Turn the treehouse