

## SAFE BATTERY USAGE

Use alkaline batteries for best performance and longer life.

- Use only the battery type recommended for the unit.
- Batteries should be replaced only by an adult.
- Insert batteries with the correct polarity (+ and -).
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc), or rechargeable batteries.
- Do not short-circuit batteries.
- When not used for an extended time, remove batteries to prevent possible leakage and damage to the unit.
- Do not mix rechargeable and non-rechargeable batteries.
- Rechargeable batteries are to be removed from the toy before charging.
- Rechargeable batteries are to be recharged only under adult supervision.
- Do not recharge non-rechargeable batteries.
- Exhausted batteries are to be removed from the toy.
- Do not dispose of batteries in fire as they may leak or explode.



Ages 6+





SKU: 577829

ADULT SUPERVISION REQUIRED

### CONTENTS

- A. Convertible Car      B. 2 Floor Mats      C. Sheet of Stickers

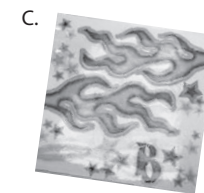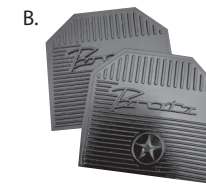


Illustrations are for reference only. Styles may vary from actual contents.  
Please remove all packaging including tags, ties & tacking stitches before giving this product to a child.

### BATTERY INSTALLATION

Before beginning, an adult must install fresh alkaline batteries. Here's how:

1. Using a Phillips screwdriver (not included), remove the screws and battery compartment covers located in the trunk of the toy.
2. Install three (3) fresh 1.5V AAA (LR03) alkaline batteries (not included) in the toy, making sure the (+) and (-) ends face the proper direction as indicated inside the battery compartment.
3. Replace the compartment covers and tighten the screws.

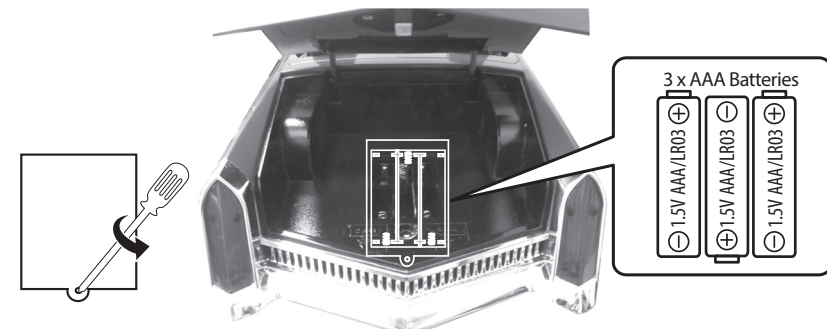

'Let's care for the environment!'

The wheelee bin symbol indicates that the product must not be disposed of with other household waste. Please use designated collection points or recycling facilities when disposing of the item. Do not treat old batteries as household waste. Take them to a designated recycling facility.

Please keep this manual as it contains important information.



Printed in China  
0521-0-E/INT

© MGA Entertainment, Inc.  
BRATZ® is a trademark of MGA in the U.S. and other countries. All logos, names, characters, likenesses, images, slogans, and packaging appearance are the property of MGA. Manufactured and distributed under license by MGA Entertainment, Inc.

The preferred method of contact for Customer Service is through our e-mail contact form at [www.mgae.com](http://www.mgae.com)

MGA Entertainment, Inc.  
9220 Winnetka Ave. Chatsworth,  
CA 91311 U.S.A.  
(800) 222-4685

MGA Entertainment UK Ltd.  
50 Presley Way, Crownhill  
Milton Keynes, MK8 0ES, Bucks, UK  
+ 0800 521 558

MGA Entertainment (Netherlands) B.V.  
Baronie 68-70, 2404XG Alphen a/d Rijn, The Netherlands  
Tel: +31 (0) 172 758038

Imported by MGA Entertainment Australia Pty Ltd  
Suite 2.02, 32 Delhi Road  
Macquarie Park NSW 2113  
1300 059 676

## TO PLAY WITH THE CRUISER

1. To open, gently pull the car doors. To close, gently push until door snaps into place (Fig. 1).
2. Shift gear can be moved left to right and front to back (Fig. 2).
3. Slide the ON/OFF switch to ON position to turn on headlights and taillights (Fig. 3).
4. Glove compartment opens (Fig. 4).
5. To open the trunk, press the button in the center of the trunk lid and lift lid up (Fig. 5a and 5b)
6. Pull the seat belt and snap it into the buckle on the opposite side of the seat to hold and keep your doll (not included) safe while cruising (Fig. 6a and 6b).

Fig. 1

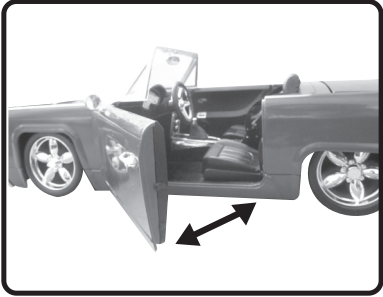


Fig. 2

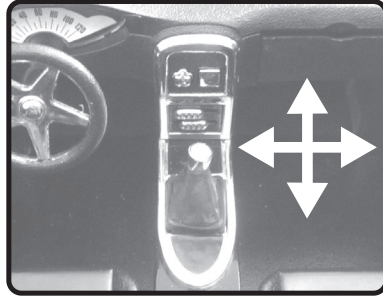


Fig. 3

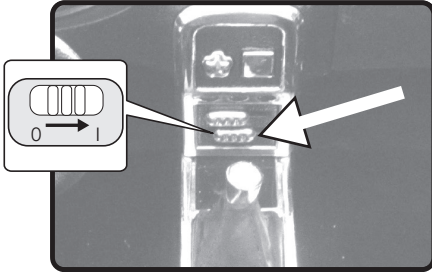


Fig. 4

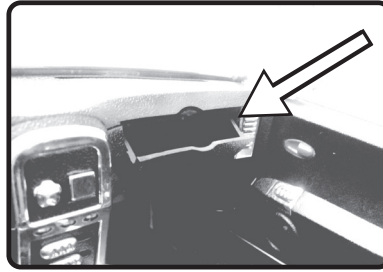


Fig. 5a

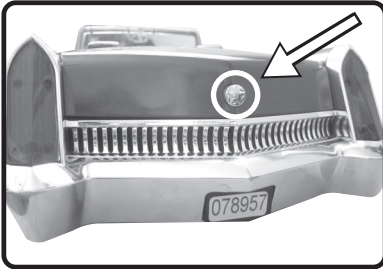


Fig. 5b


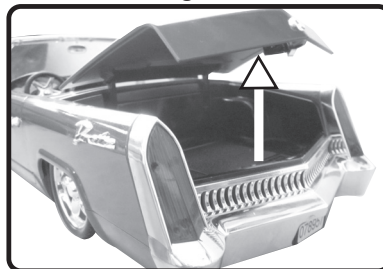


Fig. 6a



Fig. 6b

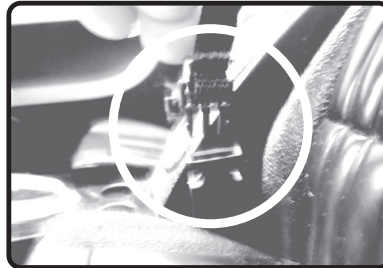

## IMPORTANT INFORMATION

- Do not play with car in the street or where there is vehicular traffic or in heavily traveled areas with pedestrians.
- Do not stand on, sit on or throw car, as doing so can result in injury to the person and irreversible damage to the unit.
- Do not run car into furniture, walls, pets, people etc., as doing so may cause injury to the person and pets and irreparable damage to the unit.
- Do not allow long hair or loose apparel such as shoestrings near the turning wheels of the car.
- Do not drive car through water, mud, etc.
- If the car stops working properly or doesn't work as it should, turn off car and then turn it back on. If there is still a problem, replace the batteries.
- Turn off toy after use to conserve battery power.
- Stickers are only meant to be used with this toy.
- Do not apply stickers to other surfaces as it may not be completely removed.
- For best results, use on flat, hard surface.