

RAINBOW HIGH™

WORLD TOUR BUS & STAGE

WARNING:
CHOKING HAZARD—Small parts.
Not for children under 3 years.

SKU: 583721
AGES 6+
ADULT ASSEMBLY REQUIRED



SCAN FOR INSTRUCTIONAL VIDEO:



Please keep this manual as it contains important information.



WWW.RAINBOWHIGH.COM
©2022 MGA Entertainment, Inc.
RAINBOW HIGH™ is a trademark of MGA in the U.S. and other countries. All logos, names, characters, likenesses, images, slogans, and packaging appearance are the property of MGA.

The preferred method of contact for Customer Service is through our e-mail contact form at www.mgae.com

#COLLECTTHERAINBOW

MGA Entertainment, Inc.
9220 Winnetka Ave. Chatsworth, CA 91311
U.S.A.
(800) 222-4685

MGA Entertainment UK Ltd.
50 Presley Way, Crownhill, Milton Keynes,
MK8 0ES, Bucks, UK
+ 0800 521 558

MGA Entertainment (Netherlands) B.V.
Baronie 68-70, 2404 XG Alphen a/d Rijn,
The Netherlands
Tel: +31 (0) 172 758038

Imported by MGA Entertainment Australia Pty Ltd.
Suite 2.02, 32 Delhi Road
Macquarie Park NSW 2113
1300 059 676

Illustrations are for reference only. Styles may vary from actual contents.
Please remove all packaging including tags, ties & tacking stitches before giving this product to a child.
BEFORE BEGINNING – please remind to remove the protective film (vanity) before use.

! WARNING

- Avoid placing the tour bus on an uneven surface or anywhere which might offer the possibility of tipping.
- Do not sit, stand, or jump on the unit, as doing so may result in bodily injury and/or damage to the unit.
- Always check the condition of the product before giving to children. Do not use if the product is worn or damaged. Dispose the product immediately if broken.
- Do not give to a child under the intended age group.
- Keep long hair and other loose objects, like shoelaces, away from the rotating tires of the tour bus.
- Do not play with the tour bus in the street, or where there is vehicular traffic, or in heavily traveled areas with pedestrians.
- Avoid driving the tour bus through water, mud, etc.

IMPORTANT INFORMATION

- Dolls are shown in this manual for demonstration only. Dolls are not included.
- When lifting up the tour bus, hold the front and back of the unit at the same time.
- Only use a dry cloth to clean the product. Never use a corrosive or abrasive substance to clean the product.

SAFE BATTERY USAGE

- Use alkaline batteries for best performance and longer life.
- Use only the battery type recommended for the unit.
- Batteries should be replaced only by an adult.
- Insert batteries with the correct polarity (+ and -).
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc), or rechargeable batteries.
- Do not short-circuit batteries.
- When not used for an extended time, remove batteries to prevent possible leakage and damage to the unit.
- Do not mix rechargeable and non-rechargeable batteries.
- Rechargeable batteries are to be removed from the toy before charging.
- Rechargeable batteries are to be recharged only under adult supervision.
- Do not recharge non-rechargeable batteries.
- Exhausted batteries are to be removed from the toy.
- Do not dispose of batteries in fire as they may leak or explode.



WARNING:

This product contains a button cell battery. A button cell battery can cause severe or fatal injuries in as little as two hours if it is swallowed or placed inside any part of the body. Dispose of used batteries immediately. Keep new and used batteries away from children. If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention.

IMPORTANT NOTES ABOUT BUTTON BATTERIES

- WARNING - KEEP BATTERIES OUT OF REACH OF CHILDREN
- Swallowing may lead to serious injury in as little as 2 hours or death, due to chemical burns and potential perforation of the esophagus.
- If you suspect your child has swallowed or inserted a button battery immediately call the 24-hour Poisons Information Centre on 13 1126 (Australia)/ your local emergency services for fast, expert advice.
- Examine devices and make sure the battery compartment is correctly secured, e.g. that the screw or other mechanical fastener is tightened. Do not use if compartment is not secure.
- Dispose of used button batteries immediately and safely. Flat batteries can still be dangerous.
- Adults shall tell potential users about the risk of button batteries and keep their children away from button cell. Adult supervision is required.



'Let's care for the environment!'

The wheeled bin symbol indicates that the product must not be disposed of with other household waste. Please use designated collection points or recycling facilities when disposing of the item. Do not treat old batteries as household waste. Take them to a designated recycling facility.

FCC COMPLIANCE



NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Caution: Modifications not authorized by the manufacturer may void users authority to operate this device. CAN ICES-3 (B)/NMB-3(B).


FOLDING

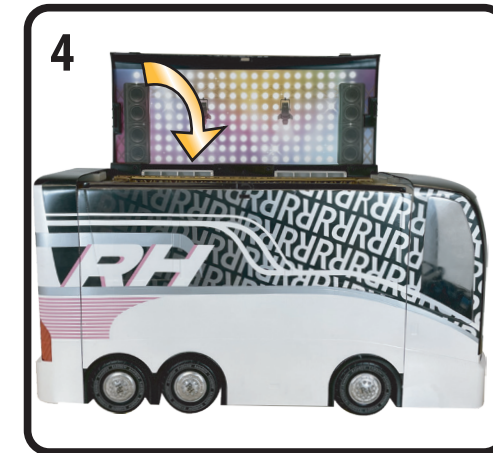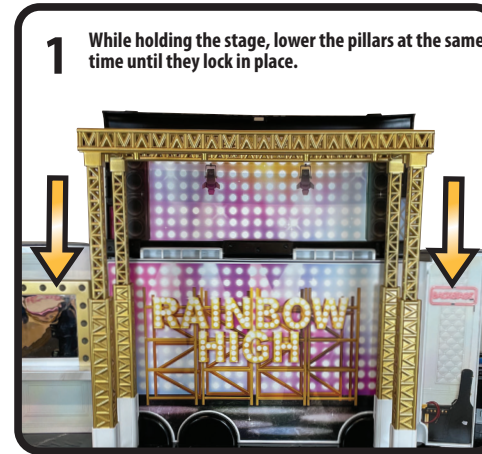



The top will lock in place as soon as it is lowered.




Lights can also be added to the stage's floor. Insert the lights into the two openings on the stage. Press the button on the back of the light once to turn it on. Press it again to turn it off after playing.

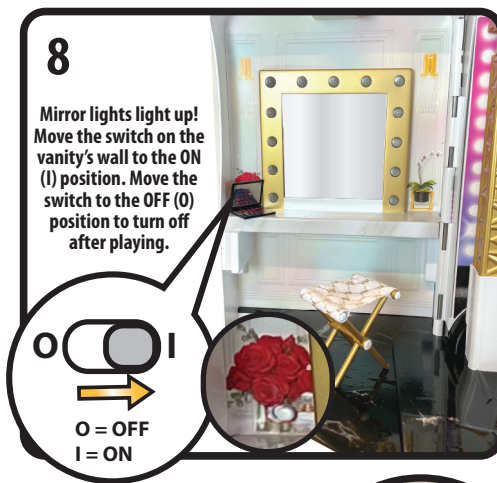

8
Mirror lights light up!
Move the switch on the vanity's wall to the ON (I) position. Move the switch to the OFF (O) position to turn off after playing.

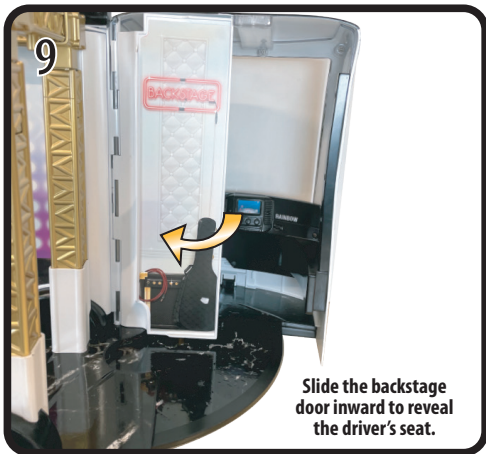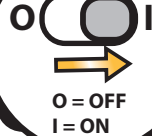


Slide the backstage door inward to reveal the driver's seat.

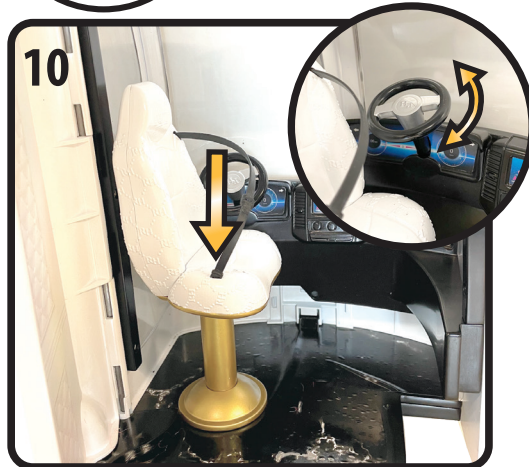

10
Rotate the door and driver's seat! When inserting the doll, lift up the steering wheel, buckle the seatbelt and then lower the steering wheel.




Rotating driver's seat!

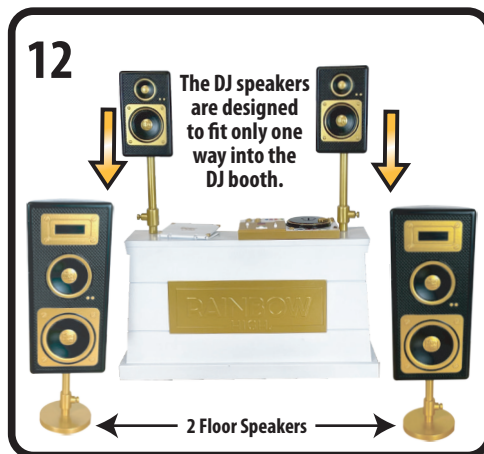

12
The DJ speakers are designed to fit only one way into the DJ booth.
2 Floor Speakers

CONTENTS


- A. Tour Bus B. DJ Booth C. 2 DJ Speakers D. 2 Floor Speakers E. Mixing Board
F. Vanity Chair G. Eyeshadow Palette H. Laptop I. 4 Lights

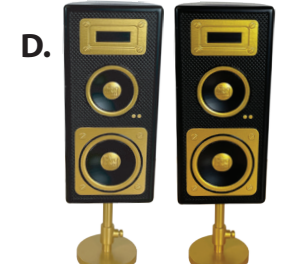

BEFORE BEGINNING

Before beginning, remove the pull tabs for the vanity and lights. Pull tabs are located on the battery compartment.

LIGHTS

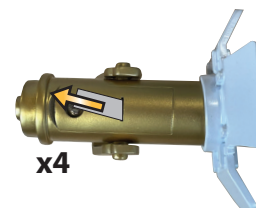

VANITY




The battery compartment for the vanity is under the rear bumper.

BATTERY REPLACEMENT


An adult must install fresh alkaline batteries in the unit should the batteries need replacing. Here's how:

1. Using a Phillips screwdriver (not included) remove the screw and battery compartment cover from under the rear bumper or the top of the lights.
2. Install three (3) 1.5V AG13 (LR44) alkaline batteries (not included) into either the vanity or the light, making sure the (+) and (-) ends face the proper direction as indicated inside the battery compartment.
3. Replace the compartment cover and tighten the screw.

LIGHTS

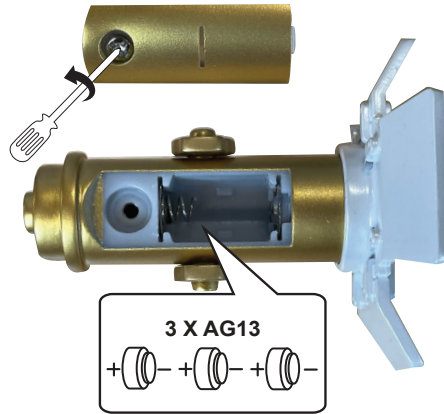

VANITY

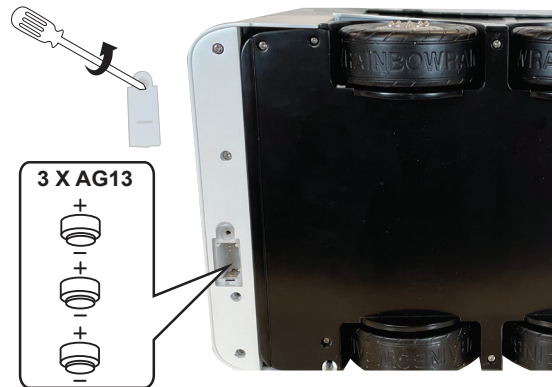

LET'S PLAY!

