





General description

Pirez folding e-bikes are fantastic, especially if you have limited space. Our folding e-bike can be folded away in a cupboard, under stairs, in the boot of a car, a boat or even camping.

A bike taking up valuable space in a garage, balcony or hallway can be annoying, especially if you live in a small unit or apartment. Our folding e-bike will give you the flexibility of having a bike in the home without impacting on your minimal available space or just make it simpler to store and transport.

If you use public transport and need to use several modes such as a bus trip then a rail trip, take a ride instead of the bus then fold up the bike to take on the train then ride at the other end to your final destination. The electric motor can assist you through any difficult terrain such as hills.

But the best thing about our folding e-bike, besides the powerful pedal assist motor, is that it's quite stealthy with the battery **hidden** in the seat post, and it's the lightest product on the market at 17.5kg and yet still provides all the benefits of a full-sized electric bike.

Legal to ride on Australian roads (Refer to relevant State regulations).

Suitable for height of riders 150-190cm.

≤ 62 dB(A)

Includes 12-month warranty.


Pedal:

Specifications E-bike Product name: MXUS 250W brushless geared DC Brakes: 160mm disc brakes Motor: Model name: OSEB02 Rated output power: 250W Rim: 20 inch Al-Alloy 13G36H 1470mm x 580mm x 1120mm Kenda 20 x 1.95 Size: Motor efficiency: ≥ 80% Tyre: Folded size: 820mm x 370mm x 680mm Rated RPM: 265±10 r/min Chain wheel: Prowheel 52T Wheel base: 1007mm Rated voltage: 36V Free wheel: Shimano 7 Speed 17.5 kg 40 N.m Front hub: Sigma Al-Alloy Net weight: Max torque: 50 km Overcurrent protection: 12±1A Chain: **KMC** Range: Low voltage protection: Handle bar: **VELO** 100 kg 30±1V Max Load: Max Speed: 25 km/h kWh: ≤ 1.2 kW.h Display: **Kunteng LCD** Kunteng sine wave FOC Modes: 5 levels Charging time: 3 hrs Controller: Samsung Li-Ion 20 inch Al-Alloy e-bike lever Battery type: Tyre diameter: **Brake Levers:** Battery capacity: 36V 5.2Ah/6.4Ah/7.0Ah Frame: 20 inch 6061 Al-Alloy foldable Saddle: KNUS

20 inch 6061 Al-Alloy

Technical Diagram

Noise:

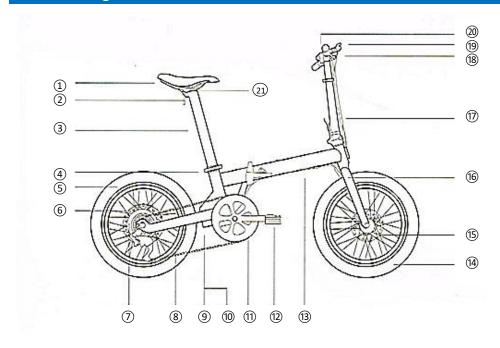

Front fork:

1. Saddle or seat

Foldable pedals

- 2. Rear reflector
- 3. Seatpost battery
- 4. Seatpost clamp
- 5. Rear wheel
- 6. Rear disc brake
- 7. Motor
- 8. Chain
- 9. Controller
- 10. Power interface
- 11. Chain wheel
- 11. Chain wheel12. Folding Pedal
- 13. Frame
- 14. Front wheel
- 15. Front disc brake
- 16. Front fork
- 17. Folding head stem
- 18. Handlebar
- 19. Brake lever
- 20. LCD display
- 21. Charging port

Operating the display unit

C ▼ Down ▲ Up Power LCD backlight Cruise Mode Legend:

Operating the Visual Display Unit (VDU)

- 1. Press and hold the Opower button for 3 seconds to display mode (A).
- Press the power button again to move to mode (B).
- Press the power button a third time to move to mode (C).
- Press and hold the **O**power button to turn off.

MODE (A)



· 777 00:48 5 183

000 0008,4 k

V// 00:48 ...

5 28.9

vol 0036.8

Mode (A) indicates:

- Battery Level / TIM: Single ride time (hh:mm)
- PAS Class / Speed (km/h)
- **DST:** Single distance travelled (km)

MODE (B) Mode (B) indicates:

- Battery Level / **TIM:** Total ride time (hh:mm)
- PAS Class / AVS: Average Speed (km/h)
- **ODO:** Total distance travelled (km)

MODE (C) Mode (C) indicates:

- Battery Level / TIM: Total ride time (hh:mm)
- PAS Class / MAX: Maximum Speed (km/h)
- **ODO:** Total distance travelled (km)

Press and hold the ▼ Down button until the ★ cruise control icon appears.

The e-bike will cruise at a fixed speed of 6km/h.

Release the button to exit cruise mode.

Ride the e-bike to your desired speed (must be over 7km/h). **Cruise mode - CONTROL**

Press and hold the ▼ Down button for 3 seconds to enter cruise mode.

Press the brake lever or any button to exit cruise mode.

Press and hold the **\(\Delta\)** Up button to turn on the backlight.

Press and hold the **\(\Limes\)** Up button again to turn off.

Pedal Assist System (PAS) mode Press the ▲ Up or ▼ Down button to choose the PAS speed from 0-5

Care & Maintenance

Cruise mode - AUTO

LCD Backlight


General care & maintenance

- Read these instructions carefully before riding the e-
- When riding you must follow the local laws and regulations, such as wearing a helmet.
- Always take care and ride safely.
- Ensure you check the brake system, tyre pressure and battery charge prior to riding each time.
- Always use your front brakes first for stopping.
- Do not ride through water of a depth greater than
- Commence your ride with the PAS speed set to 3.
- · Keep the lamp switched on at night.
- Check and replace wearable parts such as tyres and brake pads at regular intervals.
- Check all screws, cables, chains and other parts regularly.
- Minors, pregnant or intoxicated persons must not ride an e-bike.
- Store the e-bike in an environment free from moisture, corrosion or high temperatures.
- Store the e-bike away from severe sun and rain.

Battery and Charging Information

- A red indicator light on the charger means the battery is charging. Once the indicator light turns green the battery is fully charged.
- Do not expose batteries to temperatures < -20°C or >35°C
- Fully charge the battery and store safely if not to be used for over 30 days.
- Fully charge the battery at least every 60 days or the battery may self discharge and cause damage. This damage would void the warranty.
- Never expose the battery to a damp environment or submerge in water.
- Never short circuit the battery terminals.
- Charge with the original charger only.
- Do not disassemble or cause impact to the battery pack.
- Do not place in a fire or drop from a high position.
- Avoid contact with the terminals
- Do not charge the battery while it is powered on.
- Insert the charger cable into the battery before pluging into a power
- Do not cover the charger with anything while charging.
- Once charging is completed, remove the charger cable from the battery before removing the plug from the power outlet.
- Keep battery out of reach of children.
- The capacity of Li-Ion batteries will decrease if stored below -10°C.
- Recycle or dispose of batteries in accordance with local regulations.


Folding the e-bike

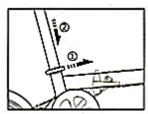

Lower the seat

Hold the seat post and loosen the clamp.


Push the seat post down then tighten the clamp.

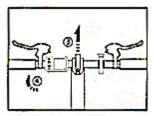

Twist the handle bar

Loosen the handle bar clamp.


Turn the handle bar clockwise until vertical then tighten the clamp.

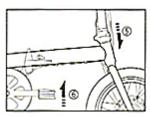

Release the lock clamp and fold the head tube down.

Fold the pedals

Fold the pedals in by pushing the pedal towards the crank arm then lifting the pedal up.

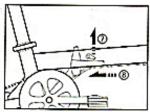


Fold in half

Release the safety cap.

Pull the lock bar then fold the main tube.


Charging the e-bike

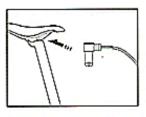

Charging the battery in place Remove the rubber dust cover from the charging port located underneath the seat.

Insert the charger cable.

Once charged, remove the cable and return the cover.

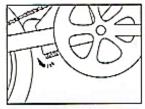

Charging a removed battery

To remove a battery and charge separately, release the seatpost clamp.

Remove the battery.

Insert the charger cable.

Once charged, return the battery and refasten the clamp.

Accessories

- Front mud guard
- Rear mud guard
- Reflectors
- Lamps

Choose and instal accessories according to your needs.

Technical Support and Warranty

Service and Maintenance

Pirez provide ongoing support and maintenance, including:

- Troubleshooting
- Various levels of regular servicing
- General repairs
- Replacement parts or upgrades
- Quality bike accessories.

Warranty

Pirez provide a 12-month warranty on all our bike products.

Please refer to our website for terms and conditions or warranty information at:

www. pirez .com.au

Support Contacts

Pirez provide ongoing after sales support.

Please contact **Pirez Electric Bikes** at:

Pirez Showroom and Warehouse

Location: 4 / 207 Derrimut Drive

Derrimut VIC 3026

Email: sales@pirez.com.au

Ph: 03 7035 0190