



**CET CryoSpas**

RESEARCH | DESIGN | PERFORMANCE

## CryoSpa Chiller Operation

1. Check the CryoSpa is filled with water to the water level marker [absolute minimum is above the level of the skim weir].
2. Switch on Power to Chiller – Button on FRONT of Chiller  
Chiller display will light up [If not make sure ON/OFF switch on the Chiller is ON].
3. Setting Temperature:
  - a. Press [and release] SET button
  - b. Use UP and DOWN arrows to desired Temperature
4. Setting Range: [NB: Do NOT alter RANGE!!!]
  - a. Press and HOLD the SET button for c5 seconds
  - b. Display should show 1.0
  - c. DO NOT CHANGE
5. Clean fluff from Air Intake Screen on front of chiller as required.
6. Ensure Air Outlet Grille on Chiller has a minimum of 0.5m free space to permit air to dissipate.
7. YOU MUST NOT OPERATE CHILLER WHEN DRY or AIR LOCKED i.e. No Flow

#Chilling4Champions

CET Ltd.  
Tel. +44 (0)2892 69 00 56  
Email: [help@cetcryospas.com](mailto:help@cetcryospas.com)