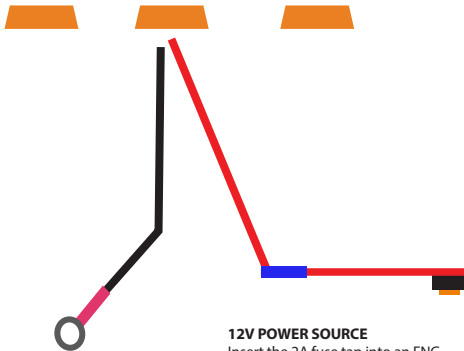


MARKER LIGHTS**GROUND**

All white and black wires connect together. Use the terminal O ring to attach to the 10mm hex bolt on the engine bay sidewall you'll see lots of white and black striped wires connected to it.

12V POWER SOURCE

Insert the 2A fuse tap into an ENG IGR circuit. This is ignition-activated. For gas models, the preferred slot is on the passenger side. ENG IGR NO 1. For hybrids there are a few ENG IGR slots on the driver's side. Any of these will work. Simply remove the fuse in the fuse box (WITH THE TRUCK OFF!) And insert it in the empty slot in the fuse tap.