

LIBERTY SAFE

HDV-150 AND HDV-150X SECURITY VAULT QUICK START GUIDE



ALWAYS PROTECTED™

LIBERTYSAFE.COM

CONTENTS IN THE BOX

- (1) HDV-150 or HDV-150X SECURITY VAULT
- (2) Backup keys
- (1) Security cable
- (1) USB-C charge cable
- (1) Owner's Manual

NOTE: If parts are missing or damaged, contact Technical Support at 800.247.5625

IMPORTANT: You received two keys with your SECURITY VAULT. These keys are an alternate means to open the SECURITY VAULT.

DO NOT STORE THE KEYS IN THE VAULT.

Store your keys in another secure location.

GETTING STARTED

STEP 1: OPENING VAULT

There are three ways to initially open the security vault:

A FINGERPRINT SCANNER (HDV-150X ONLY)

Factory setting allows the vault to open for any fingerprint.

B 5-DIGIT CODE: Factory code is 12341

C KEY: Locate the backup keys in the plastic bag. Key port is on the front panel of the SECURITY VAULT. Insert key and turn clockwise to open the SECURITY VAULT.

CAUTION: STORE THE BACKUP KEYS IN A SECURE LOCATION AWAY FROM THE SECURITY VAULT. DO NOT LOCK KEYS INSIDE THE VAULT.

POWER SUPPLY

SECURITY VAULTS are powered by a single 3.7v rechargeable lithium battery (included).

A single USB-C charge port is located on the side of the SECURITY VAULT to recharge the battery

STEP 2: CHARGING THE SYSTEM

The 3.7v lithium battery comes installed in the safe. Users can access their new SECURITY VAULT immediately.

TO REACH FULL CHARGE: Using a USB-C charge cord, plug the SECURITY VAULT into a 5V 1A-2.4A charge source. The LED light next to the charge port will flash during charging. When the light turns off, the battery of your SECURITY VAULT is fully charged.

NOTE: THE 3.7v LITHIUM BATTERY IS THE ONLY POWER SOURCE. The USB-C charge cord is for charging only and will not function as power source. Once the battery is fully charged, the cord should be removed from the SECURITY VAULT charge port.


STEP 3: ADMINISTRATION BUTTON FUNCTIONALITY

THE ADMINISTRATION BUTTON HAS THREE FUNCTIONS:

- Memory reset
- Fingerprint enrollment initiation. **(HDV-150X ONLY)**
- 5-digit code entry.

LOCATION

The Administration Button is located on top of the inner bezel (image).

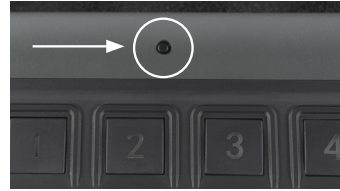

ENTERING A FINGERPRINT (HDV-150X ONLY)

To enter a fingerprint, press the “Administration Button” until you hear one beep, release your finger, then place the finger you want to enter into the system on the scanner.

The blue light will turn green, and the system will beep. Lift your finger and repeat two more times (three total). The third time, the green light and beep will last slightly longer indicating the scan is complete.

If the scan is unsuccessful, the blue light will turn red, and you will hear a triple beep.

The system will hold up to 30 fingerprints.

If a 31st fingerprint is entered, the blue light will turn red, and you will hear a triple beep.

ENTERING A 5-DIGIT CODE

To enter a 5-digit code, press the “Administration Button”. You will hear a single beep, then a double beep, release your finger. Enter the 5-digit code you desire. A double beep will indicate the new code is set.

The system will only hold one code at a time.

CLEARING STORED FINGERPRINTS AND CODES

To return the system back to factory settings (12341 and any fingerprint. HDV-150X ONLY for fingerprints.) Press and hold the Administration Button until you hear a single beep - double beeps - and a final longer, single beep.

The system is cleared of existing codes and fingerprints and ready to reprogram to your needs.

OPENING THE SECURITY VAULT

Using the fingerprint scanner (**HDV-150X ONLY**): Gently hold the fingerprint of your finger on the sensor until you hear a double beep and the light around the sensor turns green.

If your fingerprint does not match, you will hear a triple-beep and the light around the sensor will turn red.

The fingerprint sensor compares your fingerprint to any and all stored fingerprints. The door will open quickly when a match is found.

Interior light will stay on for 15 seconds.

Using the 5-digit code (**BOTH MODELS**): Enter the 5-digit code. If the code is correct, you will hear a double beep and the door will open. If the code is incorrect, you will hear a triple beep.

If the incorrect code is entered five times in a row, the system will not allow another scan or code to be entered for 60 seconds.

LIGHT INDICATIONS

LOW BATTERY: On the keypad, the blue lights of numbers 2 & 3 will be lit on the keypad.

Charging: The small LED adjacent to the USB-C charge port will be flash red during charging. Once battery is fully charged, the LED will turn off.

FINGERPRINT SENSOR (HDV-150X ONLY): The fingerprint sensor will have a blue light circling the sensor when a fingerprint is presented. If the scan is successful, the light will turn green.

DOUBLE BEEP: If the scan is not successful, the light will turn red.

TRIPLE BEEP: If a fingerprint scan fails five times in a row, the system will not allow another scan or code to be entered for 60 seconds.

WARRANTY INFORMATION

Register your vault to activate Liberty's 2-year manufacturer's warranty.

To register online, visit: www.LibertySafeHD.com/warranty

DISCLAIMER: Neither seller nor manufacturer shall be liable for any injury, loss or damage, direct or consequential, arising out of the use of, or the inability to use the vault. The user shall determine the suitability of the vault before the intended use and user assumes all risk and liability whatsoever in connection therewith.

WARNING: It is never recommended that a loaded gun be kept in this or any other vault.



ALWAYS PROTECTED™

LIBERTYSAFE.COM

For additional product info, instructional videos, FAQ's & troubleshooting, visit:

www.LibertySafe.com or call: 1-800-247-5625



REV 5.20.2022 LIBERTY SAFE & SECURITY PRODUCTS, INC.