



AIR FRYER OVEN

PREMIUM 13 QUART

TAOTRONICS



Questions or Concerns?
support@taotronics.com

TT-AF002
User Manual



CONTENTS

KNOWING YOUR AIR FRYER OVEN	02
USING YOUR AIR FRYER OVEN	04
CLEANING AND MAINTENANCE	10
TROUBLESHOOTING	12
WARRANTY AND SERVICE	13

“WARNING

BEFORE USING THIS APPLIANCE READ ALL INSTRUCTIONS AND CAUTIONARY MARKINGS IN YOUR USER MANUAL AND ON THE APPLIANCE

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning the use of the appliance by person responsible for their safety.

- Close supervision is necessary when any appliance is used by or near children. Children should be supervised to ensure that they do not play with the appliance. Cleaning and user maintenance shall not be done by children unless they are older than 8 and supervised.
- Use the appliance only for intended household purposes as described in this User Manual. Any other use is not recommended that may cause fire, electric shock, or injury to persons.

DO NOT place the appliance against a wall or other appliances. Leave at least 4 inches of free space on the back and sides and 4 inches of free space above the appliance.

- DO NOT place anything on top of the appliance.
- DO NOT place on a stove, near gas or electric burners, or in a heated oven.
- DO NOT leave the appliance unattended while in use. Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- DO NOT place anything on top of your air fryer. DO NOT store anything inside your air fryer.
- Keep your air fryer away from flammable materials (curtains, tablecloth, etc.). Use on a flat, stable, heat-resistant surface away from heat sources or liquids.
- After using the appliance, the metal cover inside is very hot, avoid contact with it after cooking. Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Immediately unplug the appliance if you see dark smoke coming out of the appliance. Wait for the smoke emission to stop, before you remove the pan from the appliance.

This appliance must be provided with correct voltage via a professionally installed power socket. Make sure the voltage indicated on the label of the appliance is the same as your local supply.

- DO NOT operate the appliance if the plug, the main cord or the appliance itself is damaged. Always make sure that the plug is inserted properly into a wall outlet.
- DO NOT let the power cord hang over the edge of table or counter. Keep away from hot surfaces.
- DO NOT plug in the appliance or operate the control panel with wet hands.
- NEVER connect this appliance to an external timer switch or separate remote control system in order to avoid a hazardous situation. To disconnect, turn off the appliance, then remove plug from the wall outlet.
- IMPORTANT - This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to rig this safety feature.

ELECTROMAGNETIC FIELDS (EMF)

TaoTronics Air Fryer Oven complies with all standards regarding electromagnetic fields (EMF). If handled properly and according to the instructions in this User Manual, the appliance is safe to use based on scientific evidence available today.

FOR HOUSEHOLD USE ONLY

SAVE THESE INSTRUCTIONS



Regular Check

**HAVE YOUR AIR FRYER OVEN
CHECKED REGULARLY
FOR ANY SIGN OF MALFUNCTION!**

Check if Plug, cord or appliance is damaged
Stop using, check FAQ and contact TaoTronics Support Team.

“ ATTENTION

AVANT D'UTILISER CET APPAREIL, LISEZ TOUTES LES INSTRUCTIONS ET LES AVERTISSEMENTS FIGURANT DANS VOTRE GUIDE D'UTILISATION ET SUR L'APPAREIL

- N'utilisez pas l'appareil à d'autres fins que celles décrites dans le présent guide de l'utilisateur. L'utilisation d'accessoires non recommandés par le fabricant de l'appareil peut provoquer des blessures.
- Cet appareil n'est pas destiné à être utilisé par des personnes (y compris des enfants) dont les capacités physiques, sensorielles ou mentales sont réduites ou qui manquent d'expérience et de connaissances, sauf si elles ont été supervisées ou instruites de l'utilisation de l'appareil par une personne responsable de leur sécurité.
- Une surveillance étroite est nécessaire lorsqu'un appareil est utilisé par des enfants ou à proximité. Les enfants doivent être surveillés pour s'assurer qu'ils ne jouent pas avec l'appareil. Le nettoyage et l'entretien de l'utilisateur ne doivent pas être effectués par des enfants, sauf ils ont plus de 8 ans et sont surveillés.

- NE PAS faire fonctionner l'appareil si la prise, le cordon d'alimentation ou l'appareil lui-même sont endommagés. Veuillez toujours à ce que la fiche soit correctement insérée dans une prise murale.
- Ne laissez pas le cordon d'alimentation pendre sur le bord de la table ou du comptoir. Tenir à l'écart des surfaces chaudes.
- NE PAS brancher l'appareil ni utiliser le panneau de commande avec les mains mouillées.
- Vérifiez si la tension indiquée sur l'appareil correspond à la tension principale locale avant de brancher l'appareil.
- Ne connectez jamais cet appareil à une minuterie externe ou à un système de commande à distance séparé afin d'éviter une situation dangereuse. Pour le débrancher, éteignez l'appareil, puis retirez la fiche de la prise murale.
- Cet appareil possède une prise polarisée (une lame est plus large que l'autre). Pour réduire le risque de choc électrique, cette fiche est destinée à ne s'insérer dans une prise polarisée que d'une seule manière. Si la fiche ne s'insère pas complètement dans la prise, inversez la fiche. Si elle ne s'adapte toujours pas, contactez un électricien qualifié. N'essayez pas de modifier la prise de quelque manière que ce soit.

- NE PAS placer l'appareil contre un mur ou d'autres appareils. Laissez au moins 10 cm d'espace libre à l'arrière et sur les côtés et 10 cm d'espace libre au-dessus de l'appareil. Ne placez rien au-dessus de l'appareil.
- NE PAS mettre sur une cuisinière, à proximité de brûleurs à gaz ou électriques, ou dans un four chauffé.
- Ne laissez pas l'appareil sans surveillance lorsqu'il est utilisé. Faites preuve d'une extrême prudence en déplaçant un appareil contenant de l'huile chaude ou d'autres liquides chauds.
- Ne placez rien sur le dessus de votre friteuse à air. NE rangez rien à l'intérieur de votre friteuse à air.

- Tenez votre friteuse à l'écart des matériaux inflammables (rideaux, nappes, etc.). Utilisez-la sur une surface plane, stable et résistante à la chaleur, loin des sources de chaleur ou des liquides.
- Après utilisation de l'appareil, le couvercle métallique à l'intérieur est très chaud, évitez tout contact avec lui après la cuisson. Débranchez l'appareil lorsqu'il n'est pas utilisé et avant de le nettoyer. Laissez refroidir avant de mettre ou d'enlever des pièces et avant de nettoyer l'appareil.
- Débranchez immédiatement l'appareil si vous voyez de la fumée noire sortir de l'appareil. Attendez que l'émission de fumée s'arrête avant de toucher l'appareil.

CHAMPS ÉLECTROMAGNÉTIQUES (EMF)

La Friteuse à Air TaoTronics est conforme à toutes les normes concernant les champs électromagnétiques (EMF). En la manipulant correctement et conformément aux instructions de ce guide d'utilisation, l'appareil est sûr à utiliser sur la base des preuves scientifiques disponibles aujourd'hui.

DESTINÉE À UN USAGE DOMESTIQUE EXCLUSIVEMENT LIRE ET CONSERVER CES INSTRUCTIONS

SPECIFICATIONS

 
MODEL	TT-AF002
VOLTAGE	US/CA: 120V ~ 60Hz
POWER	1700W
CAPACITY	13 Quart






Start Your Cooking Adventure!

“ KNOWING
YOUR
AIR FRYER OVEN ”

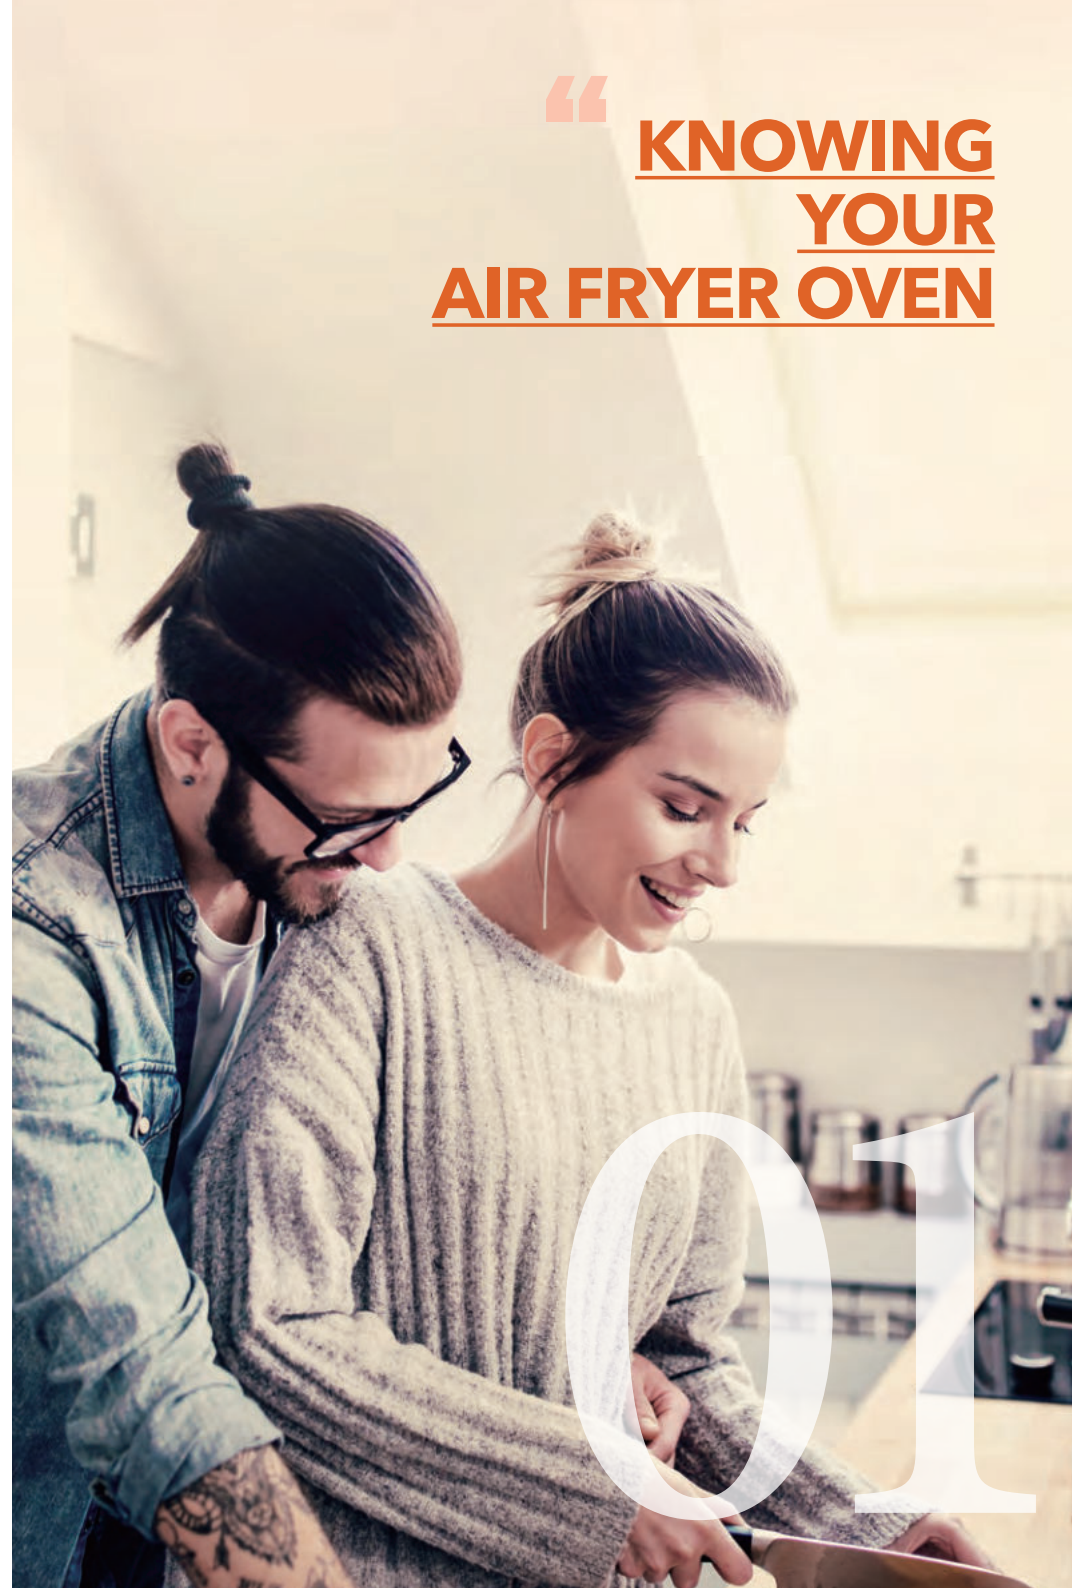


01

 
Oven Body

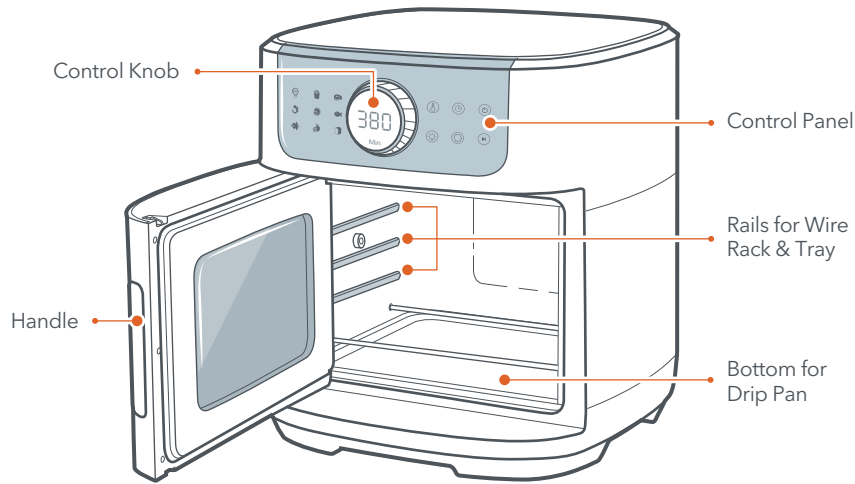


Drip Pan x1

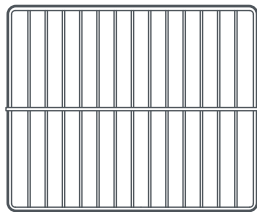 


Wire Rack x1

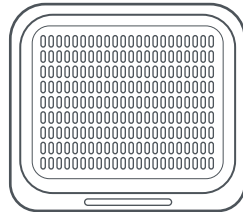 

Cooking Tray x1

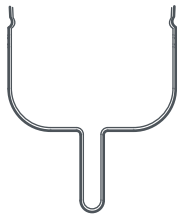 

Rotisserie Lift x1

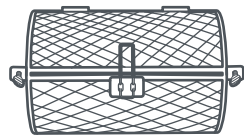 


Rotisserie Basket x1



Rotisserie Spit x1

 Accessories

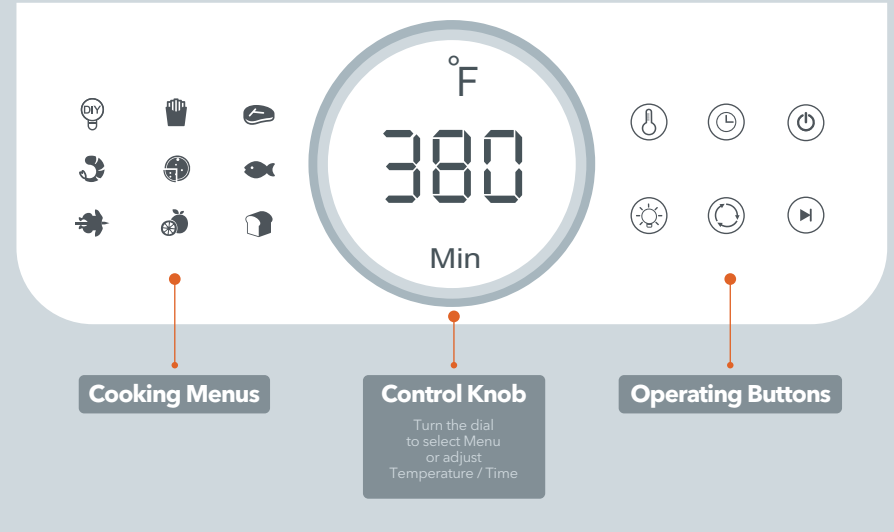

Power ON/OFF

Short press to turn on.
Hold to turn off.



Time Control

Tap the button then
turn the dial to adjust the
cooking time.



Temp Control

Tap the button then
turn the dial to adjust the
cooking temperature.



Start / Pause

Tap to start / stop
cooking at selected menu.



Rotate

Tap to turn rotisserie
rotation on or off.



Light

Tap to turn the oven
light on or off.


DIY Customize settings	French Fries (400°F & 15min)	Steak (400°F & 8min)
Shrimp (370°F & 6min)	Pizza (360°F & 10min)	Seafood (350°F & 8min)
Rotisserie (375°F & 30min)	Dehydrate (175°F & 8 hours)	Toast (400°F & 5min)




USING YOUR AIR FRYER OVEN



 - The air fryer oven and air frying accessories will be hot during and after cooking. To avoid the risk of burn injury, DO NOT touch hot surfaces with unprotected hands.
- The unit preheats quickly, so we recommend prepping all ingredients before turning on the oven.

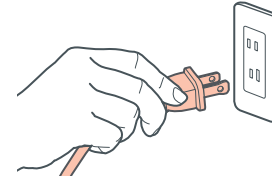

Plug into an electrical outlet.

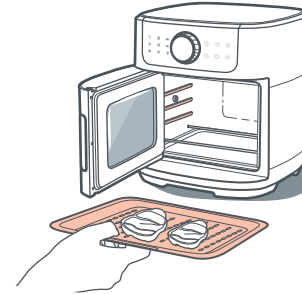 


Slide the cooking tray (with ingredients) into the middle rails.

Note: Make sure the cooking tray is completely dry before placing into the oven.



1

 1 Tap to turn on.

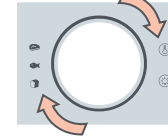

2

2 Turn the dial to select the cooking menu as desired.



Optional

 
3

3 Optionally, tap or then turn the dial to adjust the cooking temperature or time.



4


4 Tap to start cooking.

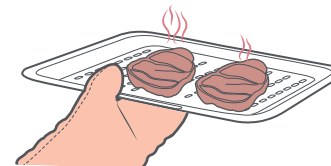


When cooking is done, pull the cooking tray out with oven gloves.

Using the Accessories

 
Rotisserie Spit

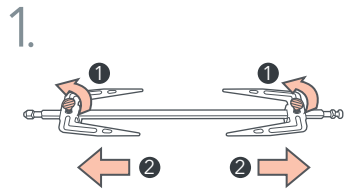

 
Loosen the screws and remove the forks from the spit.

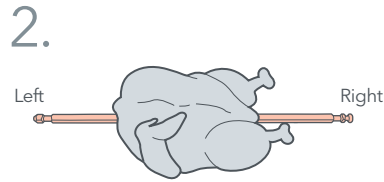

 Push the whole chicken onto the spit. Please note that the spit left is different from the right side.

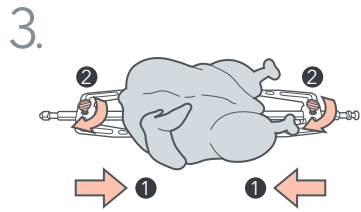


 Slide the forks onto both ends. Tighten the screws.

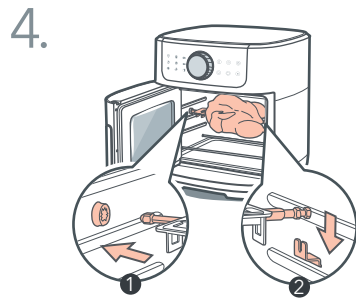


Align the spit left with the hole on the left of the cooking chamber, and set the right end in the notch on the right.

 Rotisserie Basket

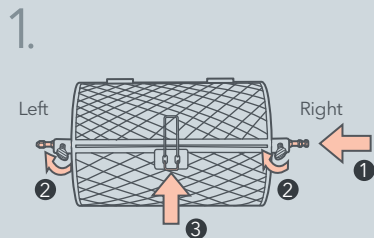

 Insert the spit through the basket and tighten the screws. Open the clip, place ingredients in and lock.

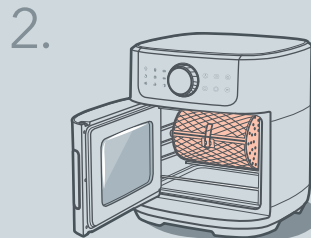


Attach onto the cooking chamber as instructed when installing the rotisserie spit.

Removing Rotisserie Basket or Spit

- 1 Position the hooks on the rotisserie lift beneath the left and right arms of the accessory.
- 2 Lift the right side first then separate the left side.



 Carefully remove and place it on a secure, heat-resistant surface.

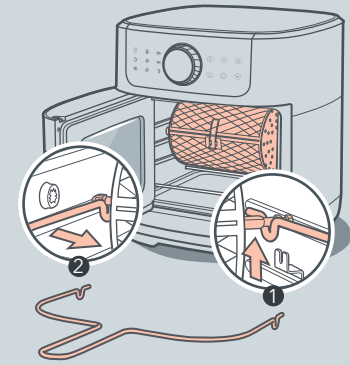

Cooking Tips

1. For more even browning and crispiness, toss ingredients or turn the tray 180° halfway through cooking cycle.
2. Rotisserie-cooked foods and rotisserie accessories must be placed in the oven before tapping Start button.
3. When baking cake, pie or other treats, use an oven-safe baking dish covered with foil to prevent the top from overcooking.
4. The drip pan doubles as a flat cooking tray. Use the drip pan when cooking fragile or filled food.
5. Patting dry moist food items before cooking prevents excess steam and splatter and gives you crispier results.
6. Air frying can cause oil and fat to drip from foods. To prevent excess smoke, carefully remove and empty the drip pan periodically throughout cooking.

Tricks

Cooking Time and Temp



The below cooking timetable is for reference only. Time and temperature may vary as per the size, origin, shape and other factors of the ingredients.



French Fries

Thin-cut Fries	380°F 25Min	Rotisserie Basket
Thick-cut Fries	380°F 30Min	
Frozen Fries	400°F 15Min	



Seafood

Salmon Fillet	350°F 08Min	Cooking Tray, Middle
Fish Nuggets	350°F 10Min	
Tilapia	370°F 08Min	



Steak

Medium Rare	400°F 06Min	Cooking Tray, Middle
Medium	400°F 08Min	
Well Done	400°F 10Min	



Rotisserie

Whole Chicken	380°F 50Min	Rotisserie Spit
Chicken Wings	380°F 15Min	Cooking Tray, Middle
Chicken Nuggets	380°F 12Min	



Shrimp

Jumbo Shrimp	370°F 08Min	Cooking Tray, Middle / Rotisserie Basket
Breaded Shrimp	350°F 08Min	
Small/Med-sized	370°F 06Min	



Dehydrate

Fruit Leather	140°F 08H	Cooking Tray, Middle
Beef Jerky	175°F 03H	



Pizza

Pepperoni Pizza	330°F 05Min	Cooking Tray, Pizza Pan, Middle / Bottom
Breakfast Pizza	350°F 08Min	



Toast

Garlic Bread	320°F 05Min	Cooking Tray, Middle
Grilled Cheese	320°F 08Min	
Cupcakes	280°F 30Min	Mesh Rack, Middle

“

CLEANING AND MAINTENANCE



03



- Clean your air fryer oven and accessories after each use.
- Always unplug the oven and let it cool down before cleaning.
- Completely dry before reconnecting to a power source, and before storage.

 


Cooking Chamber

To clean any food splatter, clean with a soft, damp cloth or sponge, and wipe dry. Check the heating element for food debris and clean.

Outer Body

Wipe clean with a soft, damp cloth or sponge.

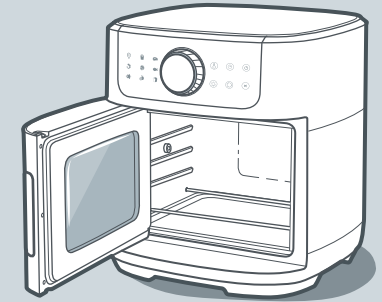

Damp Cloth Only



 
Drip Pan / Mesh Rack Cooking Tray / Rotisserie Spit Rotisserie Lift

Remove for cleaning and ensure all grease and food debris is fully removed.

Avoid using abrasive cleaning materials or metal utensils to avoid scratches.

Rotisserie Basket

Clean with a bristled brush rather than a sponge or cloth. Soak in warm, soapy water for easy removal.

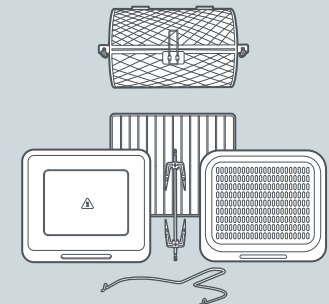

Hand Wash

Use warm, soapy water and a soft cloth to wash the oven's interior. DO NOT use abrasive cleaners, scrubbing brushes, or chemical cleaners, as they will damage the oven.

The air fryer oven will not turn on

Remaining odor

Dark smoke comes out

White smoke comes out

Foods are cooked unevenly

Flaking of non-stick coating

Error code appears on the display

- Make sure the power cord is securely plugged into the outlet.
- Make sure the oven door is closed properly.
- Plug in another appliance to the same plug to test the circuit.

The first few times you use your air fryer oven, you may notice a plastic smell. This is normal, non-toxic, and goes away quickly. It is recommended to clean and preheat at 400°F for 15 minutes to remove any remaining odor.

- Immediately stop cooking and unplug the oven. Allow it to cool to room temperature.
- Remove all accessories from the cooking chamber and clean the area as well as all accessories thoroughly.

- Cooking greasy foods will cause oil to leak into the drip pan. This oil will produce white smoke. Try not to air fry foods with a high fat content.
- Make sure the drip pan and the inside are cleaned properly and not greasy after each use.

For more even browning and crispiness, toss ingredients or turn the tray 180° halfway through cooking cycle.

Clean the cooking tray and drip pan with moderate detergent and a slightly moist, non-abrasive sponge or cloth.

E2 - Open circuit in thermal sensor

E4 - Short circuit in thermal sensor

Unplug it from the power source and contact TaoTronics Customer Support.

WARRANTY AND SERVICE

Thanks for choosing TaoTronics Air Fryer Oven.

This product is covered with TaoTronics product and labor warranty for 12 months from the date of its original purchase.

The warranty will not apply in cases of:

- Accident, misuse, or repairs performed by unauthorized personnel.
- Any unit that has been tampered with or used for commercial purpose.
- Normal wear and tear of wearable parts.
- Use of force, damage caused by external influences.
- Damage caused by non-observance of the User Manual, e.g. connection to an unsuitable mains supply or non-compliance with the instructions.
- Partially or completely dismantled appliances.
- Defects caused by or resulting from damages from shipping or from repairs, service, or alteration to the product or any of its parts that have been performed by a repair person not authorized by TaoTronics.

We can only provide after sales service for products that are sold by TaoTronics or TaoTronics authorized retailers and distributors. If you have purchased your unit from a different place, please contact your seller for return and warranty issues.

✂ **Please have your invoice and order ID ready before contacting Customer Support.**

The troubleshooting guide addresses the most common problems. If problems persist, feel free to contact the Customer Support at

support@taotronics.com 🔍



support@taotronics.com



www.taotronics.com



Manufacturer: Shenzhen NearbyExpress Technology Development Co.,Ltd.
Address: Floor 7, Building E, Galaxy World Phase II, Shenzhen, China

Made In China

尺寸：140*210mm

装订成册

材质：封面157克书纸 内页105克铜版纸