

TAOTRONICS


Questions or Concerns?
support@taotronics.com



TAOTRONICS
REFRIGERATOR

TT-EF002

User Manual

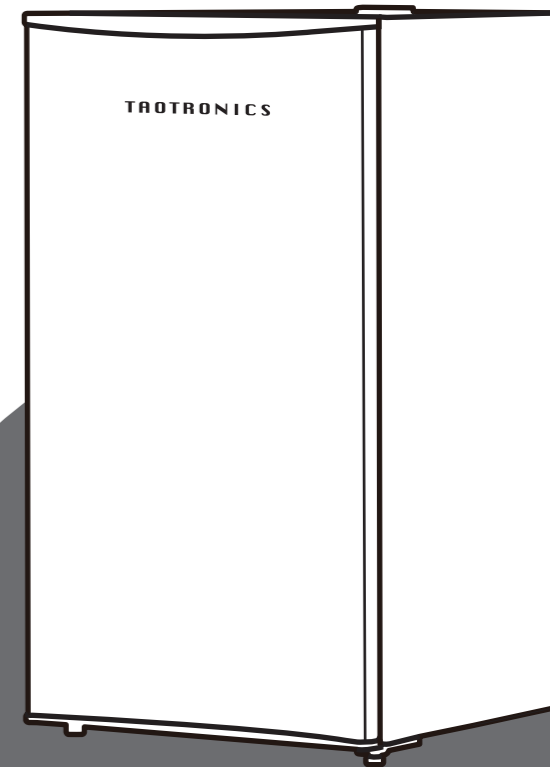

CONTENTS

1
01-03

IMPORTANT
SAFETY
INSTRUCTIONS

2
04-05

KNOWING
YOUR
REFRIGERATOR

3
06-07

USING
YOUR
REFRIGERATOR

4
08-09

REVERSING THE
REFRIGERATOR
DOOR

5
10-11

CLEANING
AND
MAINTENANCE

6
12-13

TROUBLE-
SHOOTING
GUIDE

THANK YOU

FOR BEING OUR CUSTOMER




Your purchase is truly appreciated!
We hope you are over-the-moon with our product!



DO NOT plug in
and operate with
wet hands.



DO NOT allow
children to climb!

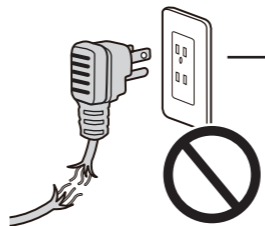

DO NOT operate
if plug and cord is
damaged.

IMPORTANT SAFETY INSTRUCTIONS



This unit may have been tilted or placed upside down during transportation. Please set the Refrigerator upright for at least 24 hours before initial use to allow the refrigerant to stabilize.





WARNING

WHEN USING ELECTRICAL APPLIANCES, BASIC PRECAUTIONS SHOULD ALWAYS BE FOLLOWED TO REDUCE THE RISK OF FIRE, ELECTRIC SHOCK, AND INJURY TO PERSONS, INCLUDING THE FOLLOWING:

INTENDED USE

- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning the use of the appliance by person responsible for their safety.
- This refrigerator and its packaging are not intended to be played with or used by children. Close supervision is necessary when any appliance is used by or near children.
- Use the appliance only for intended household purposes as described in this User Manual.

ELECTRICITY SAFETY

- This appliance must be provided with correct voltage via a professionally installed power socket. Make sure the voltage indicated on the label of the appliance is the same as your local supply.
- **DO NOT** locate multiple portable socket-outlets or portable power supplies at the rear of the appliance.
- Never unplug your refrigerator by pulling on the power cord. Always grasp the plug firmly and pull straight out from the outlet.
- **DO NOT** use the appliance with a damaged cord or plug or after malfunctions occur, or has been damaged in any manner.
- **DO NOT** use an extension cord.
- **DO NOT** attempt to modify or repair the product by yourself. Doing so could void the warranty and cause damage or personal injury. Only a qualified technician may disassemble or repair this product.

RELATED TO USE

- Make sure the refrigerator is placed in a well-ventilated, indoor environment on flat, sturdy ground.
- Keep the ventilation openings, in the appliance enclosure or in the built-in structure, clear of obstruction.
- If the refrigerator was transported tilted on its side, you must position it upright again and wait at least 24 hours before using it.
- **DO NOT** use sharp metal objects to remove excess ice build-up in the freezer compartment.
- **DO NOT** place heavy objects on the top of the appliance.
- If installed near another refrigerator or freezer, keep it at a minimum distance of 2 cm.
- **DO NOT** use mechanical, electrical or chemical products other than those recommended by the manufacturer to speed up the defrosting process.
- **DO NOT** use steam jets to clean the appliance.
- Always unplug the appliance in the event of a fault or when performing cleaning or maintenance.
- After your refrigerator is in operation, do not touch the cold surfaces in the freezer compartment, particularly when hands are damp or wet. Skin may adhere to these extremely cold surfaces.
- If the refrigerating appliance is left empty for long periods, switch off, defrost, clean, dry, and leave the door open to prevent mould developing within the appliance.
- Before you throw away your old refrigerator, Remove the doors.
- Remove refrigerant by a qualified technician.


RELATED TO PLACING ITEMS

- **DO NOT** use electrical appliances inside food storage compartments unless these are of the type recommended by the manufacturer.
- **DO NOT** store inflammable, explosive or volatile substances.
- **DO NOT** keep explosive substances, such as spray bottles with flammable propellants in the appliance.
- Bottles containing strong alcoholic drinks must be tightly closed and stored vertically.
- **DO NOT** place flammable items near the refrigerator to avoid a fire hazard.
- **IMPORTANT:** For Soda or Soft Drinks, please set the temperature as recommended on the beverage bottles (e.g., 38°F / 3°C). Do not set the temperature too low, or place the soda or soft drinks in the freezer compartment.

FOR HOUSEHOLD USE ONLY SAVE THESE INSTRUCTIONS

SPECIFICATIONS

Model	TT-EF002
Input	115V~ 60Hz
Energy Consumption	220 Kwh/Y
Energy Class	E-Star
Total Capacity	3.3cu.ft. (93L)

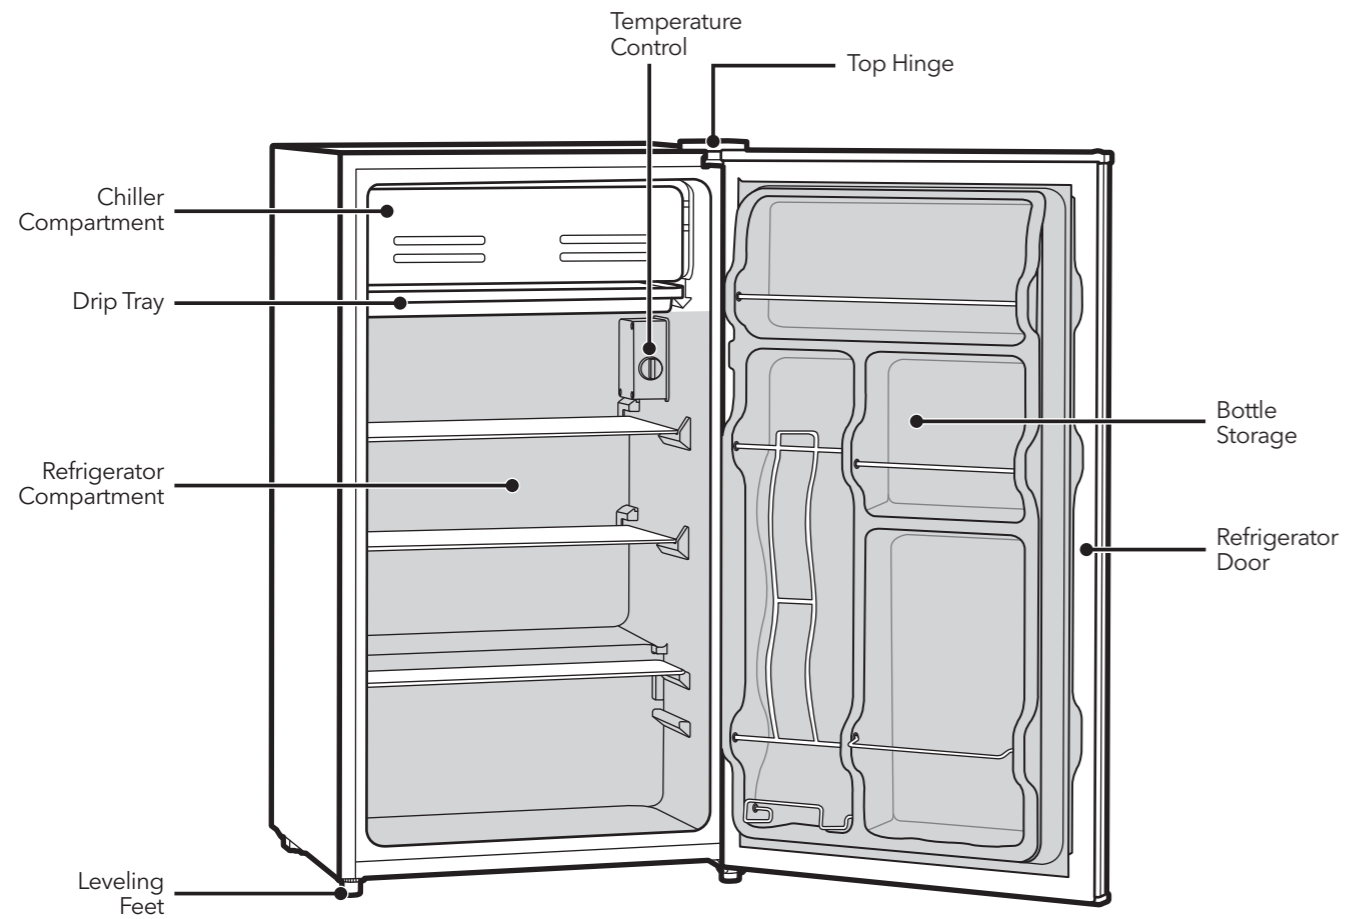

Temperature Control



OFF
Turn unit OFF



MIN
Less Cool




MED
Normal



MAX
Coolest



2 KNOWING YOUR REFRIGERATOR

Getting Started

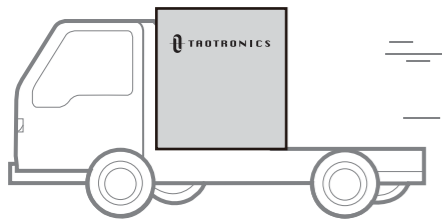

1.

Remove packaging and protective film.

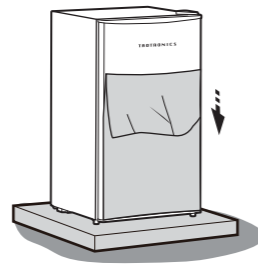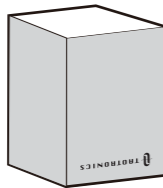


2.

Place on a level, stable floor. Adjust the feet clockwise and counterclockwise to keep it level.




3.

Place in a well-ventilated, indoor environment. Avoid placing it in direct sunlight or too close to a heat source.

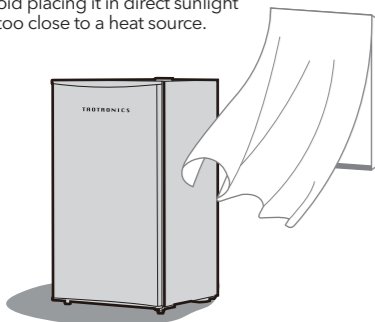


4.

Leave an enough circulation space.

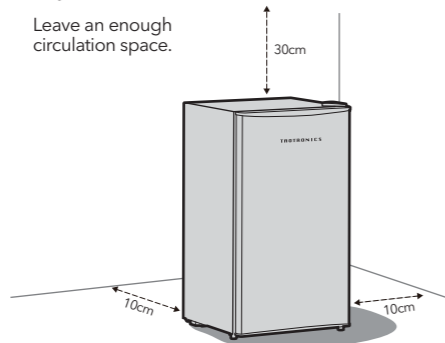


5.

Plug into a properly installed-grounded wall outlet.

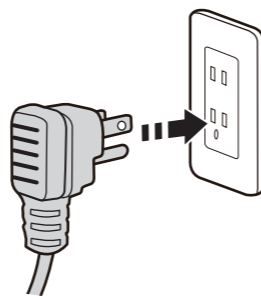

Operations and Functions

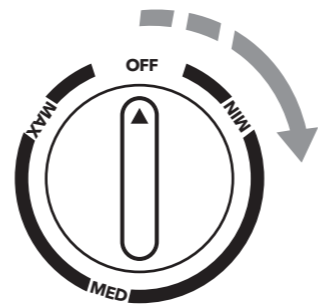

1

For the first time you use the refrigerator, turn the knob to "MED". Before placing food in the refrigerator or freezer compartment, allow the unit to cool down completely. A full **24 hours** is recommended.

2

After it is fully cooled, adjust towards "MIN" to make less cool or towards "MAX" to cool more to best suit your needs. However, the setting of "MED" should be appropriate for home or office refrigerator use.


3

When the knob is turned to "OFF", the refrigerator will stop running.



Do not place the soda or soft drinks in the freezer compartment.


3 USING YOUR REFRIGERATOR

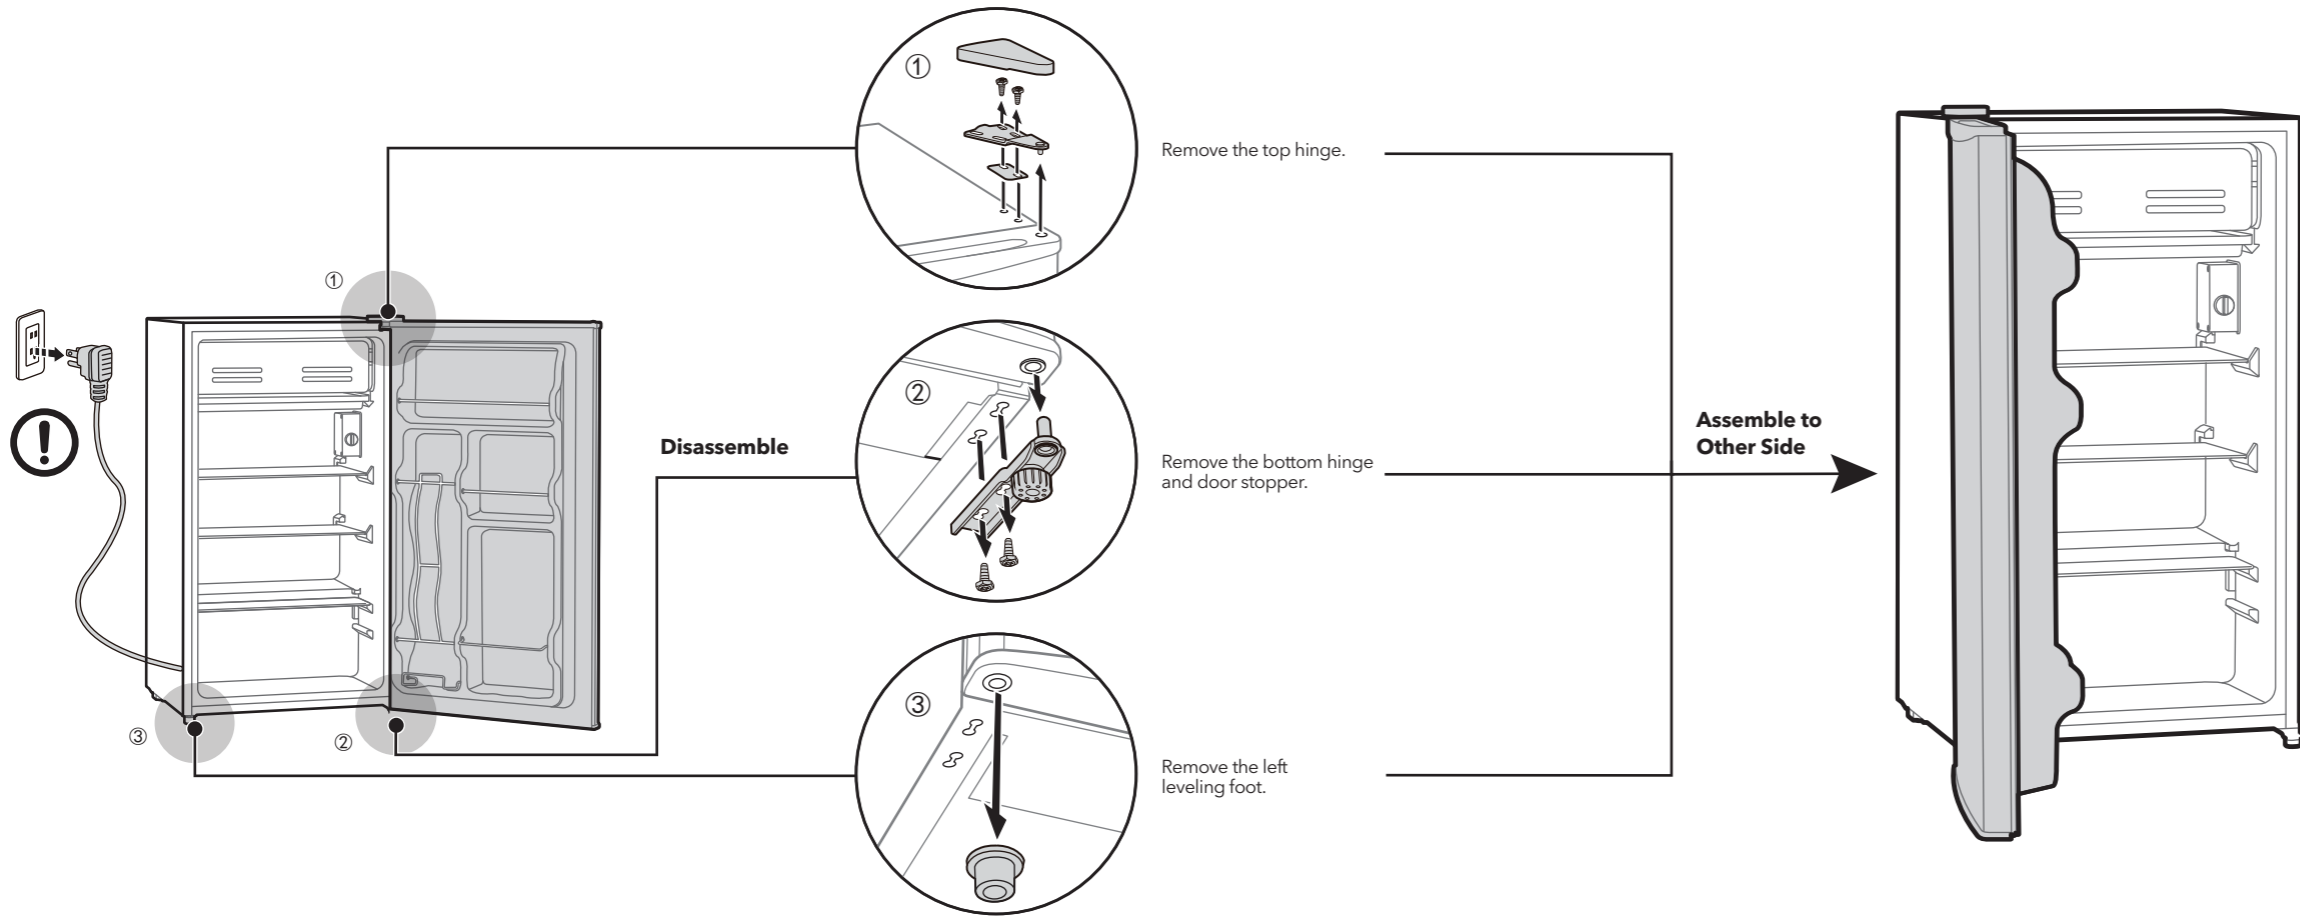

4 REVERSING THE REFRIGERATOR DOOR


1.

Outer surface: Wipe with a soft cloth dampened with soapy water, detergent, etc., and then wipe dry.

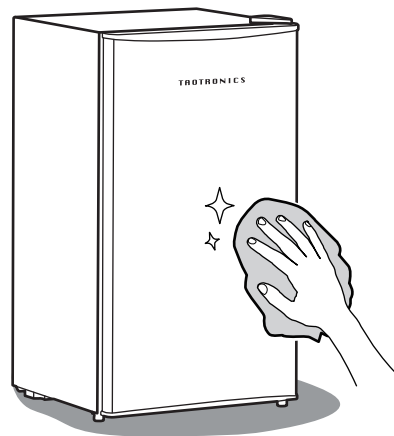



2.

Narrow gaps or corners: Wipe with a soft cloth, soft brush, or combined with some auxiliary tools.

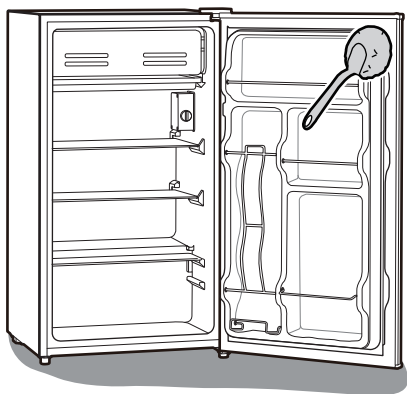

3.

Dry all parts thoroughly before reconnecting to the power source.

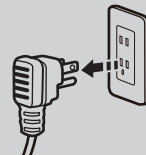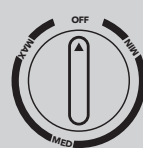

Always turn off the appliance and unplug it from the mains before cleaning or maintenance.



Do not use abrasive or corrosive detergents.



Do not use rough or abrasive materials or sharp metal scrapers.



Periods of Non-operation

- Disconnect the appliance from electricity supply.
- Remove all foods.
- Clean the appliance and all accessories.
- Leave the door open to prevent unpleasant smells.

5 CLEANING AND MAINTENANCE

Problem	Possible Causes	Solution
Refrigerator does not operate	Not properly plugged in	Make sure the refrigerator is connected to a powered electrical outlet
	Power failure or no power is passing through the unit	Check the power, and make sure that your circuit breaker or fuse is working properly
	The temperature knob is set to the "OFF" position	Turn the knob to MIN, MED or MAX as desired
Refrigerator is not cool enough	The door is being opened too frequently	Reduce the frequency and shorten the time of opening the door
	The refrigerator is too full loaded	Try not to store too many foods
	The temperature is set too warm	Adjust the temperature to a lower setting
	Warm and hot foods are stored	Allow hot foods cool to room temperature before storage
Moisture build-up on inside walls	The door is opened too often or not closed properly	Reduce the frequency and shorten the time of opening the door
	The door is slightly open	Close the refrigerator properly
Airflow sound during operation	Refrigerants circulating in the refrigerant lines	It is normal and will not affect the cooling effect and operation
Door is not close completely	The refrigerator is not on a level surface	Place the refrigerator on a level and sturdy ground
	The gaskets are dirty	Clean the gaskets regularly

If problems persist, contact the Customer Support at

support@taotronics.com 

TROUBLESHOOTING GUIDE



WARRANTY AND SERVICE

Thanks for choosing TaoTronics Refrigerator.

This product is covered with TaoTronics product and labor warranty for 12 months from the date of its original purchase.

The warranty will not apply in cases of:

- Accident, misuse, or repairs performed by unauthorized personnel.
- Any unit that has been tampered with or used for commercial purpose.
- Normal wear and tear of wearable parts.
- Use of force, damage caused by external influences.
- Damage caused by non-observance of the User Manual, e.g. connection to an unsuitable mains supply or non-compliance with the instructions.
- Partially or completely dismantled appliances.
- Defects caused by or resulting from damages from shipping or from repairs, service, or alteration to the product or any of its parts that have been performed by a repair person not authorized by TaoTronics.

We can only provide after sales service for products that are sold by TaoTronics or TaoTronics authorized retailers and distributors. If you have purchased your unit from a different place, please contact your seller for return and warranty issues.

※**Please have your invoice and order ID ready before contacting Customer Support.**



support@taotronics.com



www.taotronics.com



Manufacturer: Shenzhen NearbyExpress Technology Development Co.,Ltd.
Address: Floor 7, Building E, Galaxy World Phase II, Shenzhen, China



尺寸：210*140mm

装订成册

材质：封面128克铜版纸 内页80克书纸