 




尺寸：160mm*110mm

骑马钉

封面128g铜版纸，内页80g书纸





www.taotronics.com



E-mail:

support@taotronics.com

MANUFACTURER

Manufacturer: Shenzhen NearbyExpress Technology Development Co.,Ltd.

Address: Floor 7, Building E, Galaxy World Phase II, Shenzhen, China



Intertek

 
3079598 MADE IN CHINA

TT-HE008_V1.0_EN

Model: TT-HE008
TaoTronics PTC Fan Heater
User Guide



Contents

- 01** **IMPORTANT SAFETY INSTRUCTIONS**
 - 06** **Package Contents**
 - 06** **Product Diagram**
 - 07** **Operations and Functions**
 - 11** **Replacement of Batteries in
Remote Control**
 - 12** **Specifications**
 - 12** **Cleaning and Maintenance**
 - 14** **Troubleshooting**
 - 16** **Warranty and Service**
- 

01



Thanks for choosing TaoTronics PTC Fan Heater. Please read this User Guide thoroughly before use and retain it for future reference.

IMPORTANT SAFETY INSTRUCTIONS

READ AND FOLLOW ALL SAFETY INFORMATION AND INSTRUCTIONS.KEEP FOR FUTURE REFERENCE.

FOR HOUSEHOLD USE ONLY

When using electrical appliances, basic precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons, including the following:

- 1.Read all instructions before using this heater.
- 2.Surface of this heater will become hot during use. To avoid burns, do not touch hot surfaces with bare hands. Use handles when moving the unit.
- 3.High temperature. Keep combustible materials, such as furniture, pillows, bedding, papers, clothes and curtains at least 3 feet (0.9 meters) from the front and top of the radiator and keep them away from the sides and rear.

02

- 4.This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning the use of the appliance by person responsible for their safety.
- 5.Do not allow to be used as a toy. Close attention is necessary when used by or near children. Children should be supervised to ensure that they do not play with the machine or remote control.
- 6.Always unplug the heater when not in use.
- 7.Do not operate any heater with a damaged cord or plug or after the heater malfunctions, has been dropped or damaged in any manner. Discard heater, or return the heater to an authorized service facility for examination, electrical or mechanical adjustment or repair.
- 8.Do not use outdoors or on wet surfaces.
- 9.Do not handle any part of the plug or machine with wet hands.
- 10.Suitable for dry locations ONLY. This heater is not intended for use in bathrooms, laundry areas and similar indoor locations. Never place the heater where it may fall into a bathtub or other water container. Do not use or store where it may get wet or in the immediate surroundings of a bath, a shower, or a swimming pool.
- 11.Do not run cord under carpeting. Do not cover cord with throw rugs, runners or the like. Do not route cord under furniture or appliances. Arrange cord away from traffic area and where it will not be tripped over.
- 12.To disconnect the heater, turn it off first, then remove the plug from the outlet.

03

13. Connect to properly grounded outlets only.
14. Do not insert or allow foreign objects to enter any ventilation or exhaust opening as this may cause electric shock, fire or damage to the heater.
15. To prevent a possible fire, do not use with any opening or exhaust blocked, and keep free of dust, lint, hair, and anything that may reduce airflow. Do not put any object into the inlet grill or the exhaust opening as this may cause an electric shock or fire, or damage the appliance.
16. A heater has hot or arcing or sparking parts inside. Do not use it in areas where gasoline, paint or flammable liquids are used or stored.
17. Use this heater only as described in this User Guide. Any other use not recommended by the manufacturer may cause fire, electric shock, injury to persons or other damage to property.
18. To prevent overload and blown fuses, be sure that no other appliance is plugged into the same outlet (receptacle) or into another outlet (receptacle) wired into the same circuit.
19. If there is a loose fit between the plug and the socket or the plug becomes very hot, the socket may need to be replaced. Check with a qualified electrician to replace the socket.
20. It is normal for the plug and cord to feel warm to the touch. A plug or cord which becomes hot to the touch or becomes distorted in shape may be a result of a worn electrical outlet. Worn outlets or receptacles should be replaced prior to further use of the heater. Plugging heater into a worn outlet / receptacle may result in overheating of the power cord or fire.

04

21. The output of this heater may vary and its temperature may become intense enough to burn exposed skin. Use of this heater is not recommended for persons with reduced sensitivity to heat or an inability to react to avoid burns.
22. Ensure the heater is on a stable, secure surface to eliminate the potential of tipping it over.
23. Always plug heaters directly into a wall outlet / receptacle. Never use with an extension cord or relocatable power tap (outlet / power strip).
24. Be sure that the plug is fully inserted into appropriate receptacle. Please remember that receptacles also deteriorate due to aging and continuous use: check periodically for signs of overheating or deformations evidenced by the plug. Do not use the receptacle and CALL your electrician.
25. Check that neither the appliance nor the power cable has been damaged in any way during transportation.
26. Make sure that no pieces of polystyrene or other packaging material have been left between elements of the appliance. It may be necessary to pass over the appliance with a vacuum cleaner.
27. Do not attempt to modify or repair the product by yourself. Doing so could void the warranty and cause damage or personal injury. Only a repair technician may disassemble or repair this product.
28. Choking hazard - This remote control unit contains a small battery. Keep the remote control away from children and do not swallow the battery. If the battery is swallowed seek medical advice at once.

- 29.If the machine is not working as it should, has received a sharp blow, has been dropped, damaged, left outdoors, or dropped into water, do not use and contact the Customer Support.
- 30.Before cleaning, or storage, or when not in use, always turn the heater OFF and unplug it from the electrical outlet and allow to cool.
31. NOTE: There may be a trace of smoke or odor when the unit is first operated. This indicates that a drop of oil fell on the heating coil during the manufacturing process. It will quickly evaporate and should not re-occur.
- 32.IMPORTANT - This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to rig this safety feature.

DANGER-High temperatures may be generated under certain abnormal condition.

 
Do not partially or fully cover or obstruct the front of this heater.

READ AND SAVE THESE INSTRUCTIONS

 
Package Contents

- ① 1 x TaoTronics PTC Fan Heater (TT-HE008)
- ② 1 x Remote Control (Batteries are not included)
- ③ 1 x Thank You Card
- ④ 1 x User Guide

Product Diagram

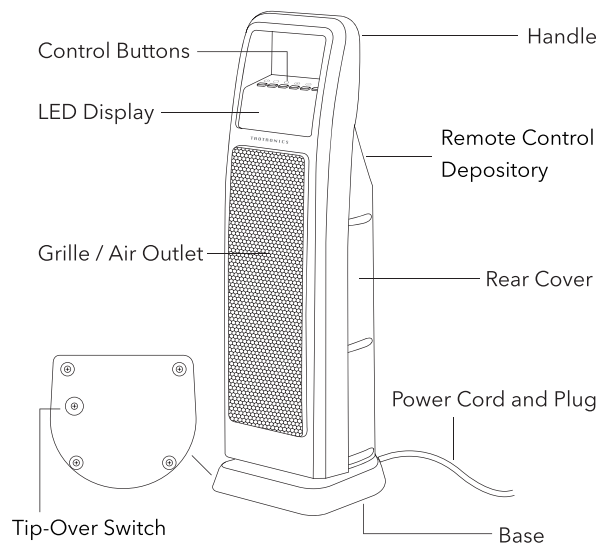 


Operations and Functions

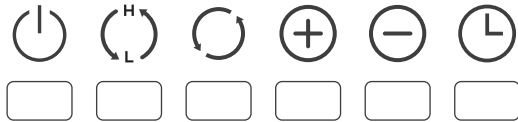

Remote Control

Note: For added convenience, the same control buttons can be found on the remote control.

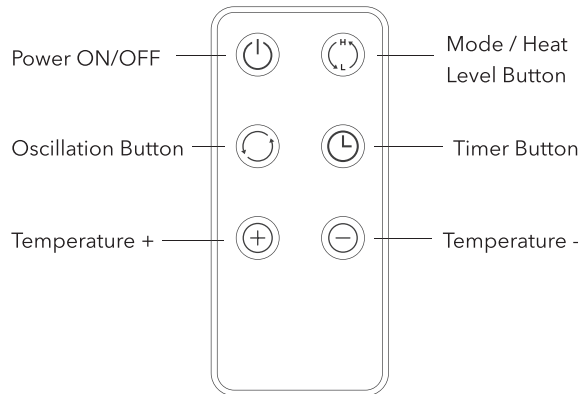



Operations and Functions

Place the heater on a firm, level surface free from obstructions, and at least 3ft. (0.9m) away from any wall or combustible material. Plug into an appropriate voltage AC outlet, the unit will enter standby mode with a beep and power indicator on red. Your heater is ready for use now.

 


Power ON/OFF

- Press  on the heater / remote control once to turn the heater ON with default settings: Power indicator on red & high heat level "HI" on LED display.
- Press  once again to turn the heater OFF (standby mode). The fan will keep running for additional 30 seconds.

 



Mode / Heat Level Setting

- When the unit is on, repeatedly press  on the heater / remote control to select High (HI) or Low (LO) heating mode.



Temperature Adjustment

- When the unit is on, press  or  on the heater / remote control (AUTO indicator on) to adjust the temperature from 41 to 90°F (5-32°C) in 1°F / °C increments.
- Press and hold the buttons on the heater to quickly skip to the

09

desired temperature. The set temperature will flash 5 times to confirm your setting.

- Once set, the LED display will show the room temperature.
- When the setting temperature is reached, the heater will stop working. When the room temperature is lower than the set one, the heater will start working again.
- Default setting temperature: 75°F / 24°C.

°F/°C

Temperature in Degrees Fahrenheit / Celsius

- Press and hold ⊕ and ⊖ Buttons on the heater simultaneously for 3 seconds to switch the temperature display between Fahrenheit and Celsius settings.



Auto OFF Timer

- When the unit is on, repeatedly press ⊕ on the heater / remote control to cycle through 0h -> 1h -> ... -> 8h -> 0h -> 1h timer. When time is up, the unit will automatically stop running.
- To cancel Timer setting,
 - 1.adjust the timer setting to 0h, or
 - 2.turn the unit off.

10



Oscillation Button

- When the unit is on, press ⊙ on the heater / remote control to start oscillating.
- To stop oscillating, press it again.

Other Features

Tip-Over Protection

 
- The heater is equipped with a Tip-Over Switch. When the heater is lifted up or tipped over, the heater will shut off automatically.
- Place the heater back on a flat, level and stable surface and remain upright. Then turn it on again.

Overheat Protection

- When the ambient temperature is above 50°C / 122°F, the heater will stop heating and the overheat alarm will be triggered with beeps.
- Please unplug it from the power source and power it on again when the ambient temperature drops below 50°C / 122°F.

Replacement of Batteries in Remote Control

1. Remove the battery box cover along the indicated arrow direction.
2. Replace with two new #7 (AAA 1.5V) dry batteries. Make sure positions for "+" pole and "-" pole are correct.
3. Reinstall the battery box cover.

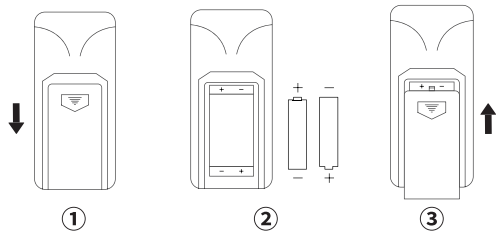

CAUTION:

- Replace with new batteries of the same type when replacement is required.
- When not using the remote control for a long time, please take out the batteries.
- Do not attempt to dismantle the batteries.
- Do not dispose the batteries in fire, batteries may explode or leak.

Specifications

Model	TT-HE008
Input	120V~ 60Hz
Rated Power	1500W (High) 900W (Low)
Remote Control Battery	AAA 1.5V

Cleaning and Maintenance

It is recommended that the heater be cleaned at least one time during the operating season and before off-season storage in order to provide the optimum level of performance.

Always disconnect the appliance from the mains by switching it off and removing the plug from the power outlet before cleaning.

- Turn the heater "OFF", unplug it and wait for the heater to cool down.
- Use only a soft cloth to gently wipe the outer surfaces of the heater clean.
- Do not use any cleaning agents or detergents.
- Never immerse the heater in water and never allow water to drip into the motor housing. Be sure not to wet the Heating Element and the switches.

13

- For storage, you may leave the heater covered to protect it from dust. Store it in a cool, dry location and arrange the cable away from traffic areas so that it will not be tripped over or damaged.

Caution:

- Do not allow water to run into the interior of the heater as this could result in a fire or electric shock hazard.
- Any other servicing should be performed by an authorized service representative.

14

Troubleshooting

The following troubleshooting guide addresses the most common problems. If problems persist, contact the Customer Support at support@TaoTronics.com.

Problem	Possible Causes	Solution
Heater does not start	Power cord is not properly plugged in.	Connect the plug to a powered electrical outlet.
	Overheat Protection has been activated.	<ul style="list-style-type: none">• Turn the heater OFF, unplug it and allow it to cool.• Check and remove any objects on or adjacent to the heater.• Wait 5-10 minutes before plugging the unit back in.
	No power is passing through the unit.	<ul style="list-style-type: none">• Ensure that your circuit breaker or fuse is working properly.• Ensure your heater is placed on a flat and even surface.

Problem	Possible Causes	Solution
Heater does not start	Setting temperature is lower than the room temperature.	Make sure the thermostat is set at a higher temperature than the room temperature.
The heater suddenly stops during heating	Ambient temperature reaches above 50°C / 122°F.	Unplug it from the power source and power it on again when the ambient temperature drops below 50°C / 122°F.
	The heater is tipped over.	Place it on a flat, level and stable surface and remain upright. Then turn it on again.

Warranty and Service

This product is covered with TaoTronics product and labor warranty for 12 months from the date of its original purchase. If any problems occur, please contact the TaoTronics Customer Care Centre via the contact information listed in this User Guide.

We can only provide after sales service for products that are sold by TaoTronics or TaoTronics authorized retailers and distributors. If you have purchased your unit from a different place, please contact your seller for return and warranty issues.