

尺寸:90*120mm

骑马钉

材质:封面128克铜版纸 内页80克书纸

Model:
TT-SK026



www.taotronics.com

ASIA PACIFIC

E-mail: support.jp@taotronics.com(JP)

JP Importer: 株式会社SUNVALLEY JAPAN

Address: 〒104-0032東京都中央区八丁堀3丁目18-6 PMO京橋東9F

EUROPE

E-mail:

support.uk@taotronics.com(UK)

support.de@taotronics.com(DE)

support.fr@taotronics.com(FR)

support.es@taotronics.com(ES)

support.it@taotronics.com(IT)

EU Importer: ZBT International Trading GmbH

Address: Halstenbeker Weg 98C, 25462 Rellingen, Deutschland

NORTH AMERICA

E-mail: support@taotronics.com(US)

support.ca@taotronics.com(CA)

Tel: 1-888-456-8468 (Monday-Friday: 9:00 - 17:00 PST)

US Distributor: SUNVALLEYTEK INTERNATIONAL INC.

Address: 46724 Lakeview Blvd, Fremont, CA 94538

MANUFACTURER

Shenzhen NearbyExpress Technology Development Co., Ltd.

Address: 333 Bulong Road, Shenzhen, China, 518129

Learn more about the EU Declaration of Conformity:

<https://www.taotronics.com/downloads-TT-SK026-CE-Cert.html>



20191029
TT-SK026_V1.3_EN



TAOTRONICS


MODEL: TT-SK026

TAOTRONICS 2.1CHANNEL WIRELESS SOUNDBAR

User Guide

Contents

 Product Diagram	02
Remote Control	03
Warning	04
Package Contents	04
Button Control	05
Connections	06
Troubleshooting	07

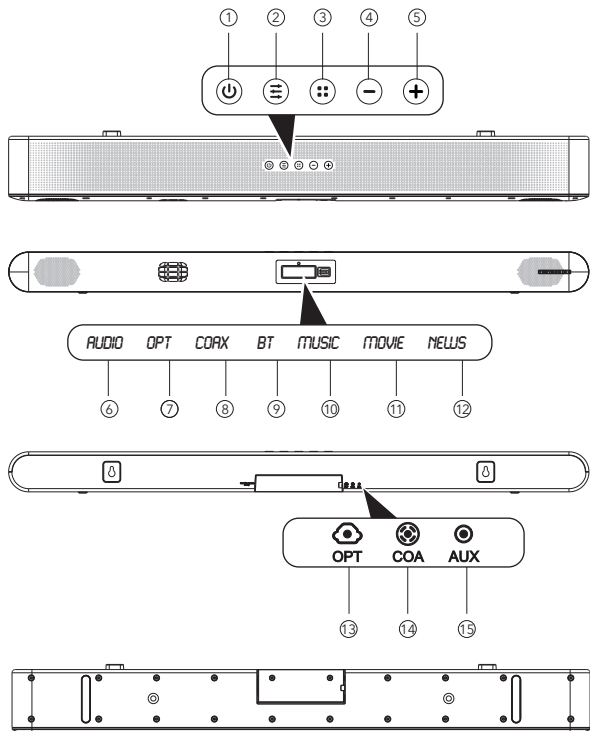

Product Diagram

Top Panel

 
1. Power Button
2. EQ Mode
3. Mode Selection
4. Volume -
5. Volume +

Indicators on the Display

6. AUDIO
7. OPT
8. COAX
9. BT
10. MUSIC
11. MOVIE
12. NEWS

Rear Panel

13. Optical Input
14. Coaxial Input
15. AUX Input

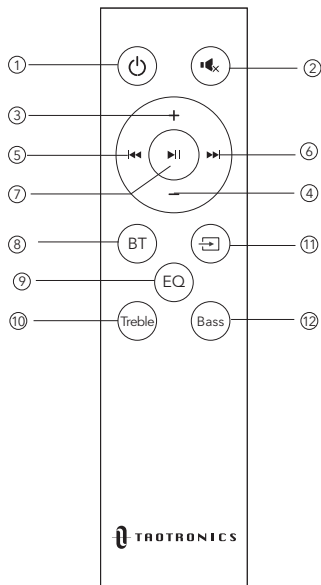

Remote Control

1. Power Button
2. Mute
3. Volume +
4. Volume -
5. Previous Track
6. Next Track
7. Play / Pause
8. Bluetooth Mode
9. EQ Mode
10. Treble
11. Source Button
12. Bass

Warning

1. To reduce the risk of fire or electric shock, do not expose this appliance to rain or moisture.
2. Do not use chemicals or detergents to clean the product. Clean only with a dry cloth.
3. Do not scrape the surface with sharp objects.
4. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
5. Keep the sound bar away from extreme heat and humidity, and do not expose to direct sunlight.
6. Do not install near any heat sources such as radiators, heat registers, stoves, etc.
7. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the device.
8. Unplug this device during lightning storms or when unused for long periods of time.
9. To reduce the risk of electric shock, do not remove the cover (or back).
10. No user-serviceable parts are inside. Please refer servicing to qualified service personnel.
11. Do not drop or knock your sound bar on hard surfaces as it may damage the interior circuits.

Package Contents

- 1 x TaoTronics Sound Bar (TT-SK026)
- 1 x Remote Control
- 1 x 3.5mm to RCA Audio Cable
- 1 x Optical Cable
- 1 x User Guide
- 2 x Wall Mount Screws
- 1 x Power Cable
- 1 x Cable Connection Instruction


Button Control

Power On / Off	Press the Power Button to turn on / off the sound bar.
Source Button / Mode Selection	When the sound bar is on, press the Source Button on the remote control or press the Mode Selection on the sound bar to select the Audio / OPT / Coaxial / Bluetooth mode and the corresponding indicator will light up.
Volume +	Press the Volume + button
Volume -	Press the Volume - button
Mute	Press the Mute Button to mute / unmute
EQ Mode	Press the EQ Mode Button to select Music / Movie / News / CUST mode.
Treble	<ul style="list-style-type: none">• When the sound bar is in EQ/CUST mode, press the Treble Button once to enter CUST/TREBLE, then press Volume +/- to adjust TR (-3, -2, -1, 0, 1, 2, 3).• When the sound bar is not in EQ/CUST mode, press the Treble Button once to enter CUST/TREBLE mode.• When "TR xx" is displayed, press the Treble Button once to return to the original source mode.• If no operation is done after "TR xx" is displayed for around 15s, it will return to volume mode automatically.
Bass	<ul style="list-style-type: none">• When the sound bar is in EQ/CUST mode, press the Bass Button once to enter CUST/BASS, then press Volume +/- to adjust BS (-3, -2, -1, 0, 1, 2, 3).• When the sound bar is not in EQ/CUST mode, press the Bass Button once to enter CUST/BASS mode.• When "BS xx" is displayed, press the Bass Button once to return to the original source mode.• If no operation is done after "BS xx" is displayed for around 15s, it will return to volume mode automatically.

Note: To disconnect a Bluetooth device, press and hold the Play Button on the remote control for 5s. The Bluetooth Mode indicator will flash when waiting for a reconnection.

Connections

 Cable Connection

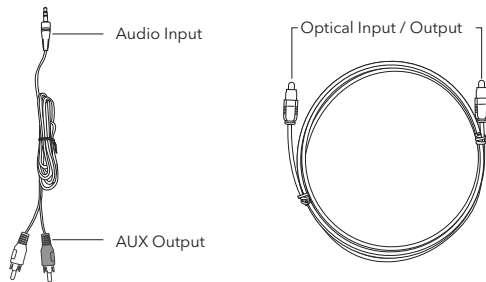

Note: Please plug the appropriate cable into the corresponding port to connect the device, then select the corresponding mode.

Bluetooth® Connection

1. Turn on the sound bar and select the Bluetooth® mode.
2. Activate the Bluetooth® function on your device and search for devices nearby.
3. Find "TaoTronics TT-SK026" in the search results and tap to connect. A beep will be heard upon a successful connection.
4. The BT word will show on the display screen once a successful connection.

Note:

- The BT signal bar will keep flashing when the sound bar is pairing.
- Please make sure no other active Bluetooth® devices are within range, and that the sound bar is within 3ft / 1m away from your device.
- It's not recommended to pair the sound bar with your TV Bluetooth for it may cause audio delay.
- Before starting to play via Bluetooth, please lower the volume to a moderate level.

Troubleshooting

Q: Why is the unit not turning on?

A: Please check and make sure the power cord is correctly connected to a power source.

Q: Why is there no sound or why is the sound is distorted?

A: Please go over the following:

- Check to make sure the audio cable is correctly connected.
- Turn up the volume slowly.
- Press the Mute button to switch on the sound.
- Press the Play / Pause button.
- Set the audio output mode on your TV (if applicable) accordingly with the mode setting on the sound bar.

Q: Why do the buttons on the sound bar not work?

A: Switch off the sound bar and unplug. Then connect it to a power supply and switch it on again.

Q: Why does the remote control not work?

A: Please go over the following:

- Install 2 AAA 1.5A batteries into the remote.
- Replace the current batteries with new ones.
- Make sure the remote control is pointed to the sound bar during use.
- Make sure the remote control is within operating range.
- Switch off the sound bar and disconnect the power. Then reconnect and power it on, try again.

Q: Why can't I disconnect the device by pressing the Play Button?

A: You need to press and hold Play Button on Remote Control for 5s. The Bluetooth Mode indicator then will flash when waiting for a reconnection.



The Bluetooth® word mark and logos are registered trademarks owned by the Bluetooth SIG, Inc. and any use of such marks by Sunvalleytek International Inc. is under license. Other trademarks and trade names are those of their respective owners.

FCC Compliance

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.



WEEE Compliance

Correct Disposal of This Product (Waste Electrical & Electronic Equipment)
(Applicable in countries with separate collection systems)

This marking on the product, accessories or literature indicates that the product and its electronic accessories should not be disposed of with other household waste at the end of their working life. To prevent possible harm to the environment or human health from uncontrolled waste disposal, please separate these items from other types of waste and recycle them responsibly to promote the sustainable reuse of material resources. Household users should contact either the retailer where they purchased this product, or their local government office, for details of where and how they can take these items for environmentally safe recycling. Business users should contact their supplier and check the terms and conditions of the purchase contract. This product and its electronic accessories should not be mixed with other commercial wastes for disposal.