

尺寸：210mm*140


骑马钉

封面128g铜版纸覆哑膜，内页80g书纸



STAND FAN

TAOTRONICS

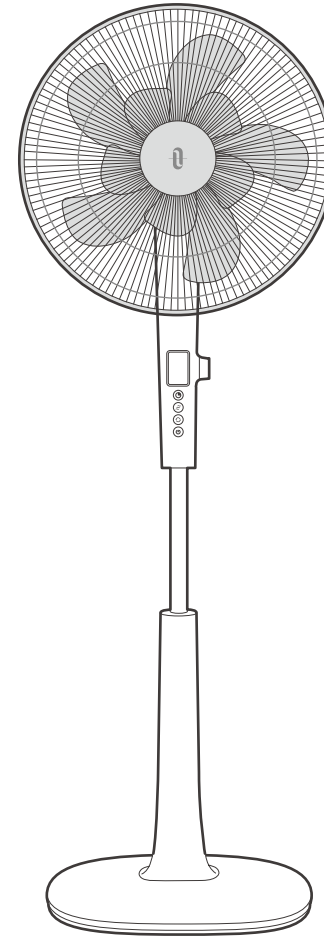

Questions or Concerns?

support@taotronics.com

TT-TF010
User Manual

THANK YOU

FOR BEING OUR CUSTOMER



Your purchase is truly appreciated!
We hope you are over-the-moon with our product!

1

01-03

IMPORTANT
SAFETY
INSTRUCTIONS

2

04-05

IN THE BOX

5

17-18

CLEANING AND
MAINTENANCE

6

19-20

TROUBLE-
SHOOTING

3

06-09

ASSEMBLING
YOUR FAN

4

10-16

USING YOUR
FAN

7

21-22

WARRANTY AND
SERVICE



01

IMPORTANT SAFETY INSTRUCTIONS

Customized Airflow,
Personalized Comfort

IMPORTANT SAFETY INSTRUCTIONS



BEFORE USING THIS APPLIANCE READ ALL INSTRUCTIONS AND CAUTIONARY MARKINGS IN YOUR USER MANUAL AND ON THE APPLIANCE



DO NOT touch or hold the mains plug with wet hands.



DO NOT block or cover air flow to or from the Fan while in operation.



DO NOT insert fingers or objects through the grille while in operation.

INTENDED USE

- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning the use of the appliance by person responsible for their safety.
- Close supervision is necessary when any appliance is used by or near children. Children should be supervised to ensure that they do not play with the appliance. Cleaning and user maintenance shall not be done by children unless they are older than 8 and supervised.
- Use the appliance only for intended household purposes as described in this User Manual. Any other use is not recommended that may cause fire, electric shock, or injury to persons.

RELATED TO USE

- Avoid contacting moving parts. Wait until all parts have completely stopped before touching them.
- DO NOT use in a bathroom.
- Never use the product without the safety guard or with a damaged safety guard.
- DO NOT place any clothes or curtains on the product as they could be sucked into the fan during operation and damage the product.
- During use, keep hands, hair, clothing and utensils away from the safety guard to avoid injuries and damage of the product.
- DO NOT attempt to disassemble, repair, modify or replace any part any part of your product. All servicing should be performed by qualified personnel only.

IMPORTANT SAFETY INSTRUCTIONS


- Always make sure to place the Fan on a flat, level surface before operation.
- Keep the cord out of heavy traffic areas and where it will not be tripped over. To avoid fire hazard, NEVER route cord under furniture or appliances.
- Always unplug the appliance before cleaning, making any repairs or servicing, or whenever not in use.
- It is normal that there is noise during operation. If too loud, please set the fan to lower speed.

ELECTRICITY SAFETY

- This appliance must be provided with correct voltage via a professionally installed power socket. Make sure the voltage indicated on the label of the appliance is the same as your local supply.
- DO NOT operate the fan with a damaged cord or plug or if the product malfunctions, is dropped or damaged in any manner.
- To reduce the risk of fire or electric shock, DO NOT use this fan with any solid-state speed control device.
- IMPORTANT - This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to rig this safety feature.
- This product employs overload protection (fuse). A blown fuse indicates an overload or short-circuit situation. If the fuse blows, unplug the product from the outlet. Replace the fuse according to the instructions in this manual (follow product marking for proper fuse rating) and check the product. If the replacement fuse blows, a short-circuit may be present and the product should be discarded or returned to an authorized service facility for examination and/or repair.

FOR HOUSEHOLD USE ONLY

READ AND SAVE THESE INSTRUCTIONS

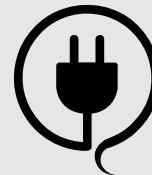

Regular Check

Have your Stand Fan checked regularly for any sign of malfunction!


Check if

- Plug, cord or appliance is damaged.
 - Excessive noise, unpleasant odor or abnormal heat.
- Stop using, check FAQ and contact TaoTronics Support Team.

02

IN THE BOX


Customized Airflow,
Personalized Comfort

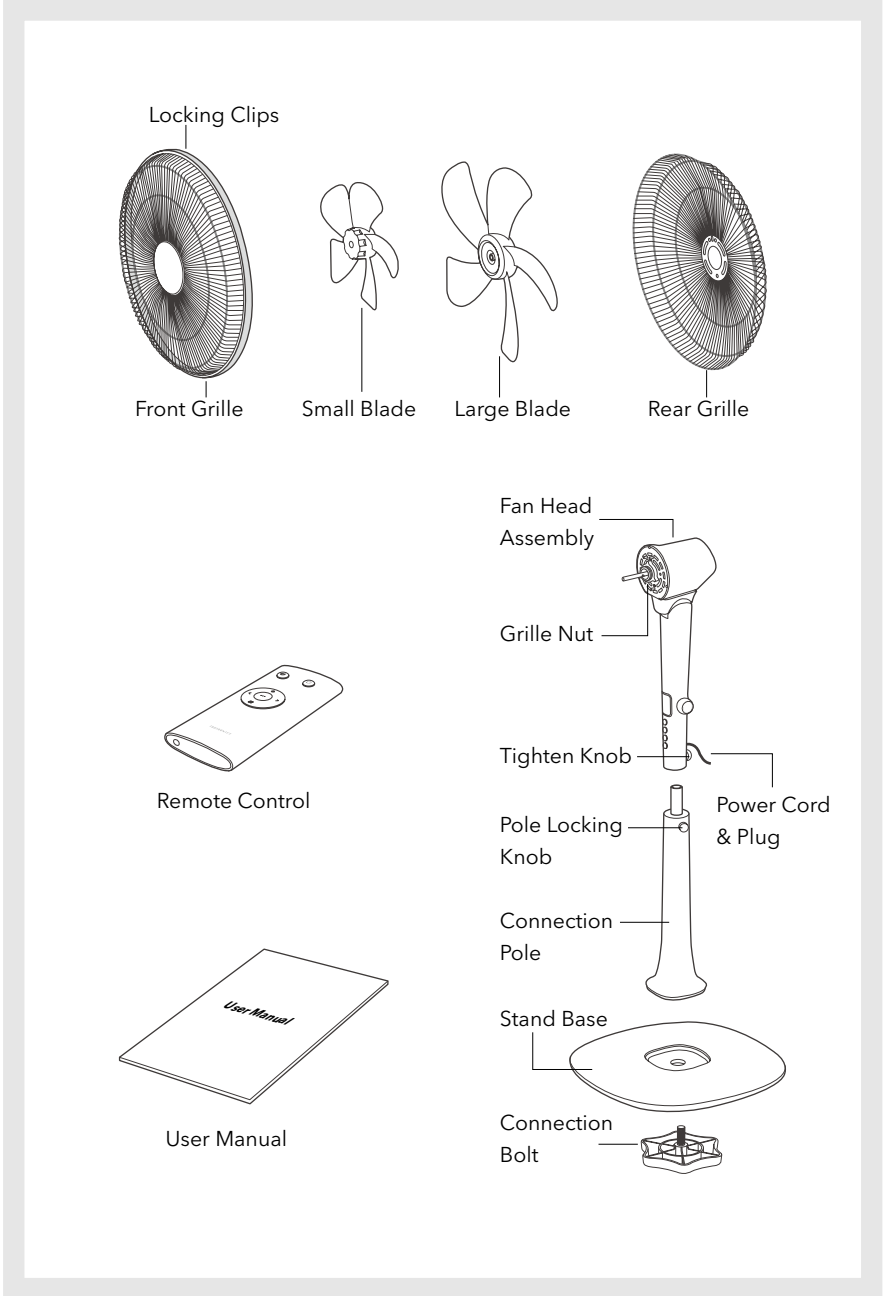


03

ASSEMBLING YOUR FAN


Customized Airflow,
Personalized Comfort

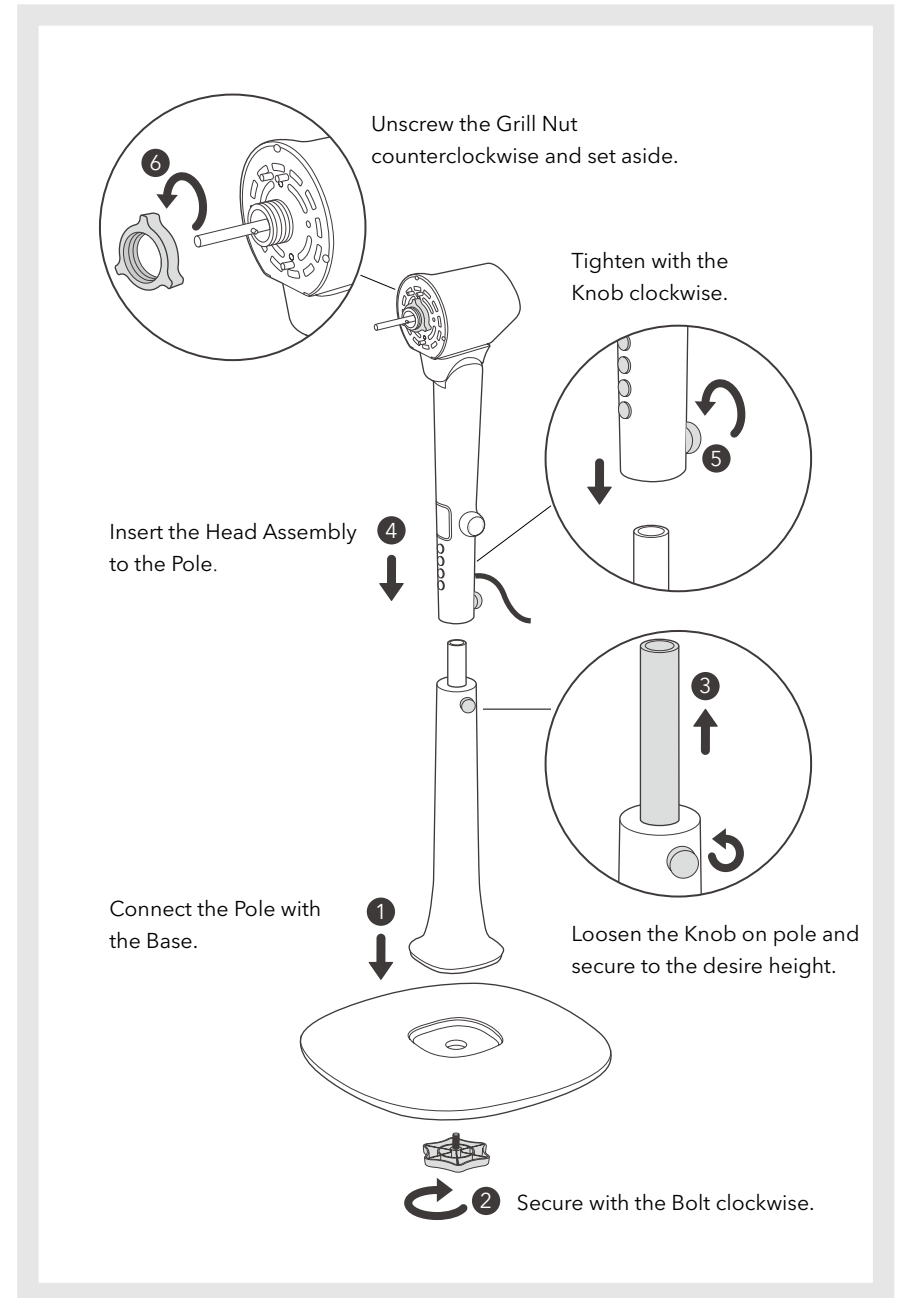


Blade & Grille

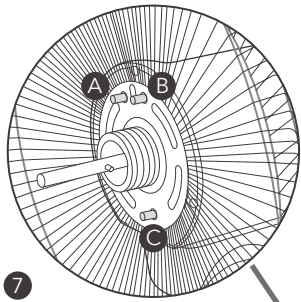

7
Position the Rear Grille onto the Head Assembly making sure the three alignment holes (A, B, C) are aligned with the three prongs.



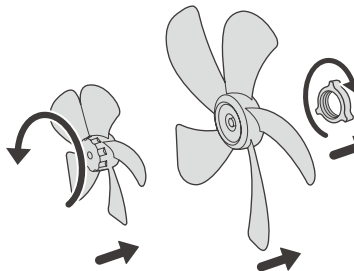


8
Screw on the grill nut clockwise. Install the large blade onto the shaft until retaining pin fits into the notch, then screw on the small blade counterclockwise.


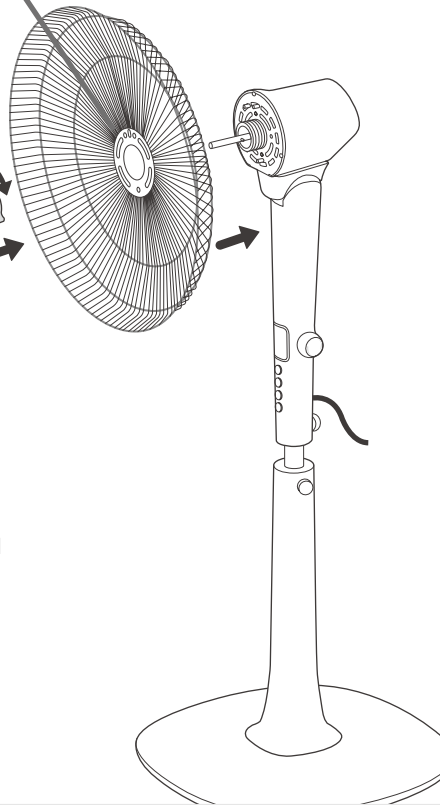


Blade & Grille


Align and clip the Rear Grille into the indent of the Locking Clips on the Front Grille.

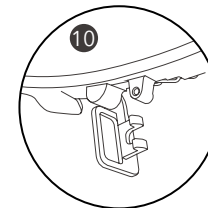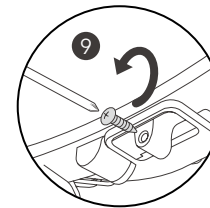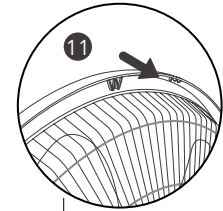

Loosen the Locking Screw and open the Locking Bracket.

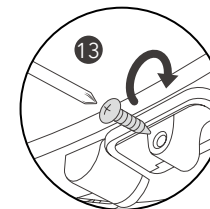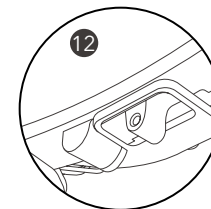


Close the Locking Bracket and secure the grilles with the Locking Screw.

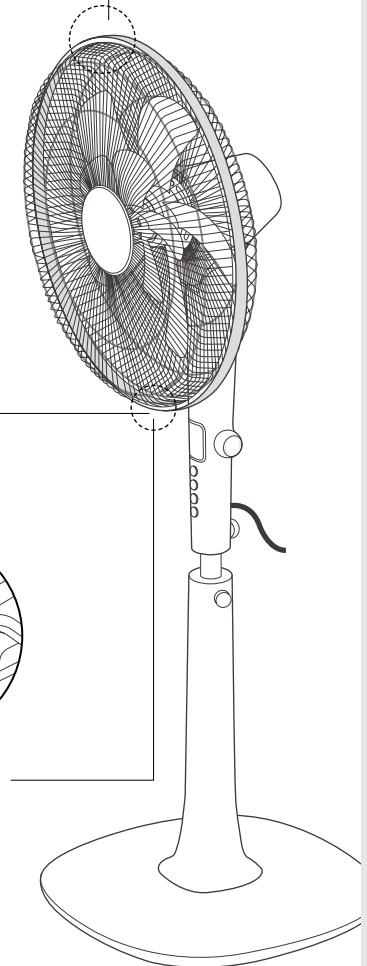


04


USING YOUR FAN

Customized Airflow,
Personalized Comfort

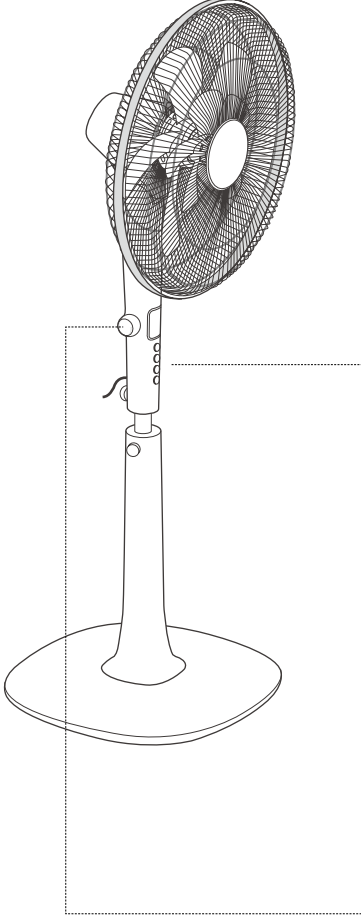


- 


Auto ON/OFF Timer

 - Press repeatedly to select 0 -18h timer.
 - To cancel, select 0H timer, hold Timer button, or press Power button to turn off the unit.
- 


Fan Mode

 - Press repeatedly to cycle through modes Normal-Natural-Sleep.
- 

Oscillation

 - Short press to start / stop oscillating.
 - Long press to mute / unmute.
- 


Power ON/OFF

 - Turn on/Standby mode
- 

Control Knob

 - Fan Speed: Turn the Knob to select fan speed (1-12).
 - Timer Control: Press Timer button then turn the Knob to select 0 -18h timer.

LED Display

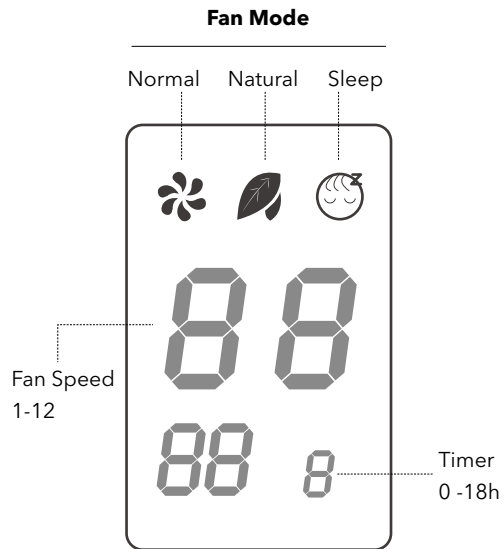

Memory Function



If power is not disconnected, it will always remember your last settings (except timer setting) once you turn it on again.

Auto Display OFF


If no operation is done within 1 minute when powered on, the display will turn off automatically.

To turn the display back on, press any button to wake it up.

Using with Remote Control

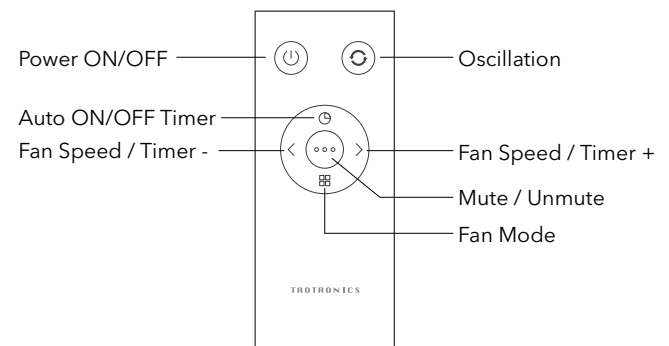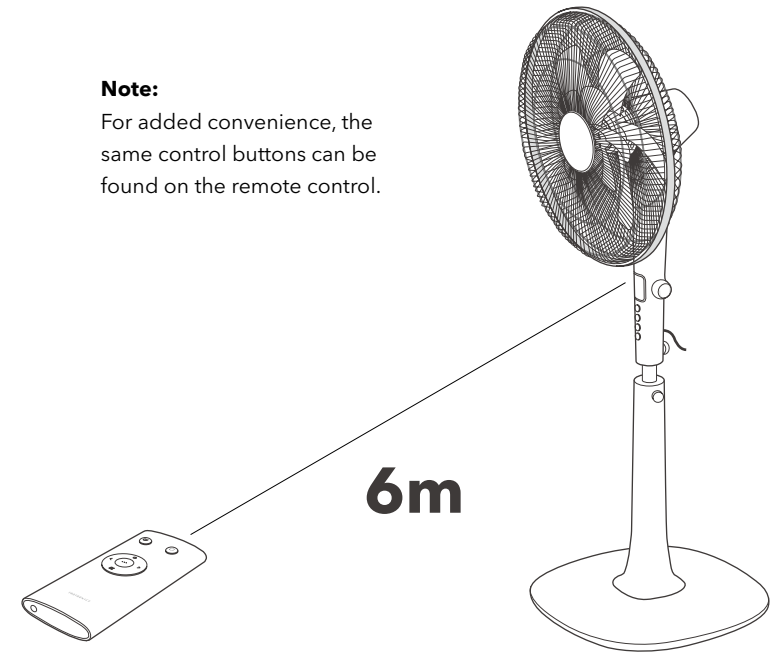


Height/Angle Adjustment

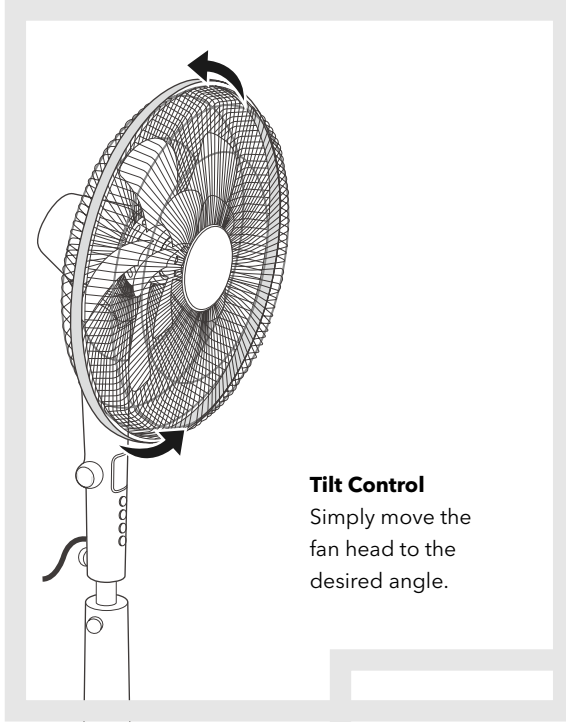

Tilt Control

 
Simply move the fan head to the desired angle.

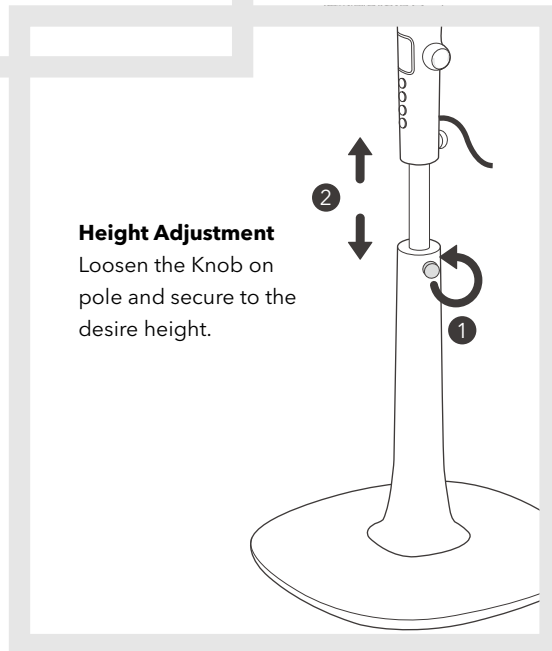

Height Adjustment



Loosen the Knob on pole and secure to the desired height.

Replacement of Batteries

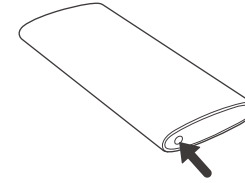

1. Press the locking button to remove the battery holder.

2. Replace the battery with the same type (CR2025, 3V), making sure the (+) side facing up.

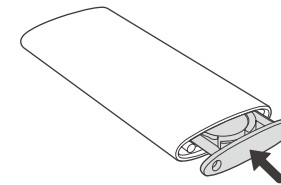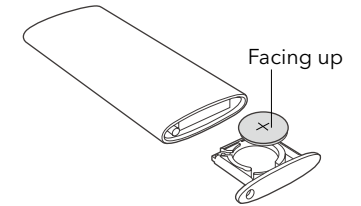

3. Push in the holder until securely locked into place.

CAUTION:

- Replace with new batteries of the same type when replacement is required.
- When not using the remote control for a long time, please take out the batteries.
- Do not attempt to dismantle the batteries.
- Do not dispose the batteries in fire, batteries may explode or leak.
- DO not use rechargeable batteries.


▲ WARNING: Chemical Burn Hazard. Keep batteries away from children.

This product contains a lithium button/coin cell battery. If a new or used lithium button/coin cell battery is swallowed or enters the body, it can cause severe internal burns and can lead to death in as little as 2 hours. Always completely secure the battery compartment. If the battery compartment does not close securely, stop using the product, remove the batteries, and keep it away from children. If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention. The cells shall be disposed of properly, including keeping them away from children. Even used cells may cause injury.


Fuse Replacement

This fan features a fused safety plug which is designed to cut off electric current to the fan if an electrical fault occurs. If your fan loses power and you suspect that the fuse on your fan has blown,

1. Grasp plug and remove from the electrical outlet.
2. Slide fuse cover, located on the top of the plug, towards the prongs of the plug.

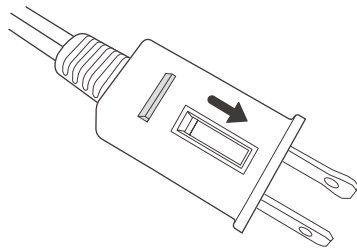

3. Remove the blown fuse and snap a new fuse (5 Amp, 125 Volt only) into place.
4. Slide the cover back to close the fuse compartment.

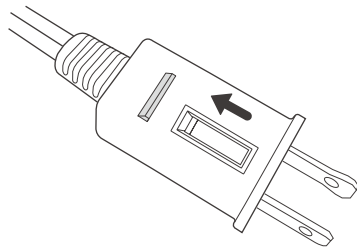


05

CLEANING AND MAINTENANCE

Customized Airflow,
Personalized Comfort

Specifications	Input	120V~ 60Hz
	Rated Power	28 W

Cleaning and Maintenance

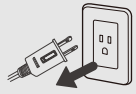


Always make sure the Stand Fan is turned off and unplugged before cleaning.

- DO NOT stick any foreign objects or your fingers inside of the unit.
- Never immerse in water or allow water to drip into the motor housing.
- DO NOT clean with abrasive chemicals or flammable cleaning agents.

Washable Parts



1. Clean with a soft cloth or sponge dipped in diluted neutral detergent and rinse thoroughly.
2. Completely dry before reconnecting to a power source.

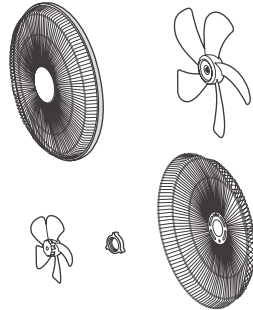


06

TROUBLESHOOTING

Do Not Wash



1. Wipe with a soft, dry cloth. If necessary, wipe with a damp cloth.
2. Completely dry before reconnecting to a power source.

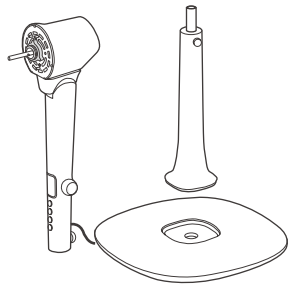

Customized Airflow,
Personalized Comfort

Storage

For storage, disassemble and clean the fan as instructed. You may leave the fan covered to protect it from dust. Store it in a cool, dry place.

Troubleshooting

The following troubleshooting guide addresses the most common problems. If problems persist, feel free to contact our Customer Support at support@taotronics.com.

Excessive noise.

- It is normal that there is noise during operation. If too loud, please set the fan to lower speed.
- Check if the blades are installed properly.

Fan vibrates.

- Make sure the fan is connected to a powered electrical outlet.
- If your fan loses power and you suspect that the fuse on your fan has blown, replace the fuse in the plug as instructed.

Fan does not operate.

- Make sure the fan is placed on a level surface.
- Clean the blades regularly.

07

WARRANTY AND SERVICE

Customized Airflow,
Personalized Comfort

Warranty and Service

Thanks for choosing TaoTronics Stand Fan. This product is covered with TaoTronics product and labor warranty for 12 months from the date of its original purchase.

The warranty will not apply in cases of:

- Accident, misuse, or repairs performed by unauthorized personnel.
- Any unit that has been tampered with or used for commercial purpose.
- Normal wear and tear of wearable parts.
- Use of force, damage caused by external influences.
- Damage caused by non-observance of the User Manual, e.g. connection to an unsuitable mains supply or non-compliance with the instructions.
- Partially or completely dismantled appliances.
- Defects caused by or resulting from damages from shipping or from repairs, service, or alteration to the product or any of its parts that have been performed by a repair person not authorized by TaoTronics.

We can only provide after sales service for products that are sold by TaoTronics or TaoTronics authorized retailers and distributors. If you have purchased your unit from a different place, please contact your seller for return and warranty issues.

* Please have your invoice and order ID ready before contacting Customer Support.



support@taotronics.com



www.taotronics.com



Manufacturer: Shenzhen NearbyExpress
Technology Development Co.,Ltd.
Address: Floor 7, Building E, Galaxy World Phase II,
Shenzhen, China

Rev_1.5_EN



Intertek
4003575
CONFORMS TO
UL STD.507

