


What does the LED light on the new Stages Power meters indicate?

Modified on: Mon, 3 Dec, 2018 at 9:06 AM

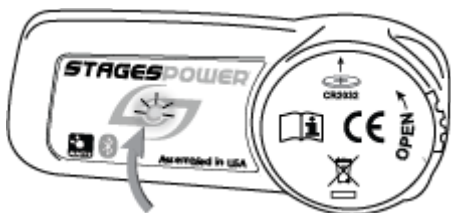

Each Stages Power L and Stages Power R power sensor has an LED indicator located in the center of the power meter housing that indicates the status of the power meter. *Note: Gen 1 and Gen 2 Stages Power meters do not have the LED indicator light on the power meter housing.*

At start up, the power meter's LED light will blink based on the battery level: Green (16-100%), yellow (6-15%), or red (1-5%) flash to indicate battery level every 10 seconds for first minute after start up. For LR, left sensor will flash the left, then right battery level in succession.

Additional LED functions may be enabled with future firmware updates.