1968-452 July 1995

These instructions are for use on 1996 Santa Fe, Cheyenne, Bayport and all Grand Tour series models.

SCREEN ROOM PART NUMBERS: MODELS USED ON:

4752A5921 4750C2921	Bayport, Sun Valley, Shenandoah Santa Fe, Laramie
4747F6571	Yukon, Cheyenne
4728M5601	Key West, Niagara

This package contains:

8	-	4/24A255	Stakes	
8	-	4720D402	Lashing hooks	141
1	-	4350000005	Roll adhesive-backed velcro	
1	-		Screen room storage bag	

1 - 1103E101 10 x 5/8" screw (All models except Key West and Niagara)

8 - 4733-413 3/4" self-tapping phillips head screws

Screen room enclosure

16" - 4753-863 Velstick 3 - 4737-848 Screws

There are two sections to these instructions.

SECTION A. PREPARING THE TRAILER FOR SCREEN ROOM ATTACHMENT

- 1. Raise the trailer top to full height, pull out beds, attach bed support legs and stretch out canvas (not necessary to position canvas support rods).
- 2. Locate two lashing hooks on the curbside body rail next to the front and rear lift arms according to the dimensions shown in figure 1. Attach with 3/4" self-tapping phillips head screws provided.
- 3. (Destiny Series only: Santa Fe, Cheyenne, Bayport) Locate four additional lashing hooks in the corners of the exposed lower frame channels, directly below the body panel, according to the dimensions in figures 2 and 3. Fasten with four 3/4" self-tapping phillips head screws provided.
 - (Grand Tour Series) Locate four additional lashing hooks (two in each corner of the trailer) behind the lower body panel flange as shown in figures 4 and 5.
- 4. Locate two additional lashing hooks on either side of the access doorway as shown in figure 6. The lashing hooks should be 1/2" from the entrance doorway along the bottom flange of the body panel.
 - NOTE: On some trailers, the lashing hook to the rear of the entrance door will be attached to the underside of the floor wood. In these cases, attach the lashing hook with the wood screw provided. Otherwise, attach all lashing hooks with self-tapping screws.

- 5. Wipe clean the underside of the two frame cross channels as well as the outside portion of the main frame channel directly underneath the entrance doorway. Attach velcro to the underside of both frame cross channels below the entrance doorway. The velcro should extend from the end of the cross channel to the main frame channel. Next, attach velcro to the outside lower portion of the main frame channel between the two cross channels. See figure 7. Also, apply a vertical strip of velcro to the exposed frame channel below the lower right corner of the entrance doorway as shown in figure 7.
- 6. Attach the 16" piece of velstick to the wheel well area as shown in figure 8. The velstick may be shortened slightly if necessary. Also, where necessary, three additional screws have been placed in this kit to install the velstick.
- 7. Wipe clean the back edge of the canopy support channel with Isopropyl alcohol and apply the appropriate amount of adhesive-backed velcro along the top back edge of the channel. Do not cover any pre-drilled holes; run velcro between the holes and press down firmly to secure adhesive backing. See figure 9.


SECTION B. ATTACHING THE SCREEN ROOM

- 1. Being sure that everything is clear and out of the way, lower the top to a comfortable working height and set up your self-storing canopy in the normal manner. Do not install the three ridge support poles at this time.
- 2. Unfold screen room to approximate set up position (zipper door located directly in front of trailer doorway). The striped vinyl will face outward on the screen room.
- 3. Starting at either corner of the screen room, attach the screen room front wall to the inside of the canopy support channel by pressing the two halves of velcro together.
- 4. Attach both sidewalls completely from front to rear on the canopy vinyl by pressing the velcro halves together.
 - NOTE: Canopy support legs will be on the outside of the screen room enclosure.
- 5. Crank trailer top to full height.
- 6. Pull the rear screen room vinyl flap around the back of each lift assembly and secure the two flap halves together by pressing the velcro strips firmly together.
- 7. Twist and pull one telescoping ridge pole (provided in canopy package) apart to a length equivalent to the distance between the trailer top and the canopy support channel. Allow the button on the inner pole to pop into the nearest hole on the outer pole to lock poles at this length.
- 8. From inside the screen room, insert straight tip on ridge pole through the brass grommet on either front inside corner of screen room and into the 7/16" hole 4" in from the end of the canopy support channel. Allow the canopy storage bag to lie flat against the trailer roof. Place the upper rear screen room flap atop the canopy storage bag. Place the opposite end of the ridge pole (rubber cap end) through the loop sewn to the canopy bag and against the upper rear screen room flap. Adjust the ridge pole until tight.
- 9. Repeat steps 7 and 8 for opposite side of screen room.
- 10. Insert center ridge pole in same manner as side ridge poles; adjust and lock into position.
- 11. Attach the screen room ties to side ridge poles for additional support.


- 12. Attach the looped end of the white elastic shock cord to the lashing hook attached to the body rails by the front and rear lift arms. Attach the opposite end of the shock cord to the outward facing lashing hook located along the lower body panel flange.
- 13. Attach shock cord, sewn into bottom skirt of screen room, to the lashing hooks located at the bottom of the entry doorway and below the ends of the front and rear body panels.
- 14. Attach the velcro half screw on the screen room skirt to the velstick installed on the wheel well flange.
- 15. Attach bottom skirt of screen room to the velcro installed on the frame below the access doorway opening.
- 16. Pull vinyl bottom flaps of screen room inside room.
- 17. Raise bottom skirt to locate tie-down stake loops and drive stakes into ground at appropriate locations.
- 18. Attach exterior front corner ties of screen room to canopy poles.
 - NOTE: Canopy poles should be located outside the screen room enclosure.
- 19. Check ridge poles and canopy poles for proper tension and insure they are locked into position.
- 20. Roll up the screen room privacy flaps and secure to the ties located above the screen.
 - NOTE: Screen room flaps are designed for privacy only and are not intended to be waterproof.
- 21. To operate the zipper from the outside of the screen room, remove one of the loops sewn near the bottom of the zipper from the tent stake. Holding the loop securely to the ground with your foot, raise the zipper slider with one hand.

CAUTION: To avoid possible damage to the zipper, raise the zipper slider to the top of the zipper before entering or exiting the screen room


To exit the screen room from the inside, place your foot on the vinyl skirt and raise the zipper slider.

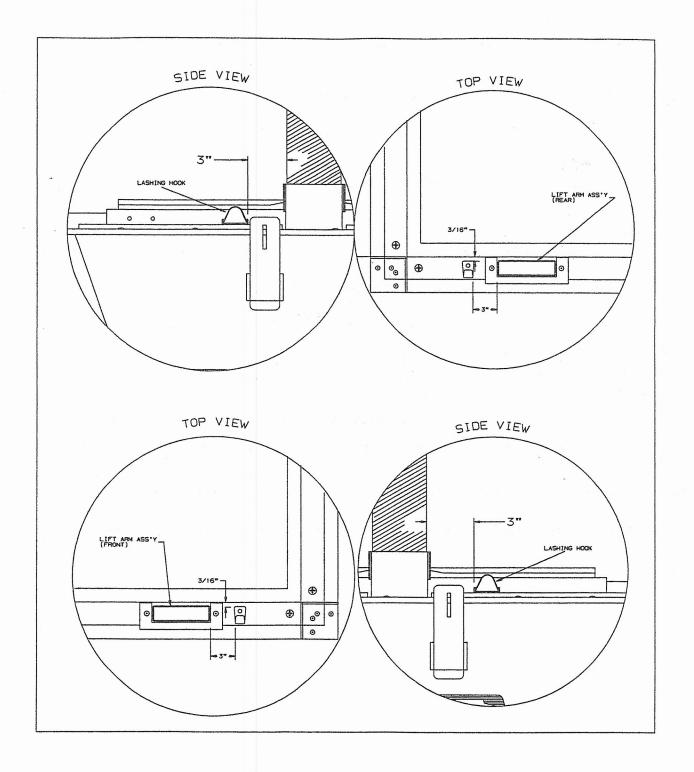





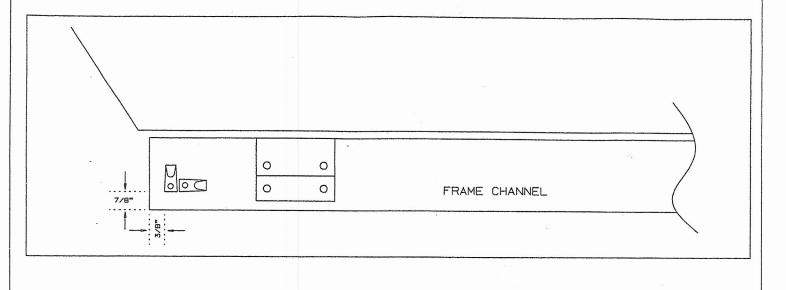





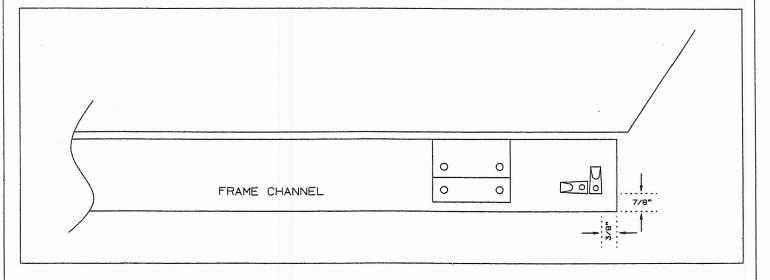


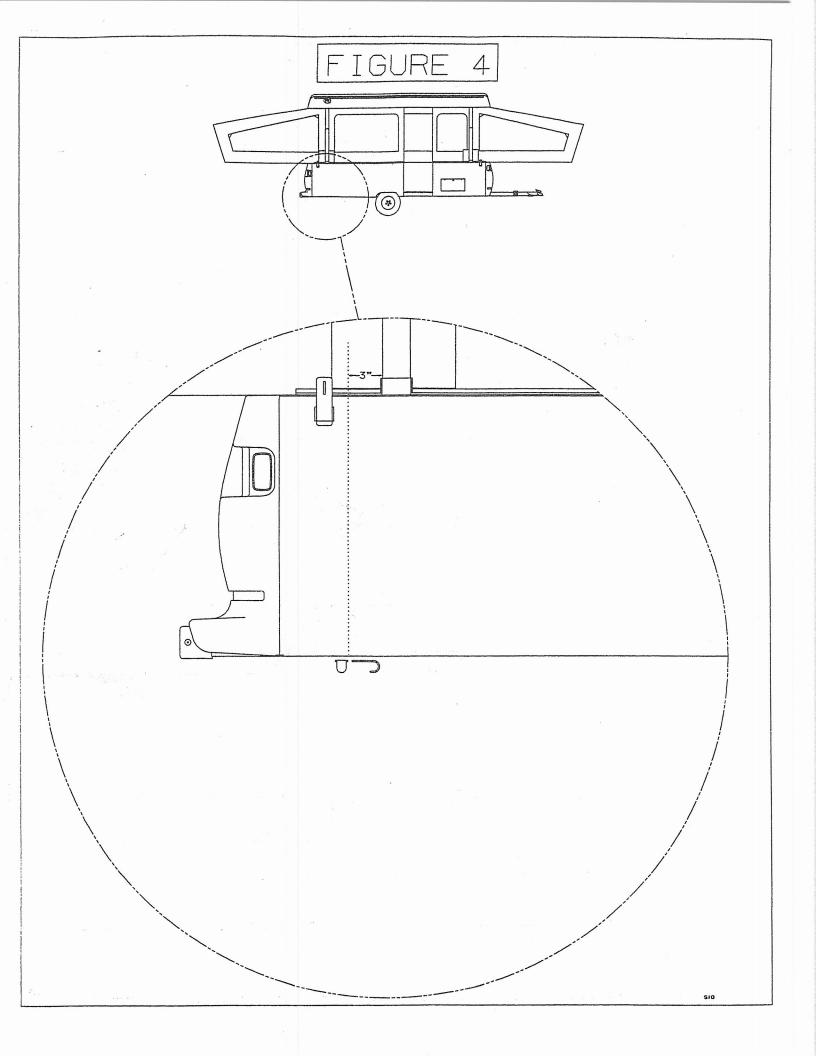

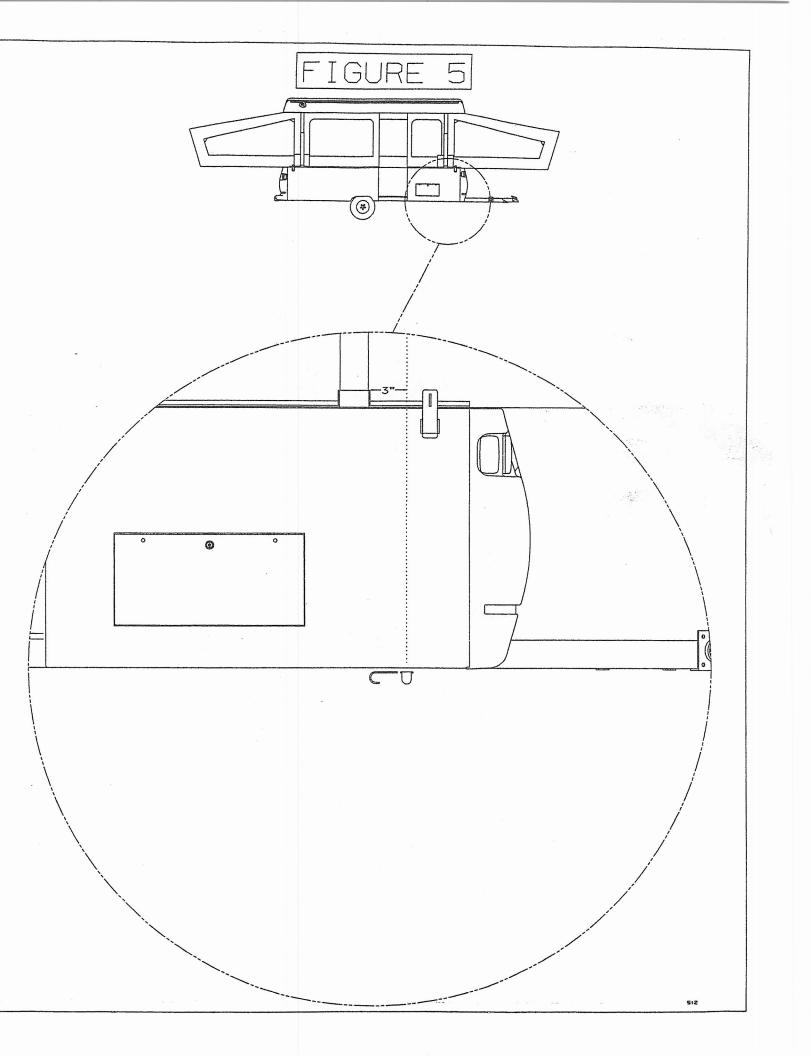


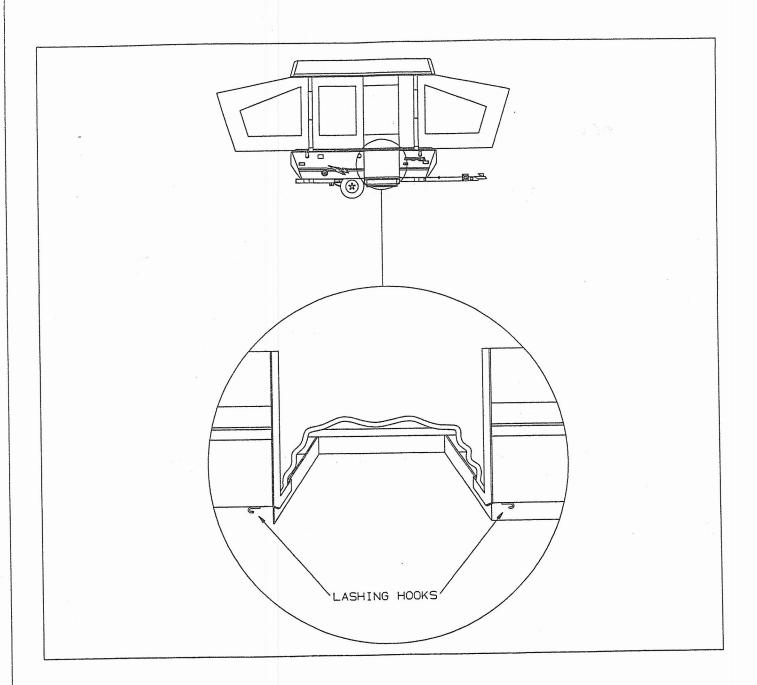

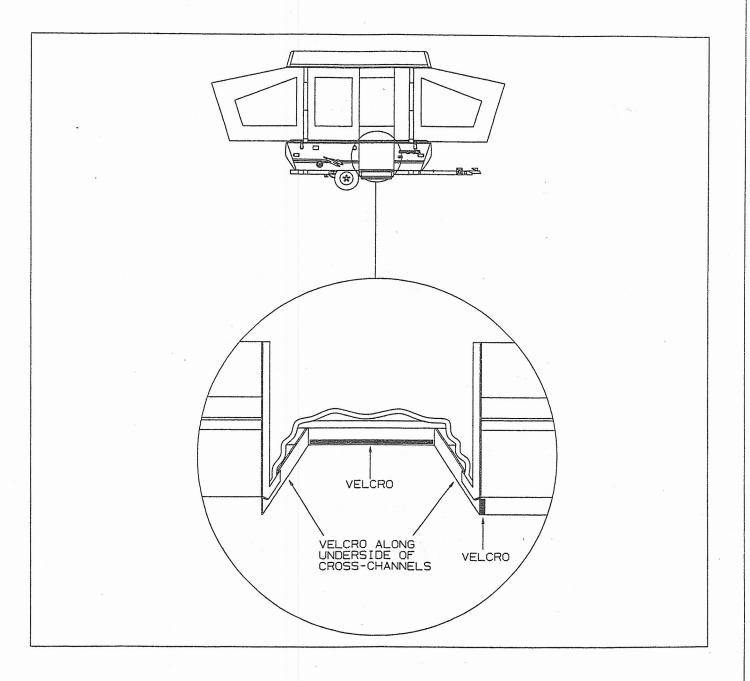

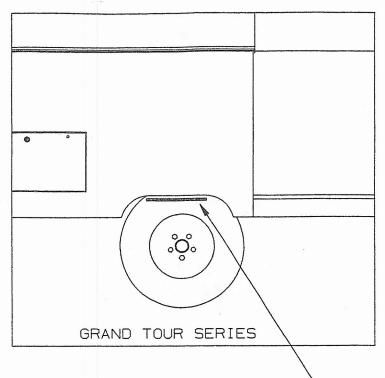

16" VELSTICK
REMOVE 3 PHILLIPS SCREWS FROM WHEEL
WELL AND USE TO ATTACH VELSTICK

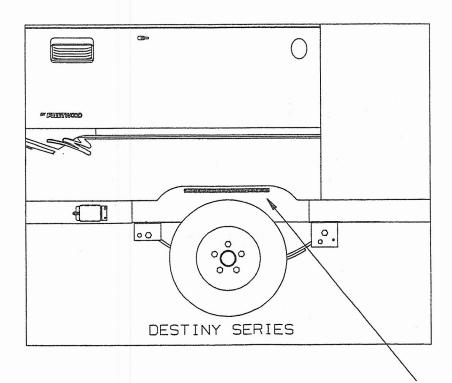

16" VELSTICK Install with two screws (4737-848) Flush with outer edge of wheel well

