

**FLEETWOOD FOLDING TRAILERS, INC.  
INSTALLATION INSTRUCTIONS**

1968-498C  
Revised June 2005

**SCREEN ROOM/DELUXE ADD-A-ROOM CUSTOMER USAGE  
INSTRUCTIONS**

1. Raise the roof to a comfortable working height and set-up the canopy in the normal manner. Install the ridge support poles at this time.
  2. Unfold screen room or add-a-room to approximate set up position. The striped vinyl will face outward.
  3. Attach screen room or add-a-room front to the center ridge pole and re-insert center ridge pole in canopy support.
  4. Starting at either corner of the screen room or add-a-room, attach the screen room or add-a-room front wall to the inside of the canopy support channel by pressing the two halves of Velcro together.
  5. Attach the snap(s) on the add-a-room front panel to the snap studs on the canopy support bar where applicable.
  6. Remove left side ridge pole and place butt end of pole into pocket on top of left screen room or add-a-room panel. Tie the pole to the panel with the three sewn-in tie straps. Reinstall side ridge pole and adjust to proper length. Repeat for right side.
  7. Attach both sidewalls completely from front to rear on the canopy vinyl by pressing the Velcro halves together. Zip the side panels to the front panel.
  8. Tie the screen room or add-a-room to the canopy legs using one tie on the front panel and one tie on the side panel.
- NOTE :** The canopy legs will be outside the screen room.
9. Crank trailer top to full height.
  10. Attach the side screen room or add-a-room Velcro to the Velcro on the screen room adapters to secure the screen room to the canvas.
  11. Attach the looped end of the white elastic shock cords (sewn into the screen room or add-a-room side panels) to the lashing hook attached to the body rails by the front and rear lift arms. Attach the opposite end of the shock cords to the outward facing lashing hook located along the lower body panel flange.

12. Beginning at both ends, working toward the center, attach the Velcro on the bottom skirt of the screen room or add-a-room to the Velcro installed on the bootom flange of the curbside body panels and around the access door. Attach to the lower rear portions of the screen room or add-a-room to the skirt with the zippers on the end of the skirt.
13. Attach the appropriate wheell well flap to the Velcro on the screen room or add-a-room skirt and then to the Velstick installed on the wheel well flange.

**NOTE:** Only on models that have Velstick attached to the wheel well flange.

14. Fold the ground flaps to the inside of the screen room or add-a-room, except rear skirt which should be pushed outside room when installed.
15. Raise ground flap to locate tie-down stake loops and drive stakes into ground at appropriate locations.
16. Check ridge pols and canopy poles for proper tension and insure they are locked into position.
17. On add-a-rooms, roll up the privacy flaps and secure to the ties located above the screen.

**NOTE :** Add-a-room flaps are designed for privacy only and are not intended to be waterproof.

18. To operate the zipper from the outside of the screen room or add-a-room, remove one of the loops sewn near the bottom of the zipper from the tent stake. Holding the loop securely to the ground with your foot, raise the zipper slider with one hand.

**CAUTION :** To avoid possible damage to the zipper, raise the zipper slider to the top of the screen room before entering or exiting the screen room.

To exit the screen room or add-a-room from the inside, place your foot on the vinyl ground flap and raise the zipper slider.