

FIBROPOOL FH 120 POOL HEAT PUMP ADDENDUM TO USER MANUAL

Adjusting the Temperature

- 1. Make sure the heater is on StandBy mode by confirming only one temperature is shown on the display.
- 2. Press SET button until reaching setting "1" (should be factory set for 82'F)
- 3. Hold UP and DOWN buttons at the same time for about 3-5 seconds, until hearing a beep.
- 4. The controls are now unlocked and the temperature can be changed with the UP and DOWN buttons.
- 5. When the desired temperature is selected, press the ON/OFF button to confirm the selection.

Clock Function

Our updated heater control software now includes a programmable clock which displays the time.

To adjust the time:

- 1. Hold SET button until the time begins flashing on the display (about 5 seconds)
- 2. Press UP or DOWN buttons to adjust the hour
- 3. Press SET to confirm the hour selection and proceed to the minute selection
- 4. Press UP or DOWN to adjust the minute
- 5. Press SET to confirm minute selection and register the time

SET Button Functions

- Our updated software now displays each setting option as 0, 1, 2. Our older units will display the setting options as 00, 01, 02.
- Operationally the settings are identical to each other and should not affect the tutorials or instructions

Further Help

Please visit our YouTube channel to find helpful videos and tutorials on a range of our products

www.youtube.com/user/Fibropool