



Canon
1DX
1DX MARK II
1DS MARKIII
1DX MARK III
1D MARK4
5D MARK4
5D MARK II
5D MARK III
5DS
5DSR
5D
7D MARKII
7D
6D MARKII
6D
90D
80D
70D
60D
600D
100D
550D
EOS-R3
EOS-R5/6
EOS-R/RP
EOS M50

Nikon
D6
D5
D4S
D850
D810
D800
D780
D750
D700
D610
D600
D500
D60
D90
D7500
D7200
D7100
D7000
D3200
Z7II
Z7
Z50
ZFC
Z6II
Z6
Z5

Sony
A-99II
A1
A9
A7R4
A7R3
A7SIII
A-7III
A7II
A-7
A-7R
A-6500
A-6300
A-6000

Fuji
GFX-50s
GFX-50r
GFX-100
XT-4
XT-3
XT-2
XT30
XT20
X-PRO3
X-PRO2
X-H1

Panasonic
Lumix DC-GH5
Lumix DC-GH5S
Lumix DC-S1R
Lumix DC-S1H
Lumix DC-S1
Lumix DC-G9

Olympus
E-M5 MARK II
E-M1 MARK II
OM-D E-M1X
OM-D E-M1 MARK III
OM-D E-M10 MARK IV
OM-D E-M10 MARK III