∧ Notice


PLEASE READ ALL INSTRUCTIONS BEFORE ATTEMPTING INSTALLATION

- To prevent personal injury or product damage only licensed electricians should install.
- To avoid electric shock or component damage disconnect power before attempting installation or servicing.
- This product must be installed in accordance with the national electric code (NEC) and all applicable federal, state and local electric codes and safety standards.
- Disconnect product and allow cooling prior to servicing.
- Any alteration or modification of this product is expressly forbidden as it may cause serious personal injury, death, property damage and/or product malfunction.
- To prevent product malfunction and/or electrical shock this product must be properly grounded.
- This luminaire is designed to operate in ambient temperatures ranging from -30°c to 45°c and to be horizontally mounted with the LEDs facing down.


1. Unpacking

Check whether the fuxtures are damaged, please report to the carrier if any damage.


2.install

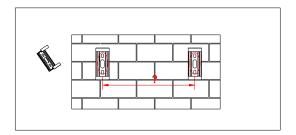


1. Mark the bracket install hole's position on the wall. The distance is 280+/-20 mm for 2FT and 830+/-20mm for 4FT.

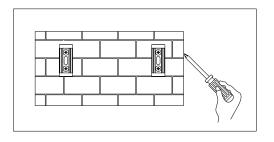

2.Drill the holes and screw on the bracket of the wall

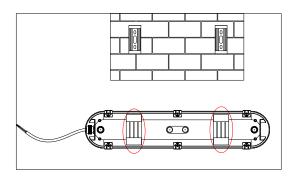

3.Stuck the light on the bracket

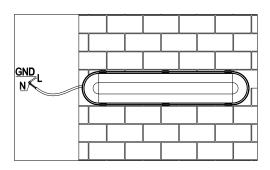

4. Connect the light to the electric supply,make sure the L/N/GND connect correct, use a waterproof connector if it is necessary.

Diagram of connection



