

## **Product Applications:**

WISDOM LED Gas Station Lighting series can be widely used in indoor or outdoor lighting.

#### NOTE:

New refers to mounting to a new/ replaced canopy skin.

Replacement refers to the complete removal and replacement of an existing fixture.


#### **Definition:**

Luminaire is a complete lighting unit; i.e. not replaceable lamp or bulb.

### NOTE:

A licensed electrician must disconnect the primary power from the circuit connected to the fixture, and provide any lockout tags on the breakers or switches as required by the local electrical code.


## **Structure Features**:

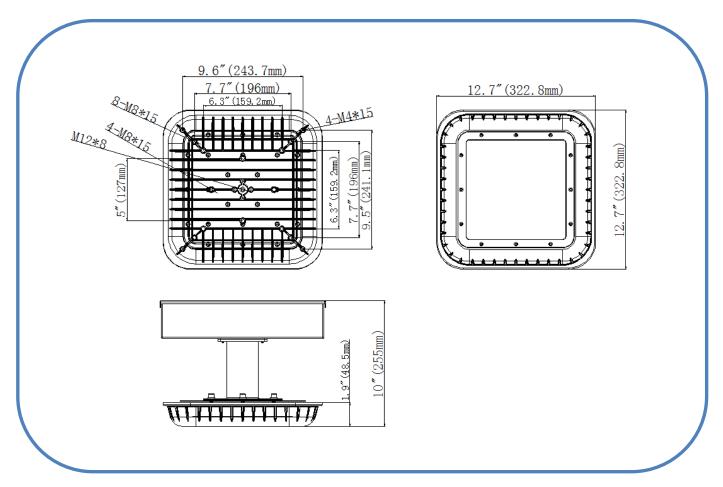


# **LED Gas Station Light Installation Guide**




Wisdom light, wisdom life,

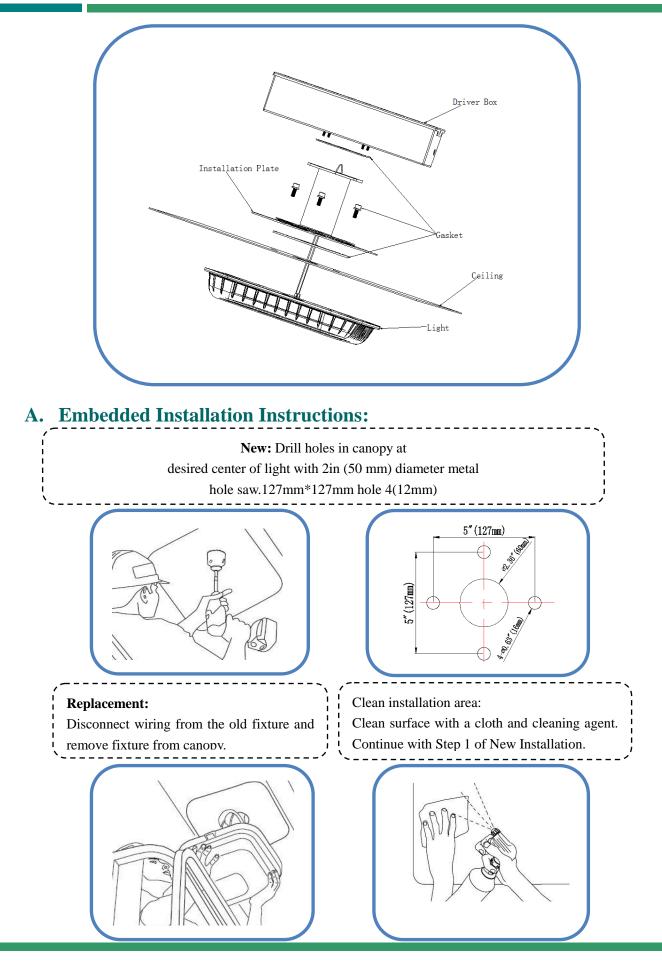

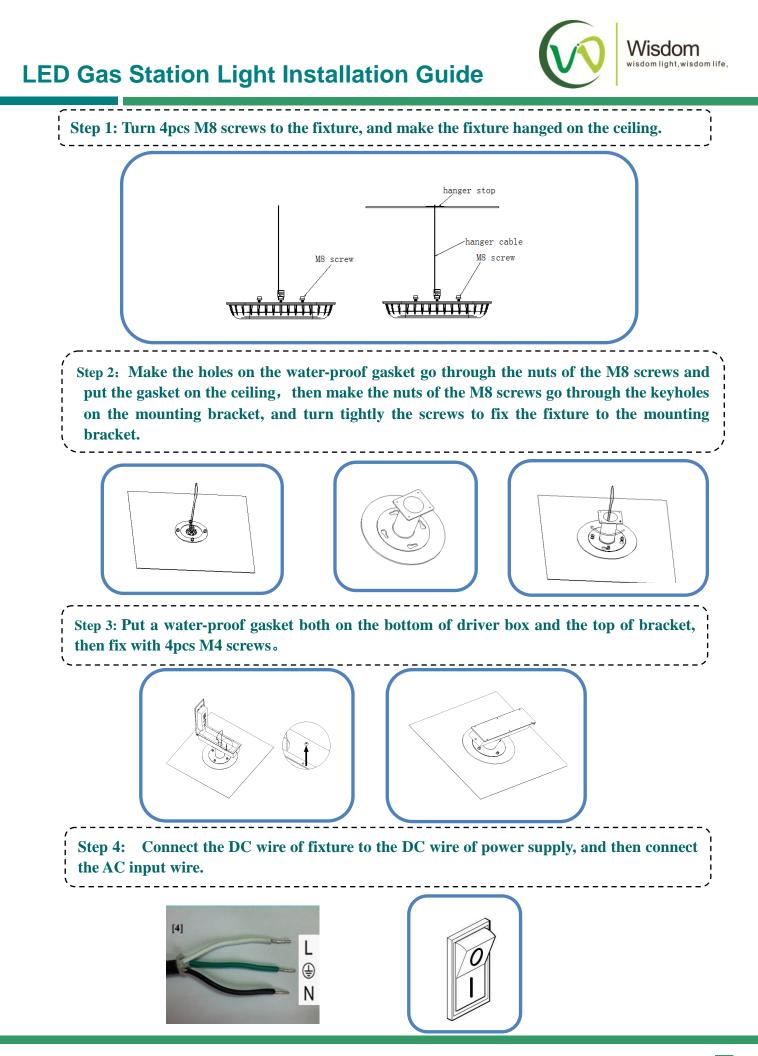




## **B.** Surface Mounting (2\*2Ft Shoebox) :

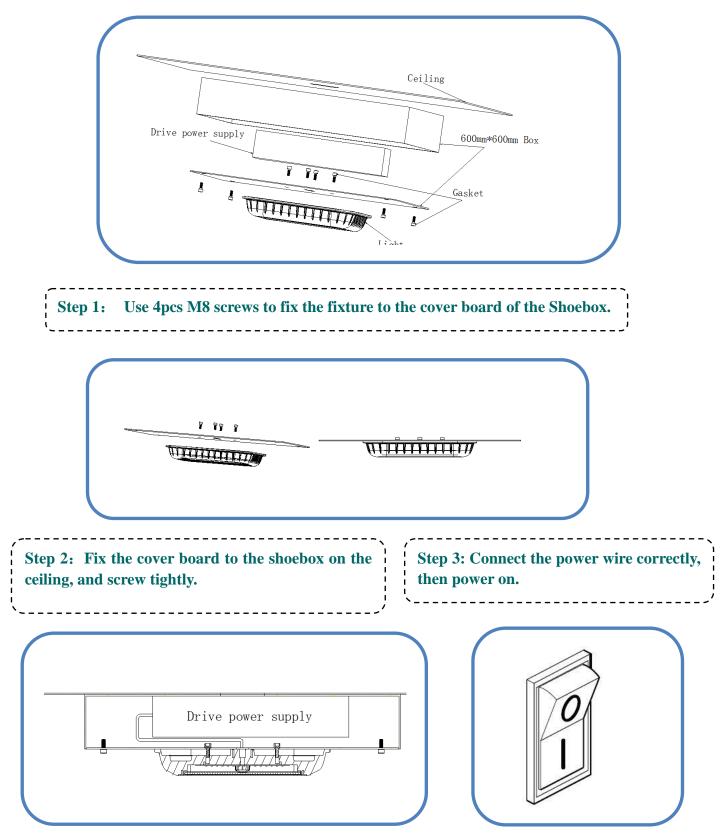

# **LED Gas Station Light Installation Guide**



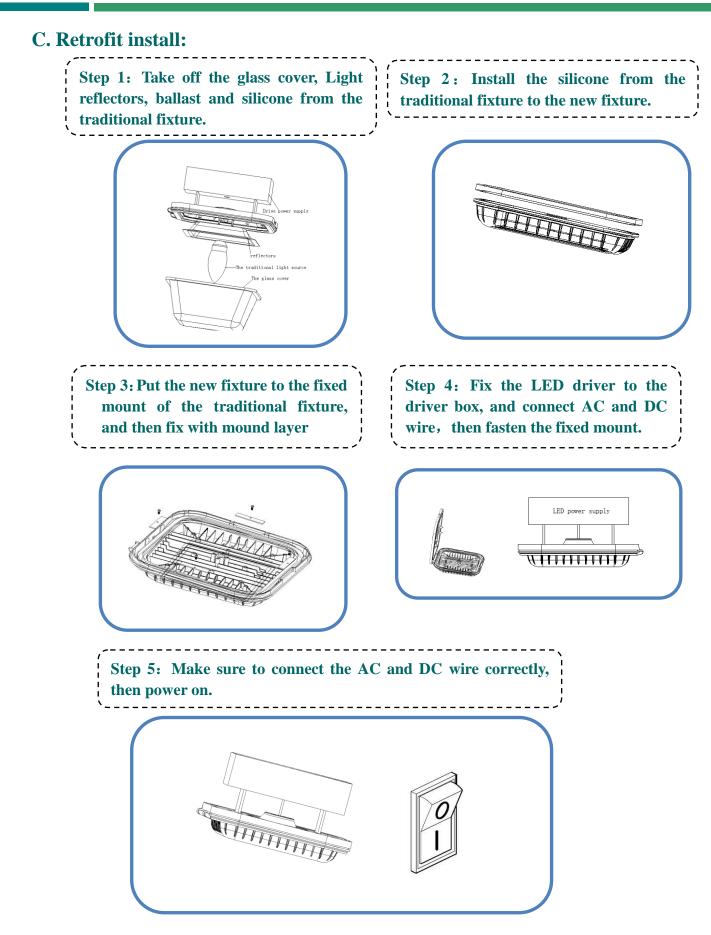



### Quality Assurance

- Quality assurance is based on proper storage, transportation, installation, using and maintenance
- Damages caused by man-made mistake or improper use are not covered by the warranty
- During the warranty period, the manufacturer will provide appropriate support and repair service according to the actual situation
- **Safety Tips:** non-professional personnel is not allowed to do the related operations
- Be careful about the hit or weight of products
- Handle gently in the process of installation and transportation
- Do not energize before completion
- Do not touch the lamp when lighting on
- General heat is normal situation when the fixture is lighting on
- Warning
- The product must be installed according to the instructions. Installed by a person familiar with the product, production and product hazards
- Avoid fire and electric shock. When install the lighting fixtures, you need to understand the electrical characteristics. If you are not sure, do not attempt to install. Please contact the electrician
- Understand the structural features and dimensions of lighting before installation
- Do not drill holes or change internal lines when install

## **Contact Us:**

### WISDOM OPTOELECTRONICS TECHNOLOGY CO., LIMITED

Tel: +86 755 2744 8585 /+86 755 2744 8884Fax: +86 755 2744 8089Email: leo.zhu@wisdom-ssl.comWebsite: www.wisdom-ssl.comAdd: FLOOR 8, BUILDING B2 SUNSHINEINDUSTRIAL PARK HEZHOU XIXIANG<br/>BAOAN DISTRICT SHENZHEN, GUANGDONG, CHINA, 518126