


VINGLI FILE CABINET

ASSEMBLY INSTRUCTION FOR MODELS: FC0WVLW/ FC0W1BB

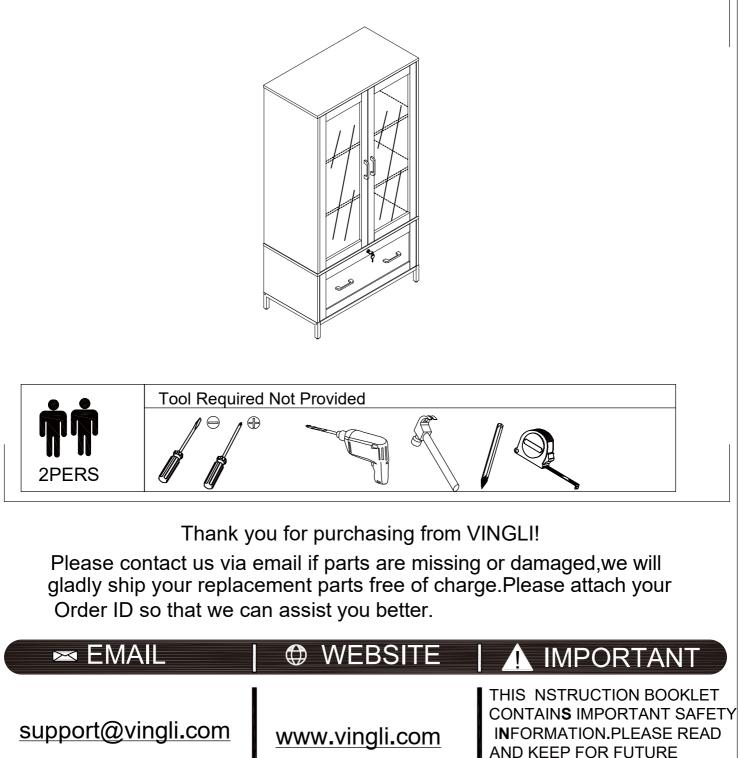

REFERENCE.

CONTENT

1. Return & Warranty·····	1
2. Before Starting ······	2
3. Model & Assembly Tips·····	3
4. Identify Parts	4
5. Part List·····	5
6.Assembly Steps	7
7. Gulde to Hinge Adjustment·····	37
8.Options Of File Storage ······	38
9. FAQs·····	39
10.Supplementary Instruction for Safe Use	·40

RETURN & WARANTY

Thank you for choosing our product!

We would like to take this opportunity to thank you for choosing VINGLI.

We hope that you are completely satisfied with your purchase, and enjoy it for years to come.

Your satisfaction is our highest pursuit.

Return policy

VINGLI believes you will absolutely love your file cabinet, but if for some reason you want to return the product, please contact us directly before you decide to return your product to the retailer. Our Customer Service organization can answer most concerns and can assist you with any questions you may have about your new product.

The item must be returned in good condition, in original box, with all original proof of purchase, parts and accessories, within the time frame specified by the retailer it was purchased from.

Warranty

VINGLI warrants this product to be free from defects in material and workmanship agrees to remedy any such defect. This warranty covers one year from the date of original purchase. This is solely limited to be repair or replacement of defective parts and no assembly labor is included.

This warranty does not apply to any product which has been improperly assembled, subjected to misuse or abuse or which has been altered or repaired in anyway.

Components repaired or replaced warranted through the remainder of the original warranty period only. The defective components will be repaired or replaced without charge, subject to the terms and conditions described above.

For help with assembly, identifying parts, product information or to order parts, please contact us freely.

BEFORE STARTING

Before Using Product

□ Read each step carefully before starting. It is very important that each step is performed in the correct order. If these steps are not followed in sequence, assembly difficulties will occur.



□ Make sure all parts are included



□ Recommended # of people needed for assembly: 2 Estimated assembly time is 4 hours by electric screwdriver.



□ Work in a spacious area and near where the unit will be used. preferably on a carpet, or use a piece of the cardboard packaging to protect your floor and product.



For a smooth assembly process, we suggest you keep a lite tightness for all the screws during assembly. After the whole product is assembled, firmly tighten all the screws.


A WARNING

-Do not allow children to climb on unit.

- -Avoid sharp objects or corrosive chemicals to prevent damage to the product.
- -During assembly, keep parts and packaging materials away from children and pets as there could be potential injury and choking hazards.
- -Please make sure that all objects are removed before moving the assembled unit.
- -The unit must be team lifted, not dragged or pushed. Failure to do so could cause instability, product collapse, and/or serious injury.

MODEL&ASSEMBLY TIPS

Applicable Model

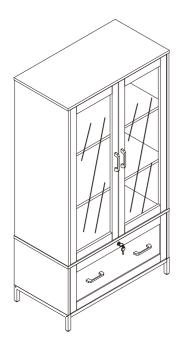

OVERALL SIZE: 29.52"W x 15.7D"x55.11"H 75cmx40cmx140cm(LXWXH)

FEATURES:

•Bookcase with Glass Doors •Lateral File Cabinet W/ Lock (Letter/A4/Legal Size) •Home Office Style

MAXIMUM LOAD: DRAWER BOTTOM: 88 LBS HANGING ROD: 44 LBS

Estimated Time for Assembly


240mins with an electric screwdriver

Caution:


- 1. This product is designed for home use and not intended for commercial use.
- 2. This product contains small components. Please ensure that they are kept away from small children.
- 3. Be careful when using power tools to assemble your furniture. Power tools may strip or damage the parts.

IDENTIFY PARTS


1 case shipment

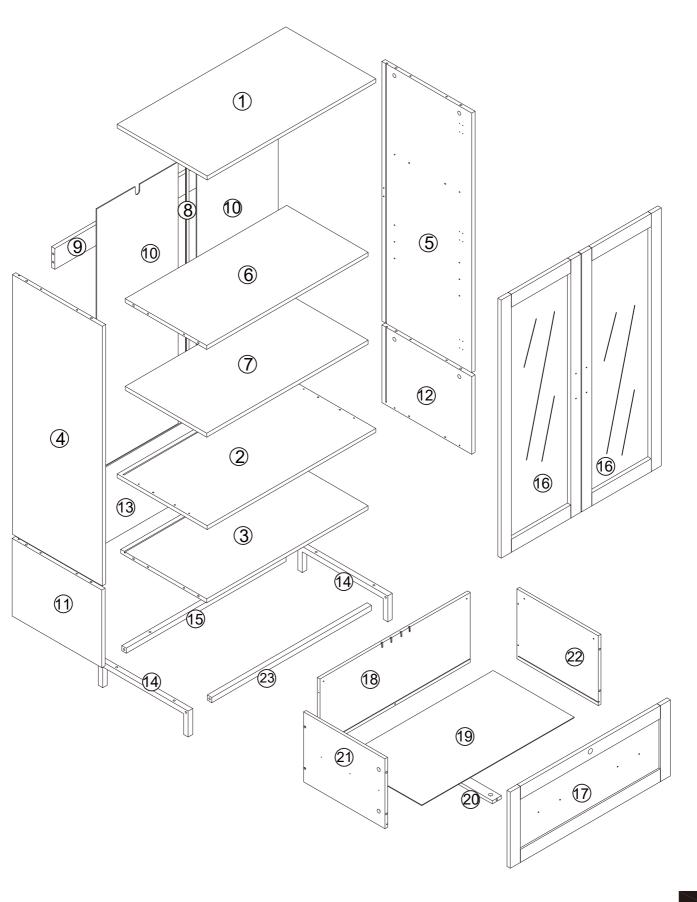


PART LIST

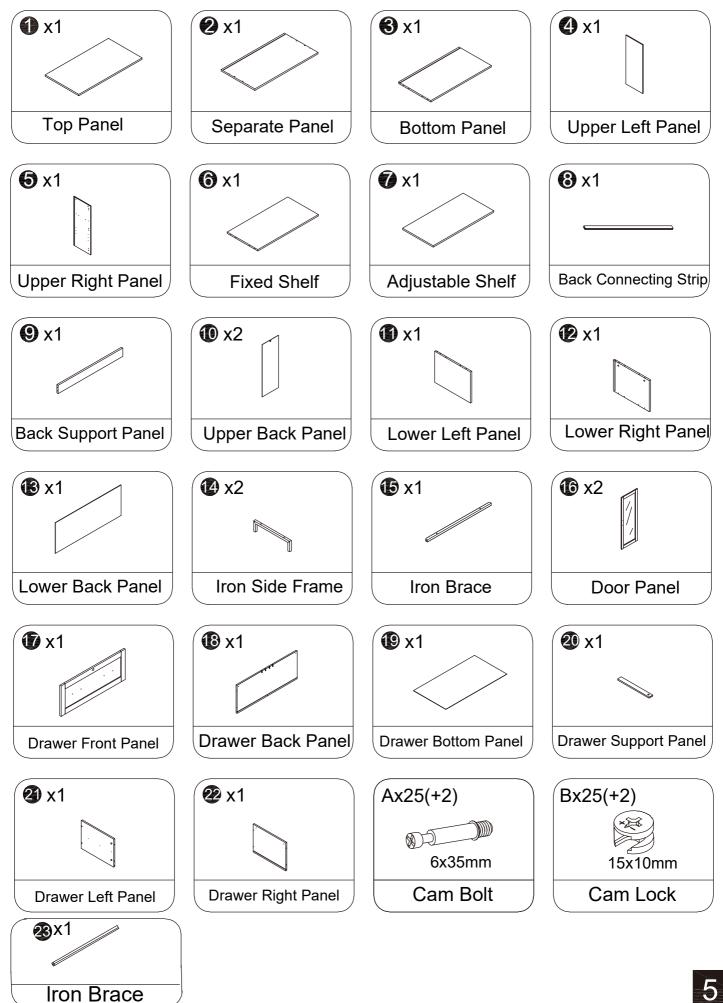


PART LIST

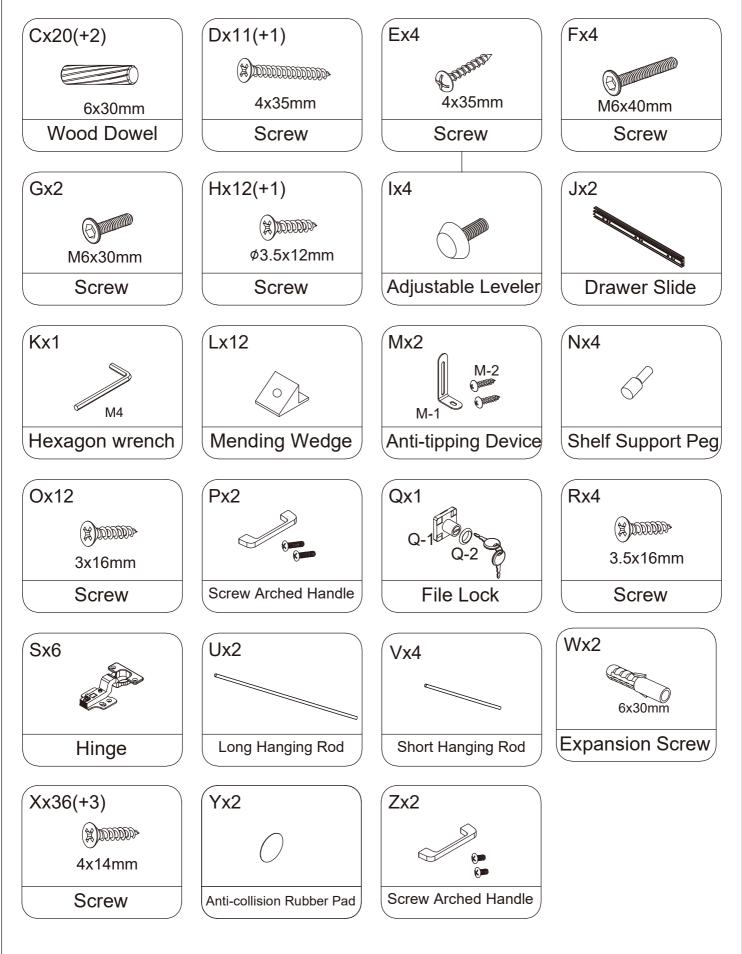

Detach the drawer slide before assembling it, there is a detach button on the side of the drawer slide and you can remove the drawer slide by pressing the button down

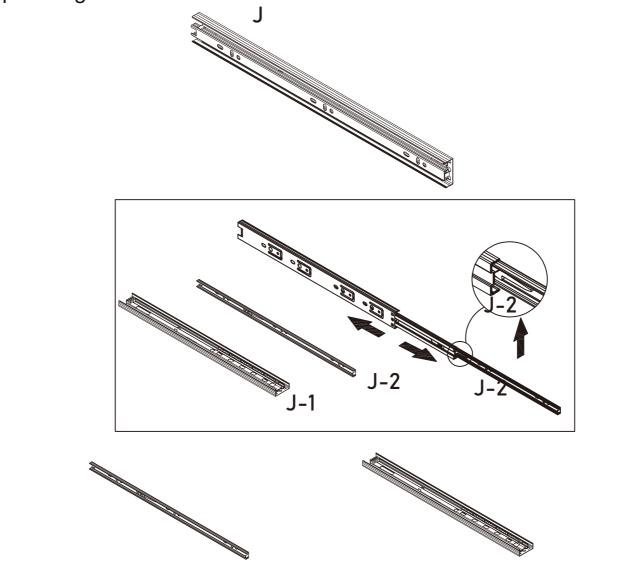



Guide to assemble the Cam Bolt and Cam Lock. Note to align the arrow of the Cam Lock with the direction of the head of the Cam Bolt, and rotate the Cam Lock until it is locked

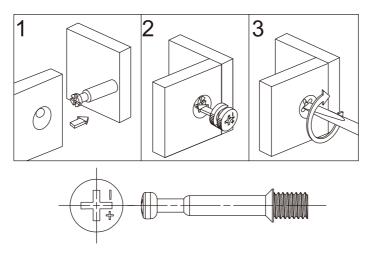



STEP 1

  Fix the Anti-tipping Device(M-1) on Panel #3 with Screw(M-2) Screw the Cam Bolt(A) to Panel #1




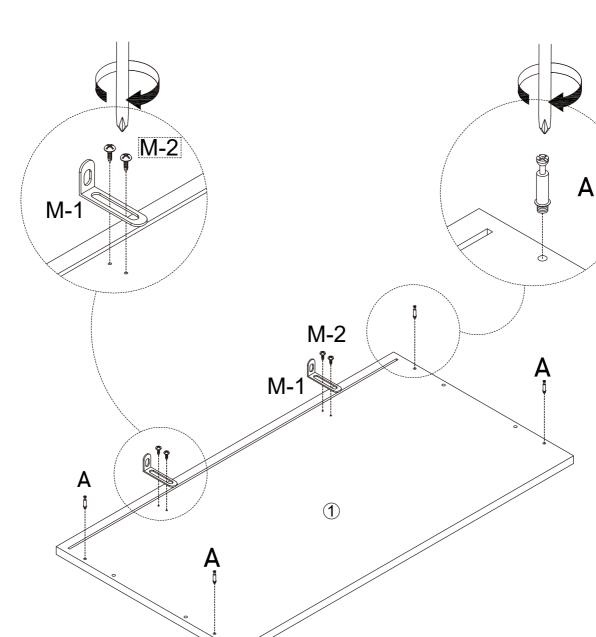




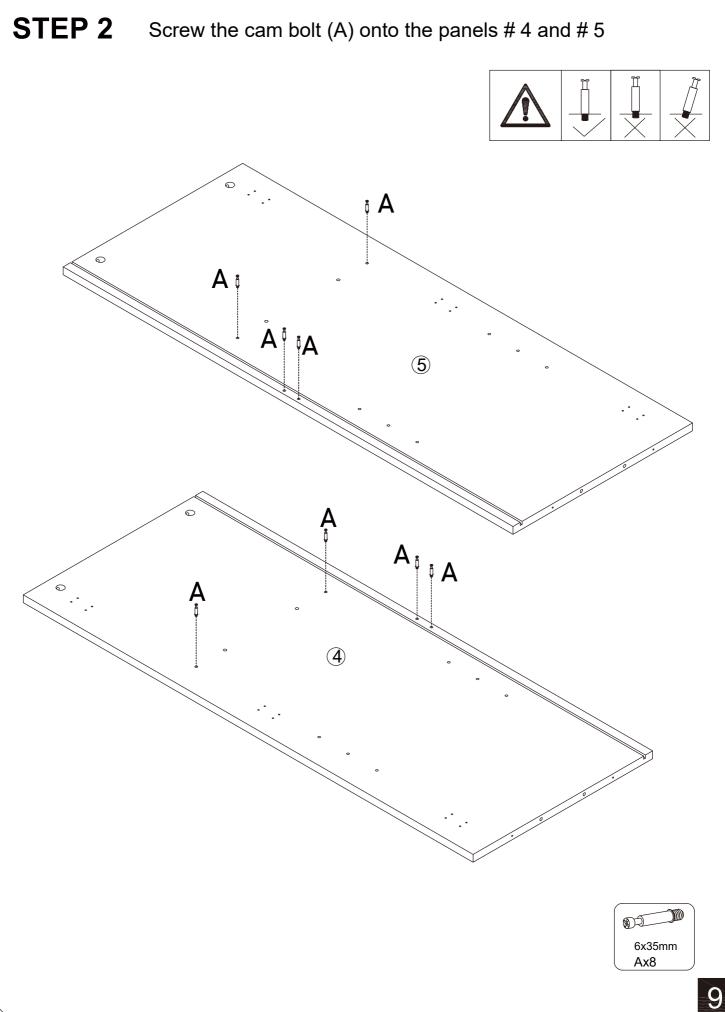



STEP 3 Insert Wood Dowel(C) into Panel #6 #9 first,and then connect Panel #5 to them with Cam Lock(B)

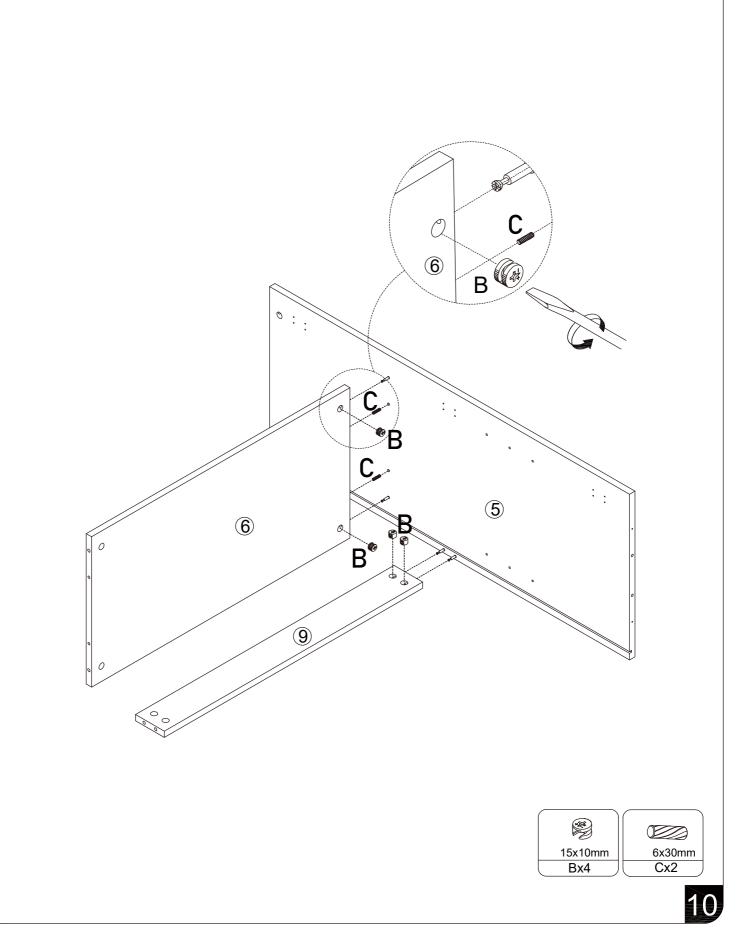


STEP 4 Insert Wood Dowel(C) into Panel #6 #9 first,and then connect Panel #4 to them with Cam Lock(B) D 6 В : 0 6 (4) B (9) (5) Ð 15x10mm 6x30mm Bx4 Cx2

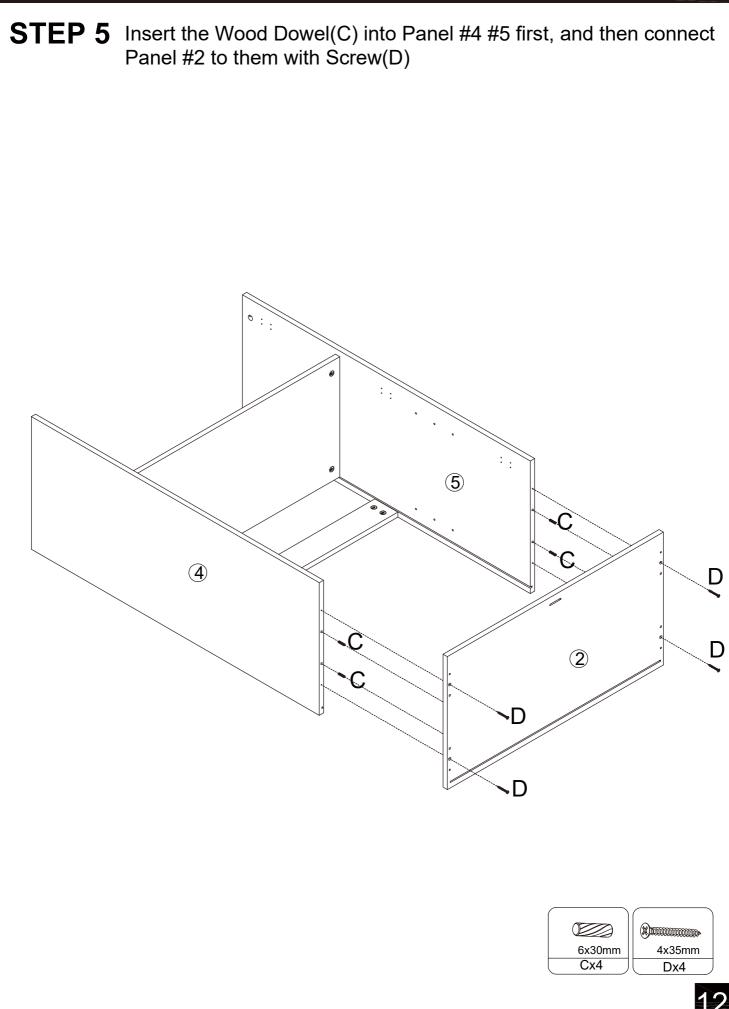


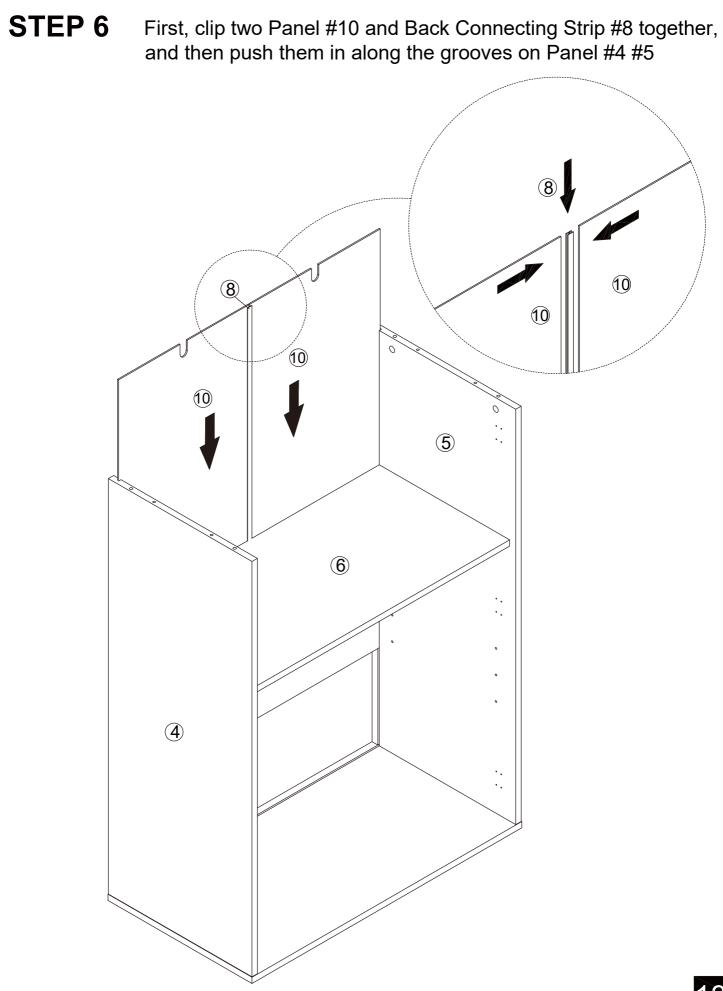

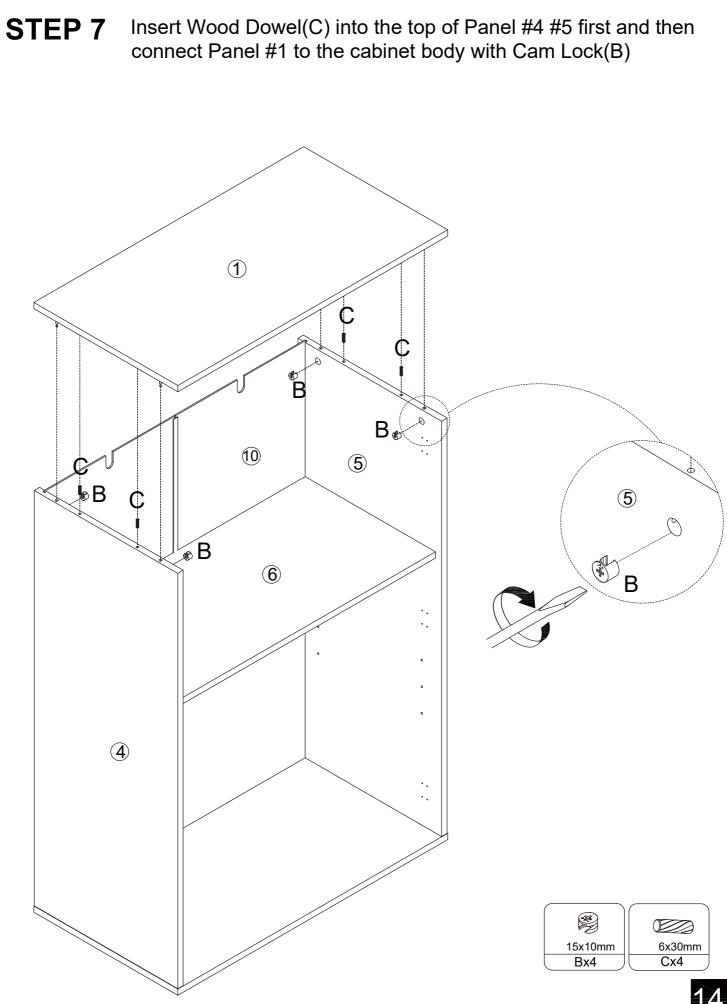


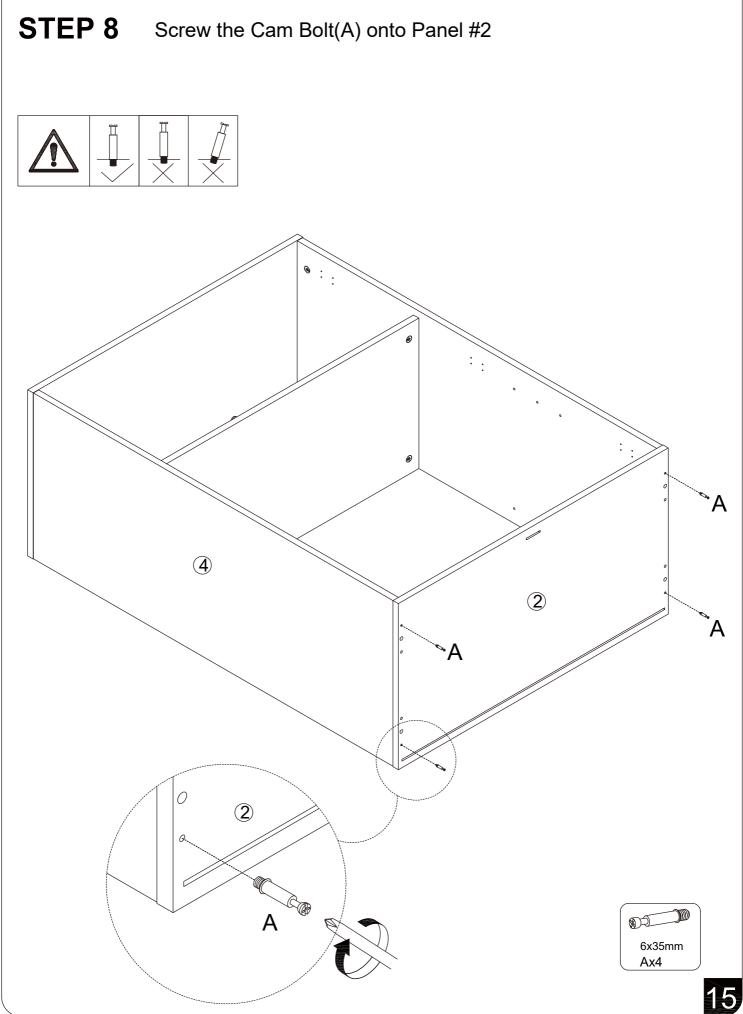


STEP 9 Attach the drawer slides to Panel #11 #12 with Screw(H) Kind Tips: The pre-drilled holes for locating the drawer slides are relatively small, look carefully. Please don't worry, they are there Screw the Cam Bolt (A) onto Panel #11 #12

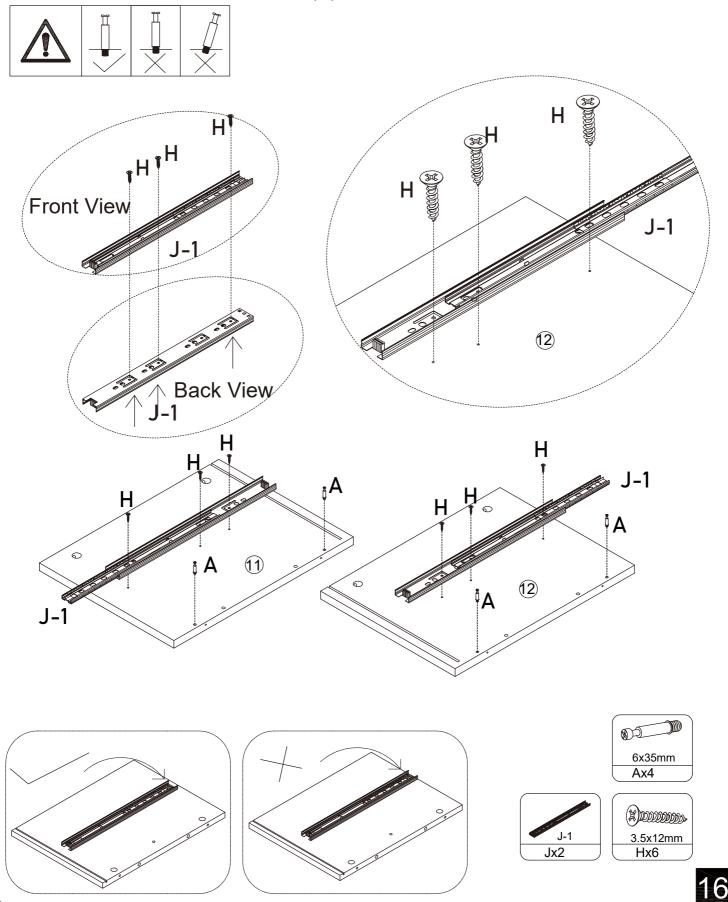

STEP 10 Insert Wood Dowel(C) into Panel #3 first,and then connect Panel #11 #12 to it with Cam Lock(B)

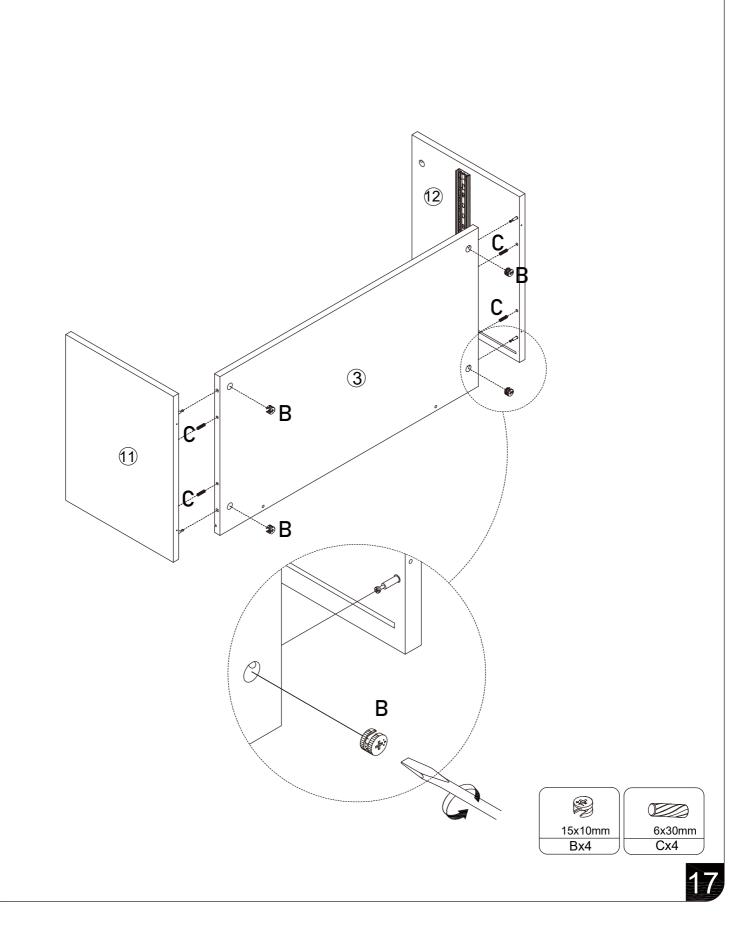



STEP 11 Build the iron frame part

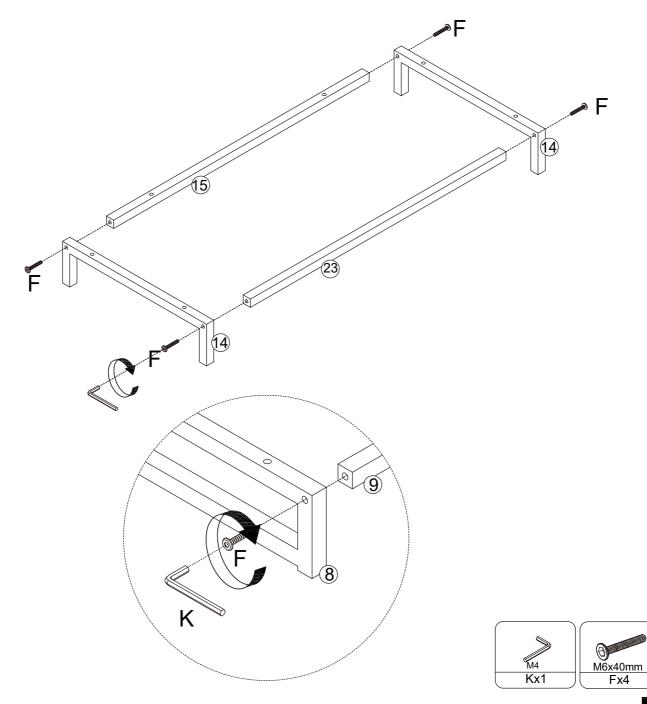



STEP 12 Connect the iron frame part to Panel #3 with Screw(E G) Note to use the correct screws 0 (12) Ø Ε Ø 14 Ø 3 Ø νE 1 G Е 15 Ē (14) G Ε Q F Contraction 0 15 Omm 0 M6x30mm Gx2 4x35mm Ex4

STEP 13 Connect the Adjustable Levelers to the bottom

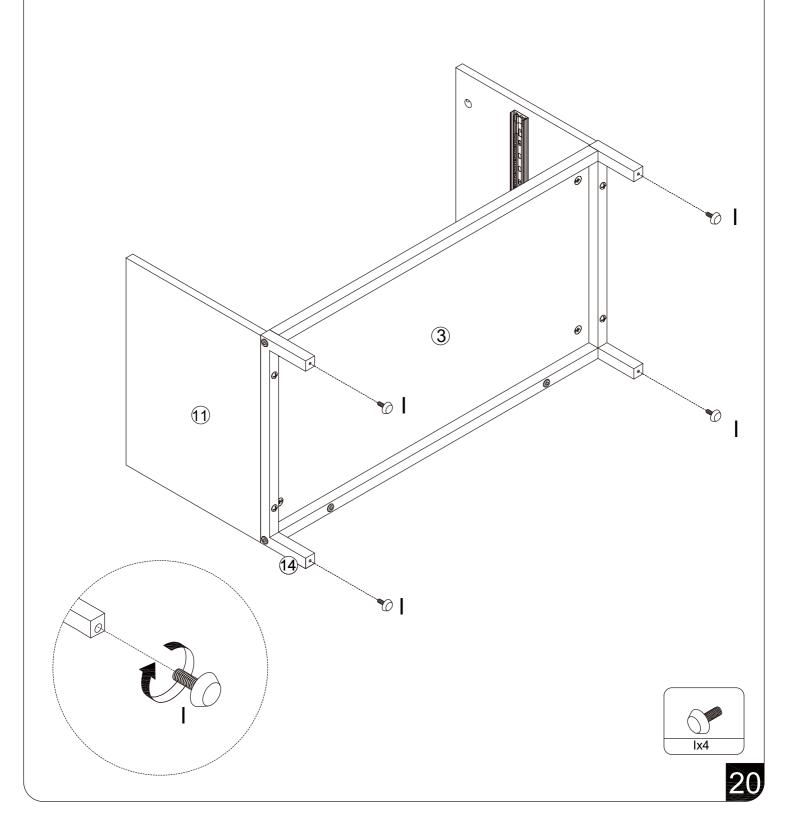


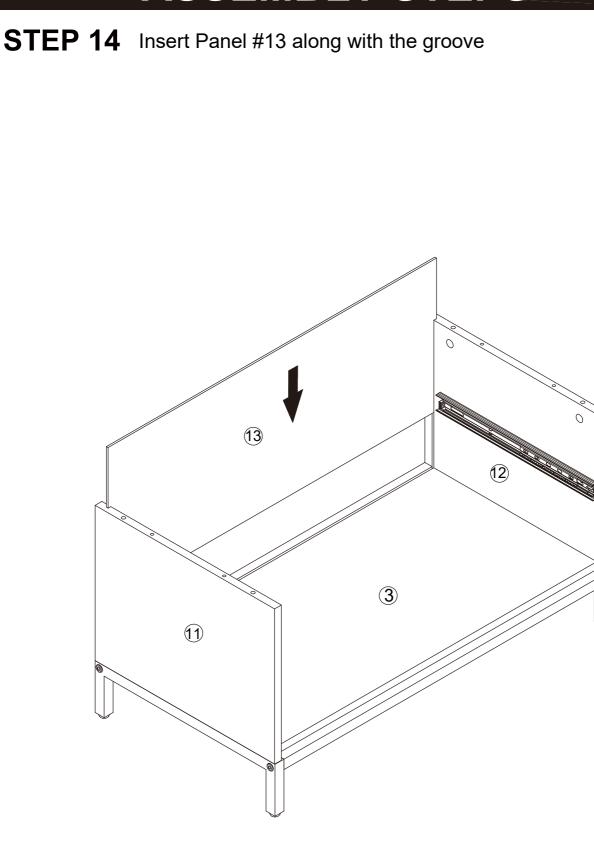

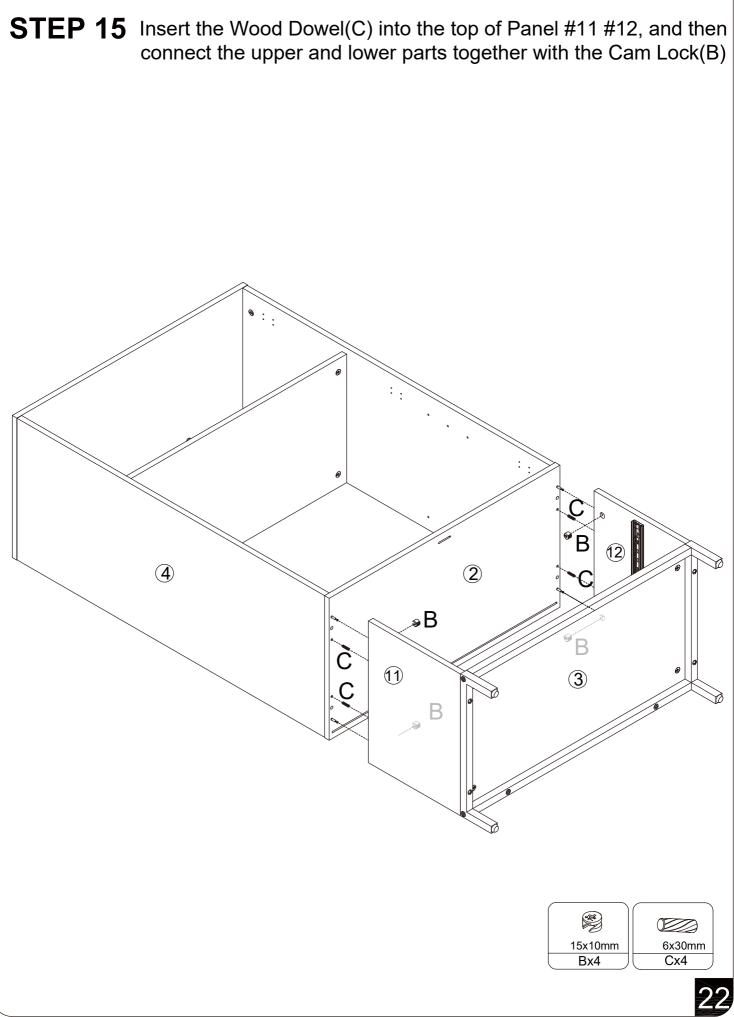

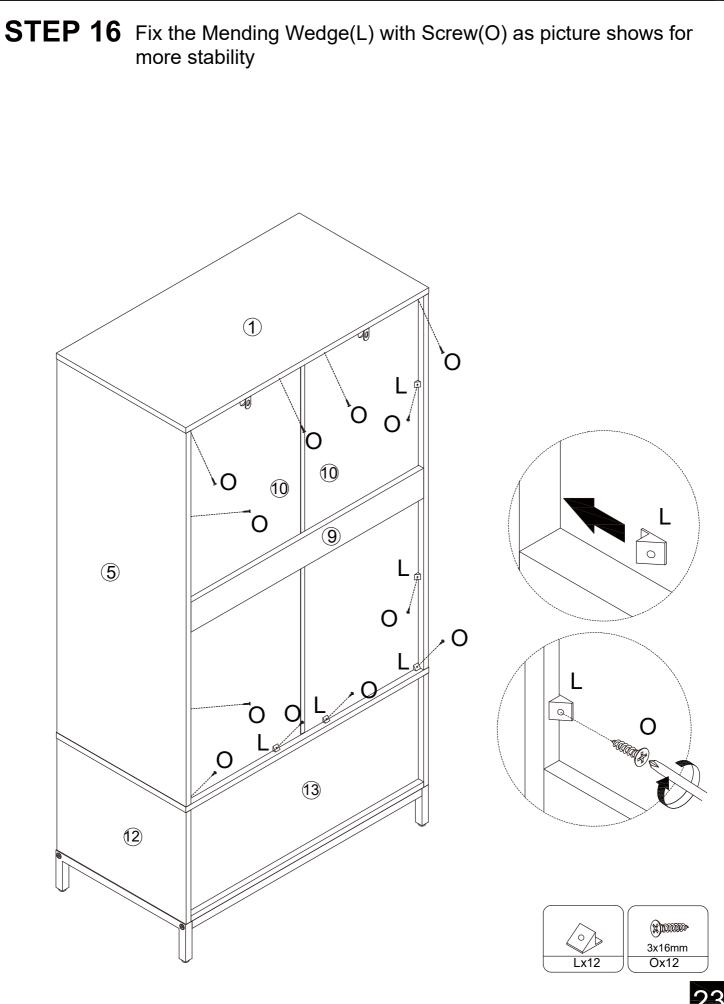


STEP 17 Drill holes in the wall, insert Expansion Screw(W), and fix the item to the wall with Screw(D) for safe use

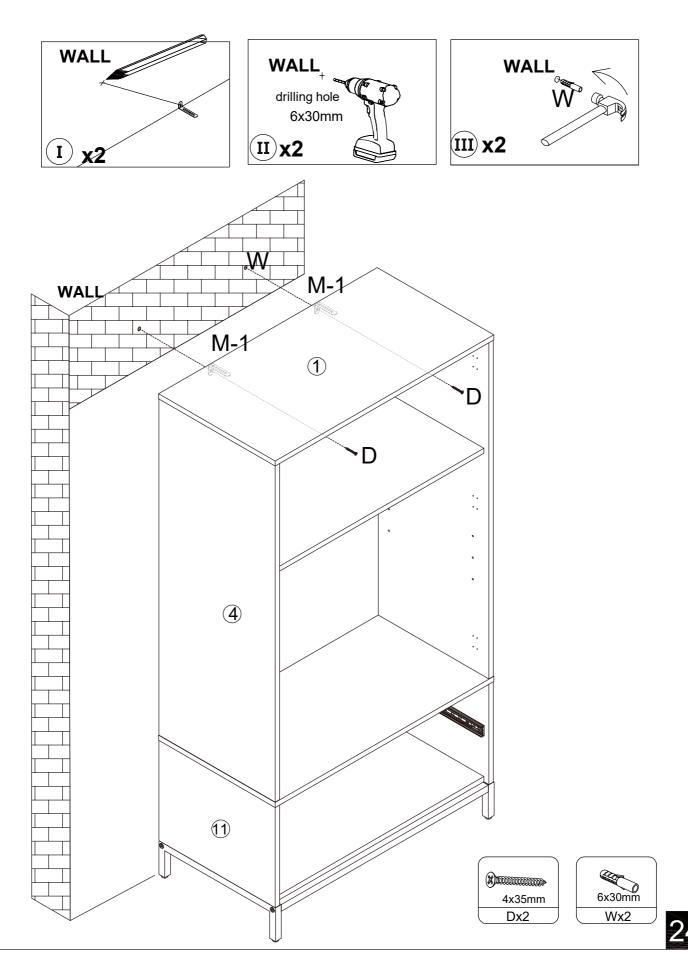


STEP 18 Insert the Shelf Support Peg(N) as needed and place the Adjustable Shelf #7 accordingly 1 (5) P Ń (5) N N N N 4 7 1 Nx4

25

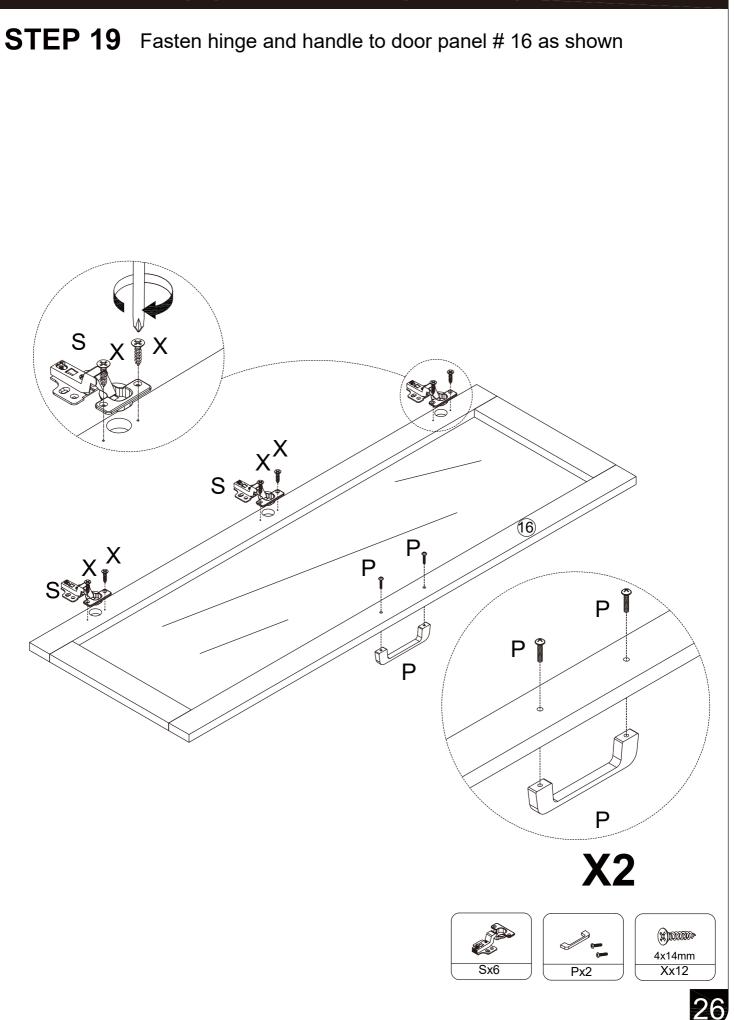


STEP 20 Fasten the door hinge to the cabinet with Screw(X). Adjust the hinge to even the doors without protruding from the cabinet

Turn to the page #37 to see "Guide to Hinge Adjustment"

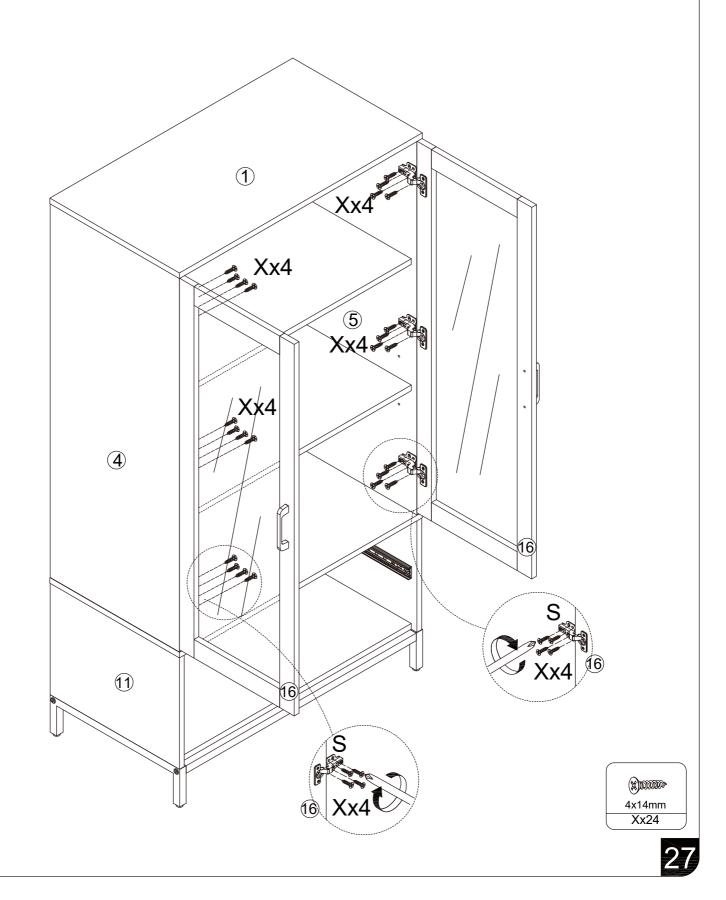


STEP 21 Confirm where the doors collide with panel #6 by opening and closing the doors, and attach the anti-collision rubber pads in places to reduce noise

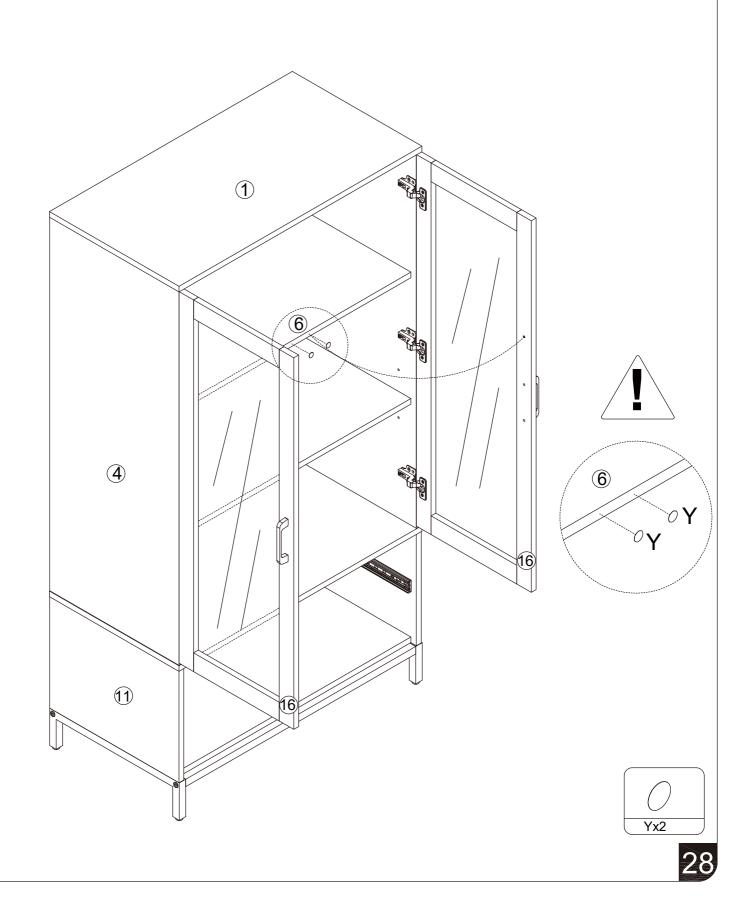



STEP 22 Time to

Time to assemble the drawer!

 
Connect the Drawer Slide(J-2) to Panel #21 #22 with Screw(H)

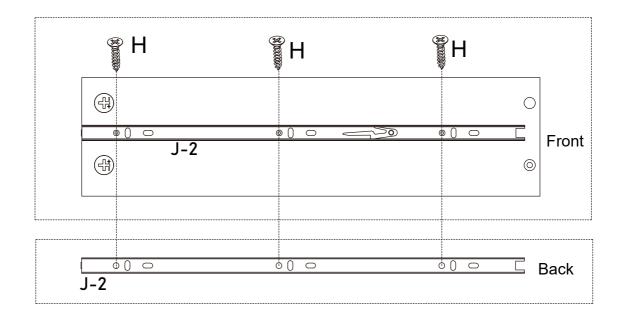

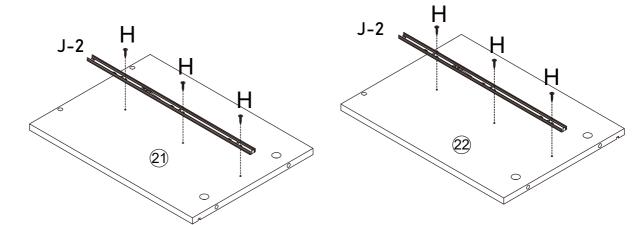







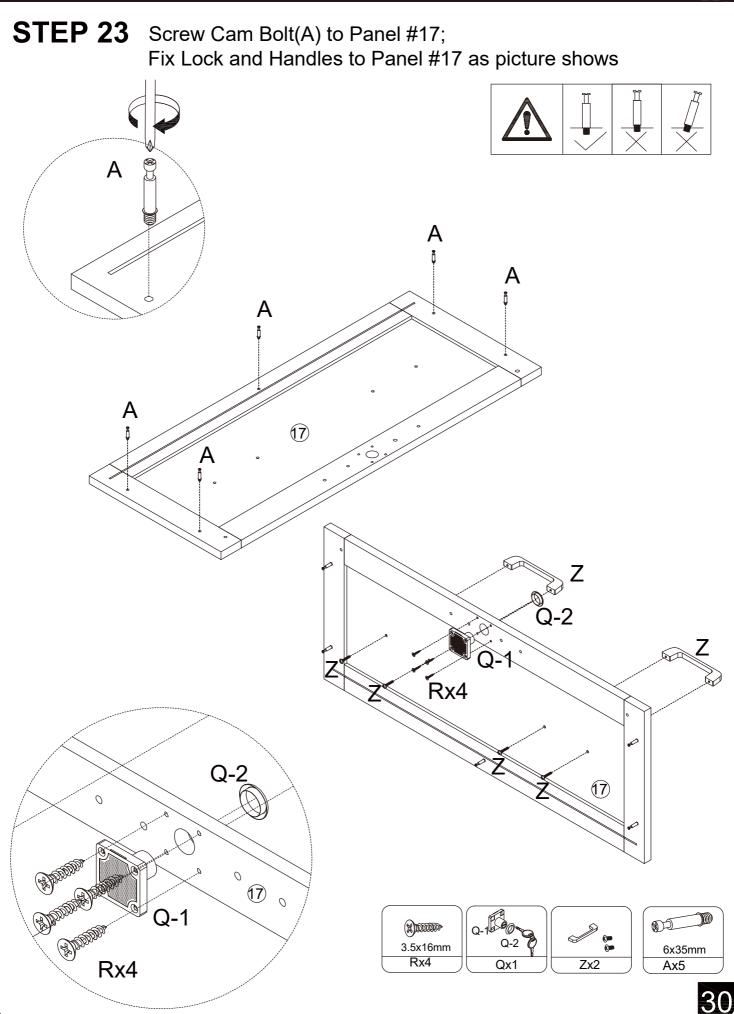


STEP 24 Connect the Drawer Back Panel #18 to the Drawer Support Panel #20 with Screw (D). Note to distinguish the front and back of the Drawer Support Panel

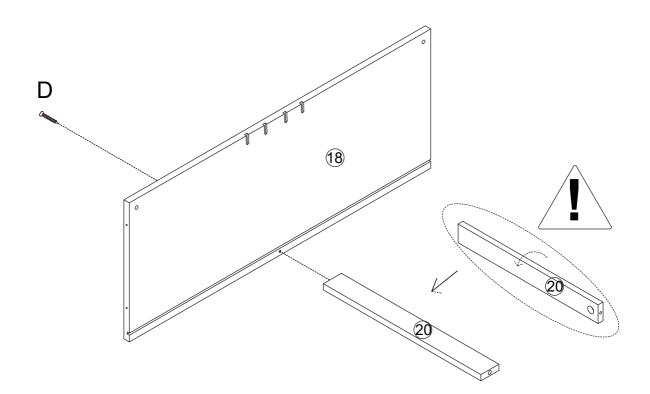

STEP 25 First pass the Long Hanging Rod(U) through the end of the Movable Hanging Rod(T) with loop first, then insert the Long Hanging Rod(U) into the drawer side panels while securing Panel #21 #22 to Panel #18 with Screw (D)

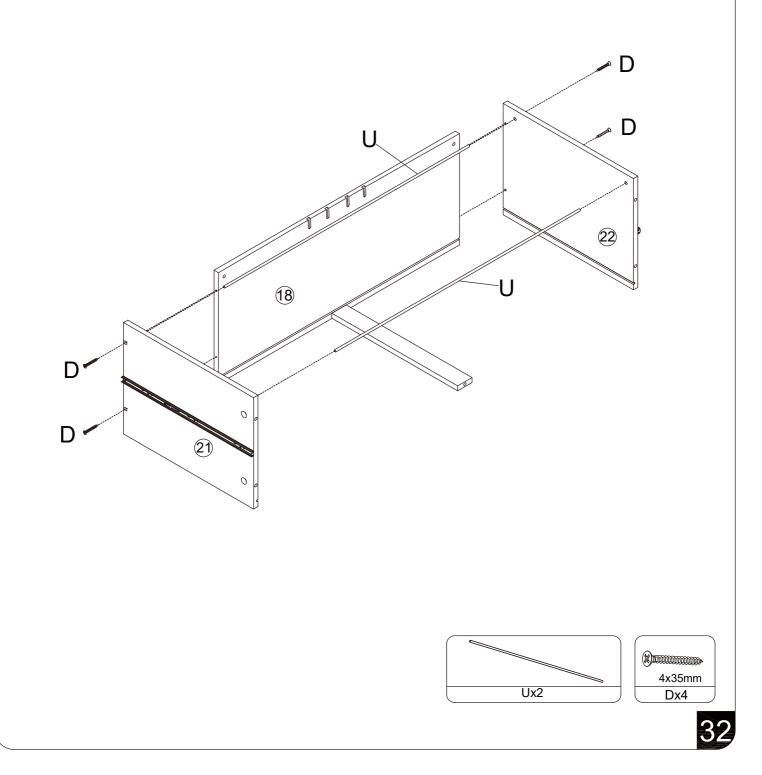

STEP 26 Insert Panel #19 along with the groove; Insert the Short Hanging Rod(V) into Panel #18 before next step

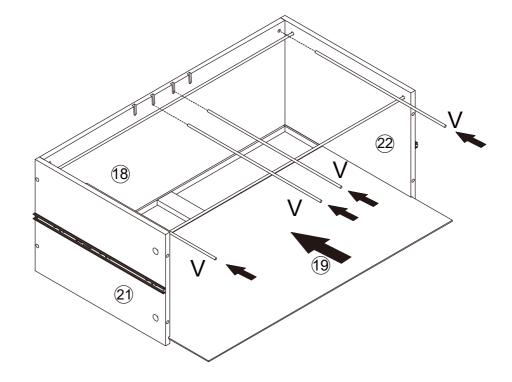





STEP 27 Attach Panel #17 to the drawer body with Cam Lock(B) ñ. Ø 17 øВ R Ø В Ð 22 Q В В (2Ò B 19 21) В 20 Ð 15x10mm Bx5



STEP 28 Pull Drawer Slide(J-1) out first, and the ball along with it to the front; Keep the drawer level and insert the drawer with the slides aligned.Note! Failure to level may result in damage to the slides

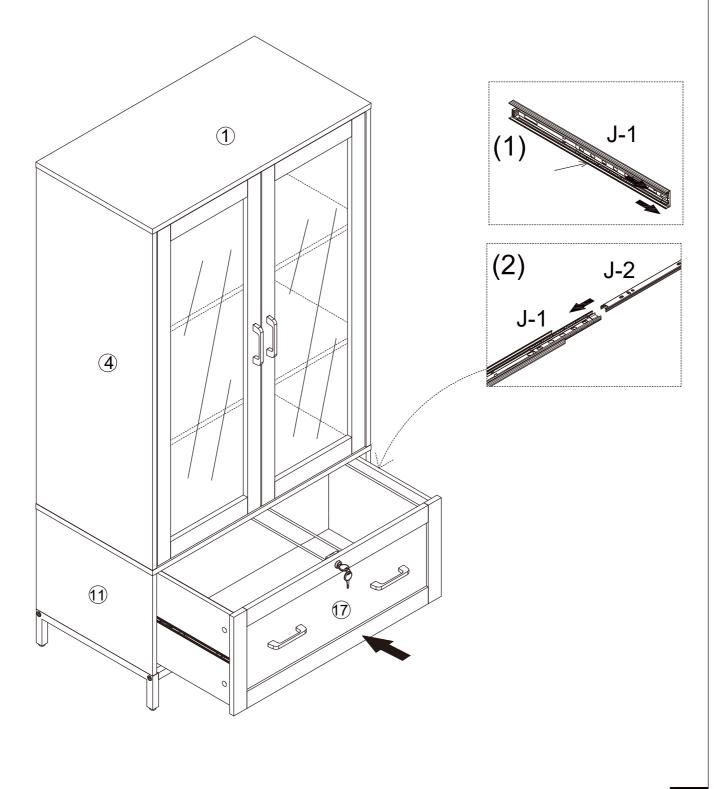




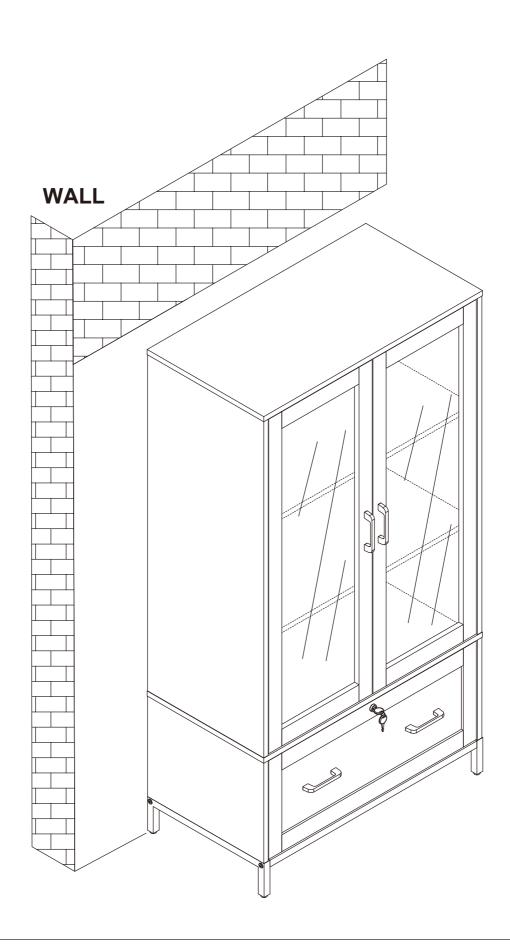


GUIDE TO HINGE ADJUSTMENT


It may be necessary to adjust the hinges so that the doors align. Use the instructions below as a guide.

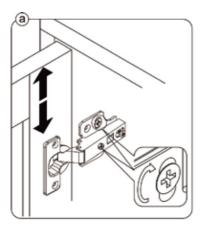


To adjust the door vertically loosen the screw as shown and move up and down as needed.

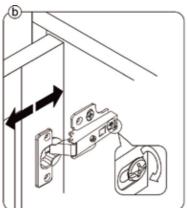

To adjust the gap from the door to the main frame turn the screw clockwise or anti-clockwise as needed.

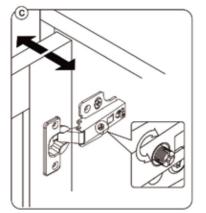


To adjust the door laterally adjust the screw as shown by turning clockwise or anti-clockwise.

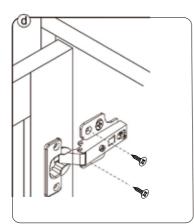


Please fix other screws.

OPTIONS OF FILE STORAGE




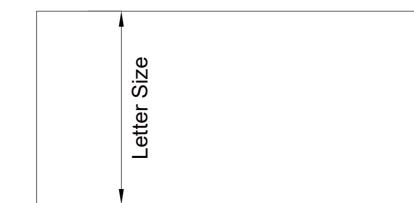


Option 2

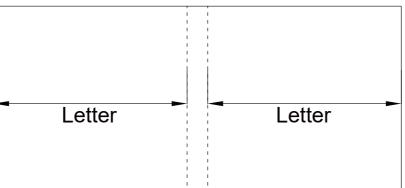

Option 3

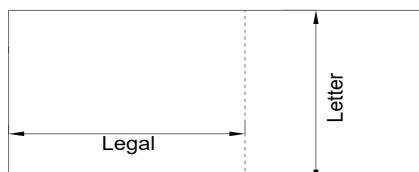

Option 4

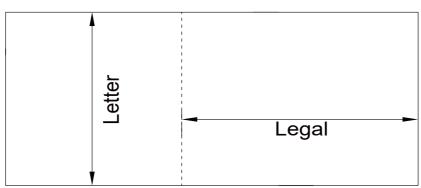

Place the Movable Hanging Rods as needed

FAQS

1. What should I do when I received a defected item or missing parts?

Please feel free to contact VINGLI customer service via the link where you purchased this item with your order ID, pictures & sticker number of the defective/missing parts to us. We are eager to help you to make it right.

2.What should I do if I have a problem with the drawer not closing flush?

It is usually caused by the assembly of the drawer slides. Here are the solutions as below:

1)Please check whether the slide rail is damaged, for example, the ball of the slide rail has fallen out. If so, please ask us for replacements of the drawer slides;

2)Refer to the assembly manual to check if the holes for the drawer slides are assembled correctly. If there is no problem with the assembly, but the drawer slides are stuck in the process of pushing in, please take out the entire drawer through the release button on the slides (Left Side Up and Right Side Down), and then push it back in again.

3.Why are the doors misaligned?

1)Please follow the "Guide to Hing Adjustable" to even the gap of the doors.

2)Adjust the levelers to even the cabinet.

4. What should I do when file cabinet wobbly?

1)Make sure each panel has been connect to each other properly, and all screws have been tighten after assemble

2)Find out that wobbly part, and if it is the screw cannot tight, you can try to add on a washer to help

3)If still not work, please feel free to contact our customer team with the wobbly part detail, and we will help you

Supplementary Instructions for Safe Use

English

		Children have died from furniture tipover. To reduce the risk of furniture tipover: •ALWAYS install tipover restraint provided. •NEVER put a TV on this product. •NEVER allow children to stand, climb or hang on drawers, doors, or shelves. •NEVER open more than one drawer at a time. •Place heaviest items in the lowest drawers. •Do not defeat or remove the drawer interlock system. This is a permanent label. Do not remove!		
French				
		 Des enfants sont morts du basculement des meubles. Pour réduire le risque de basculement des meubles: TOUJOURS installer la retenue de basculement fournie. NE JAMAIS mettre de téléviseur sur ce produit. NE JAMAIS permettre aux enfants de se tenir debout, de grimper. ou de s'accrocher à des tiroirs, des portes ou des étagères. N'ouvrez JAMAIS plus d'un tiroir à la fois. Placez les objets les plus lourds dans les tiroirs les plus bas. Ne désactivez pas et ne retirez pas le système de verrouillage du tiroir. Ceci est une étiquette permanente. Ne pas enlever! 		

German

	 Kinder sind an einem Möbelkipp gestorben. So verringern Sie das Risiko eines Umkippens von Möbeln: Installieren Sie IMMER die mitgelieferte Kipprückhaltevorrichtung. Stellen Sie NIEMALS einen Fernseher an dieses Produkt. Lassen Sie Kinder NIEMALS an Schubladen, Türen oder Regalen stehen klettern oder hängen. Öffnen Sie NIEMALS mehr als eine Schublade gleichzeitig. Legen Sie schwerste Gegenstände in die untersten Schubladen. Besiegen oder entfermen Sie das Schubladenverriegelungssystem nicht. Dies ist ein dauerhaftes Etikett. Nicht entfernen!