
CUINGLI BOAT FENDER USER MANUAL

Any questions, please contact us via vinglistore@outlook.com.

(Please add your order number into the subject of the email.)

■ What You Get

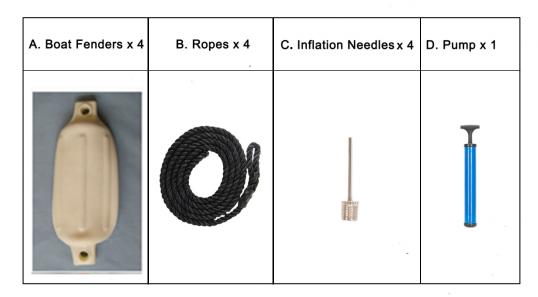

■ Applicable Pumps

Please use the matched inflation needle, otherwise unsuitable inflation needle will damage the air valve.

| A. Hand Pump | B. Bicycle Pump | C. Air Compressor |
|--------------|-----------------|-------------------|
| | | ЗНР |

■ To Inflate the Fender

Insert the inflation needle into the center hole of the valve, then inflate the boat fender with the pump. The needle shall be inserted into the air valve vertically and completely. Tilting or incompletely inserting will damage the air valve. Note: Please do not force to insert the needle when it is hard to do it. Just try another angle.







■ To Deflate the Fender

Just insert the inflation needle, then it will deflate gradually and automatically.

■ NOTE:

Please do not inflate too much, since the air will expand in hot weather. It's suggested to reserve some space for it. Over-inflating will affect the service life.

