
Vary the kneading pressure according to your needs – if the kneading is too rough, then decrease the pressure.

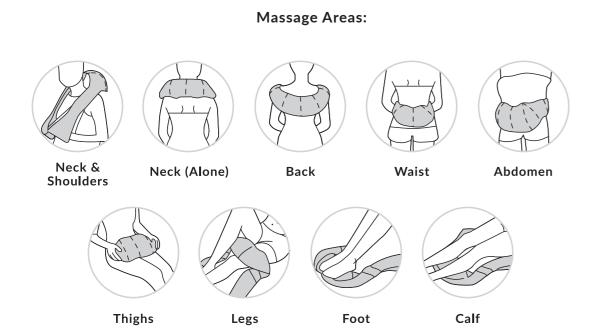

Charging Instructions:

- Plug in the power or car adaptor to the appropriate power source to begin charging the massager. The massager can be used immediately after plugging in.
- To operate wirelessly, allow the massager to fully charge (2-3 hours). After the battery has been fully charged, disconnect the massager from the cord and unplug the adaptor from the power source. The massager can now be operated wirelessly for 1.5-2 hours.

LIMITED LIFETIME WARRANTY

Your Medic Therapeutics Shiatsu Back & Neck Massager with Heat is backed by a limited lifetime manufacturer's warranty. Medic Therapeutics will repair or replace your device at any time should it fail due to a defect in material or workmanship, subject to the certain limitations.

This limited warranty does not cover any damage that results from unauthorized or improper use, service, or repair. Further, it does not cover damage caused by accident, impact, negligence, or normal wear and tear. Should you discover your Medic Therapeutics Shiatsu Back & Neck Massager with Heat is not functioning properly, please send your device to our repair center for evaluation. If your product cannot be repaired or serviced, we will reserve the right to change it for a similar or newer model.

Please note that a flat rate of \$35.00 will be charged to cover a service evaluation fee and return shipping of your device. All warranty claims must be accompanied by a copy of your proof of purchase from an authorized retailer. Please send your device, proof of purchase, and a check or money order in the amount of \$35.00 made out to Medic Therapeutics to:

Address: Medic Therapeutics Service Center 3069 Taft Street Hollywood, FL 33021

Contact: warranty@medictherapeutics.com



SHIATSU BACK & NECK MASSAGER WITH HEAT



MANUAL


IMPORTANT SAFETY INSTRUCTIONS

The following basic safety guidance must always be followed when using electrical appliances to reduce the risk of fire, electric shock and/or injury to any person:

WARNING

- 1. Read all instructions fully & Keep all instructions for future reference.
- 2. Not suitable for children.
- 3. Do not use while driving.
- 4. Do not use if you are pregnant.
- 5. Do not use if you have any of the following health conditions: Heat sensitivity, Circulation disorder, varicose vein, bruises, broken skin, skin irritation, muscle or tissue inflammation, vein inflammation, injury, or any open wounds.
- 6. If you experience any pain or discomfort during the massage please stop immediately and consult your doctor.
- 7. Do not use if you have any of the following: Pacemaker, artificial joints, electronic implants.
- 8. Do not use this product if you have applied any oils or lotions to your skin.
- 9. Turn the power off and disconnect the cord from the power supply after use.
- 10. Take precautions to make sure you do not fall asleep during use.
- 11. Do not carry this product by the power cord.
- 12. Never clean this product unless it is unplugged. Use a cloth dampened with a very small amount of water to clean the product. The product must be dried immediately after. Do not plug this product back into the power outlet for use until it has dried completely.
- 13. Do not operate under a blanket or pillow. Excessive heating can occur or cause a fire, electric shock, or injury to a person.
- 14. Never use this product near water or in an area with high levels of humidity. Never use this product unless you are completely dry.
- 15. Do not immerse or expose this product to any liquids.
- 16. This appliance is suitable for personal household use only. Commercial or professional use will void the warranty. The supplier cannot be held responsible for injury or damage if the appliance has been used for anything other than its intended use.
- 17. This appliance must be kept out of the reach of children.
- 18. Do not leave this appliance unattended while plugged in. Always disconnect this appliance from the power supply when left unattended.
- 19. Do not allow any cords to rest in any position that might cause someone to trip or that may pose a pulling hazard. Keep the power cord away from heated surfaces.
- 20. Do not use the appliance if it has been dropped or damaged in any way. Check the power cord and plug regularly for any damage. If there is any damage to the power cord or plug, it must be repaired by the manufacturer or a qualified professional.
- 21. Use only original parts provided by the manufacturer if this appliance needs repairs or maintenance.
- 22. If the appliance malfunctions in any way, unplug and stop using it immediately.
- 23. Never try to open up or inspect the product in any way.
- 24. Never operate or handle the appliance with wet hands.

PARTS LIST

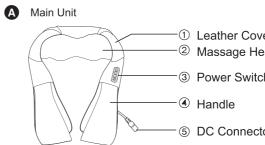

TECHNICAL DATA

Rated voltage:	DC12v
Rated Power:	24W
Rated Frequency:	50HZ

Product features or design might change with

FUNCTION GUIDE

Function	Detail
Ф	On/Off Quick and easy to turn on an
111	Speed Easily adjust the kneading spe
Ç	Direction Easily adjust the direction of
~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~	Heat Mode Easily toggle heat function or

#### TROUBLESHOOTING

Unable to start the massager:	Make sure t Confirm tha
Suddenly stops working during use:	The massag Check to se bad power are found. I supply and The massag problem pe your retaile

er E ad h	Power Adaptor Plug		
or C	Vehicular Cigar-Lighter		
		-	
		7	
		-	
		-	
out notice.		_	
		-	
nd off. Automatic timer turns off after 15 minutes.			
peed according to your needs.			
f the kneading movement to target key areas of tension.			
on and off.			

re the power plug is in the socket. Confirm that the switch is on. that the power button has been pressed.

ssager will automatically finish operating after 15 minutes. to see if the power plug has been pulled out. Check for any wer source connections and cease use immediately if any ad. If none of the above work, then turn off the main power and wait for one hour, allowing the product to cool down. ssager has an automatic overheating protection feature. If the a persists, stop using the product immediately and contact ailer for advice.