

# CORDLESS DEEP TISSUE PERCUSSION MASSAGER



# User Manual

Prior to first use, be sure to read all user, safety and care instructions found in this manual. Please keep for reference.

# **FEATURES**

The Cordless Deep Tissue Percussion Massager provides vibrating speeds and heat function to meet different massage needs and penetrates deep into your muscle layers to relieve aching and stiff muscles, helping you feel relaxed, recharged and feeling better.



# **TECHNICAL DATA**

Model: SL-482

Voltage: Input DC 9.0V

Nominal Power: Maximum 12 Watt Battery Maximum Runtime: 80 minutes

# **INSTRUCTIONS FOR USE**

- Turn off the massager before interesting a new interchangeable massage heads.
- Your massager comes equipped with 4 attachments (Figure 1).
   Attach the different heads by twisting clockwise (Figure 2), detach
  the installed massage head by twisting anti-clockwise and pulling
  out (Figure 3). Always turn off the device while replacing the heads.



Figure 2.



Figure 3.

- 3. Turn on the massager by operating the control buttons (instructions as below)
- 4. Apply the massager head lightly to the area you wish to treat. Move the unit slowly, holding it over the targeted area. Treat the area for a short period of time and move to another area. NEVER treat the same area for longer than 3 minutes.
- Turn the unit off by pressing the power button. For your safety the device will automatically turn off after 15 minutes of continuous use.



massager while charging.

# **BATTERY CHARGING**

- Connect the charging adapter cable to the corresponding port on the massager
- 2. Plug the charging adapter into an outlet.
- 3. Normally it takes 2.5-3 hours to fully charge the battery.
- 4. Indicator light on POWER Button:
  - When POWER button indicator turns green and blinks that means the battery is low, please charge in time.
  - While charging, the POWER button indicator light will turn 'RED' and blink.
  - When fully charged, the POWER button indicator will stay 'RED' and not blink.
  - If the battery is full, the massager can work continuously for approximately 80 minutes.
- 5. It is safe to use the massager while charging.

#### NOTF:

Attention! Please only use provided charging adapter.

## SAFETY INSTRUCTIONS



READ ALL INSTRUCTIONS BEFORE USE. SAVE THESE INSTRUCTIONS FOR FUTURE REFERENCE.

#### IMPORTANT SAFFGUARDS:

WHEN USING ELECTRICAL PRODUCTS, ESPECIALLY WHEN CHILDREN ARE PRESENT, BASIC SAFETY PRECAUTIONS SHOULD ALWAYS BE FOLLOWED. INCLUDING THE FOLLOWING:

- ALWAYS unplug the appliance from the electrical outlet immediately after using and before cleaning. To disconnect, turn all controls to the 'OFF' position, then remove plug from outlet.
- NEVER leave an appliance unattended when plugged in. Unplug from the mains outlet and turn off the massager when not in use and before putting on or taking off parts or attachments.
- DO NOT reach for an appliance that has fallen in water or other liquids. Switch off at the mains and unplug it immediately. Keep dry - DO NOT operate in wet or moist conditions.
- NEVER insert pins or other metallic fasteners into the appliance.
- Use this appliance for the intended use as described in this booklet.
   DO NOT use other attachments not provided in packaging.
- NEVER operate the appliance if it has a damaged cord or plug, if it is not working properly, if it has been dropped or damaged, or dropped into water. Return it to the product's provider Service Centre for examination and repair.
- Keep cord away from heated surfaces.
- Excessive use could lead to the product's excessive heating and shorter life. Should this occur, discontinue use and allow the unit to cool before operating.
- NEVER drop or insert any object into any opening.
- DO NOT operate where aerosol (spray) products are being used or where oxygen is being administered.

- DO NOT operate under a blanket or pillow. Excessive heating can occur and cause fire, electrocution or injury to persons.
- DO NOT carry this appliance by the cord or use cord as a handle.
- DO NOT attempt to repair the appliance. All servicing of this
  appliance must be performed by authorized service personnel only.
- Never block the air openings of the appliance or place it on a soft surface, such as a bed or couch. Keep air openings free of lint, hair etc.
- Do not place or store appliance where it can fall or be pulled into a bath or sink. Do not place in or drop into water or other liquid.
- Failure to follow the above may result in the risk of fire or injury.

# **SAFETY CAUTIONS**

# PLEASE READ THIS SECTION CAREFULLY BEFORE USING THE APPLIANCE.

If you have any concerns regarding your health, consult a doctor before using this appliance.

- Individuals with pacemakers and pregnant women should consult a doctor before using this appliance. Not recommended for use by diabetics
- DO NOT use on an infant, invalid or on a sleeping or unconscious person.
- DO NOT use on insensitive skin or on a person with poor blood circulation.
- This appliance should NEVER be used by any individual suffering from any physical ailment that would limit the user's capacity to operate the controls or who has sensory deficiencies in the lower half of their body.
- NEVER use directly on swollen or inflamed areas or skin eruptions.

- If you feel any discomfort whilst using this appliance, discontinue use and consult your doctor.
- This is a non-professional appliance, designed for personal use and intended to provide a soothing massage to worn muscles. DO NOT use as a substitute for medical attention.
- Do not use for longer than the recommended time.
- If the product feels excessively hot, switch off at mains immediately.
- You may soften massage force by placing a towel between yourself and the unit.
- Please ensure that all hair, clothing and jewelry are kept clear of the massage mechanism or any other moving parts of the product at all times.

# CARE AND MAINTENANCE

- For maintenance and repair of this product, please contact our service center.
- Please turn off the device immediately when not in use.
- Place this product in a dry, dust-free place.
- Do not store this product near high temperature or open flame.
- Do not expose it to direct sunlight, it will cause discoloration and damage.
- Avoid the use of benzene, thinners, or any other corrosive solvents, or liquid on this product and its accessories.
- Always unplug from electrical outlet and turn off the device before cleaning this product and its accessories,
- Wipe the product with a soft, dry cloth to clean the machine.

## LIMITED LIFETIME WARRANTY

Your Medic Therapeutics Product is backed by a limited lifetime manufacturer's warranty. Medic Therapeutics will repair or replace your device at any time should it fail due to a defect in material or workmanship, subject to the certain limitations.

This limited warranty does not cover any damage that results from unauthorized or improper use, service, or repair. Further, it does not cover damage caused by accident, impact, negligence, or normal wear and tear. Should you discover your Medic Therapeutics Product is not functioning properly, please send your device to our repair center for evaluation. If your product cannot be repaired or serviced, we will reserve the right to change it for a similar or newer model.

Please note that a flat rate of \$20.00 will be charged to cover a service evaluation fee and return shipping of your device. All warranty claims must be accompanied by a copy of your proof of purchase from an authorized retailer. Please send your device, proof of purchase, and a check or money order in the amount of \$20.00 made out to Medic Therapeutics to:

#### Address:

Medic Therapeutics Service Center 3069 Taft Street Hollywood, FL 33021

#### Contact:

warranty@medictherapeutics.com