

important information relating to the use and function of the towing kit as well as for any diagnostic or activation process, that might have to be repeated in the future (e.g. after the performance of a vehicle software update).

All warranty claims will be forfeited if the electric kit or components contained therein are used incorrectly or modified. If a towing socket adaptor has been used to connect to the trailer or bike rack, this must be removed from the trailer socket once the trailer or bike rack has been disconnected.

If the trailer or bike rack is not equipped with a rear fog lamp, depending on the towing vehicle type, the correct function of the towing kit cannot be guaranteed. In such cases, a rear fog lamp should be retro fitted.

This towing electric kit will not be covered under warranty if any technical or electrical modifications or software updates have been performed by the vehicle manufacturer after the initial commissioning of the kit. That applies especially to modifications or updates which may cause malfunctions in the trailer socket or any other part of the trailer electrical equipment!

Depending on the type of trailer module used in this electric kit, diagnostic interrogation with the vehicle's electrical system may be limited or will not function. The error memory inside the trailer module may not be able to be accessed by vehicle manufacturers diagnostic system.

Error logs relating to the trailer electrical equipment, that may be generated in the vehicle manufacturers diagnostic system as a result of a test procedure, may be due to the incorrect installation of the towing electric kit or the false activation of the trailer module.

We always recommend whenever possible, the following troubleshooting process:

An analysis of the vehicle's error memory and possibly clearing of all faults before the start of the installation!

Try disconnecting the trailer module from the towing harness and re-start the fault clearing process!
 If in doubt, limit the time for troubleshooting to a max of 0,5 hours and call our Technical Support Team!

Please follow our instructions carefully and always test the towing electrics using a true lighting board or a specifically designed bulb tester. If an LED tester is used, ensure it is equipped with correct load resistors or malfunctions will occur!

1/22


This instruction is subject to changes and we reserve the right to make changes to design, colour etc.

All of the data and illustrations may not be an exact representation but the text contained in this instruction must be observed!

ECS Electronics UK The Old Dyehouse Macclesfield Cheshire, SK11 7RN UK

SALE: +44 (0) 7980 847124 TECHNICAL: +44 (0) 7440 202052 WEB: www.ecs-electronicsuk.co.uk


Email-sales: n.lea@ecs-electronics.com Email-technical: ts-uk@ecs-electronics.com Revision: 0 / 03.07.2020 FI-050-13U

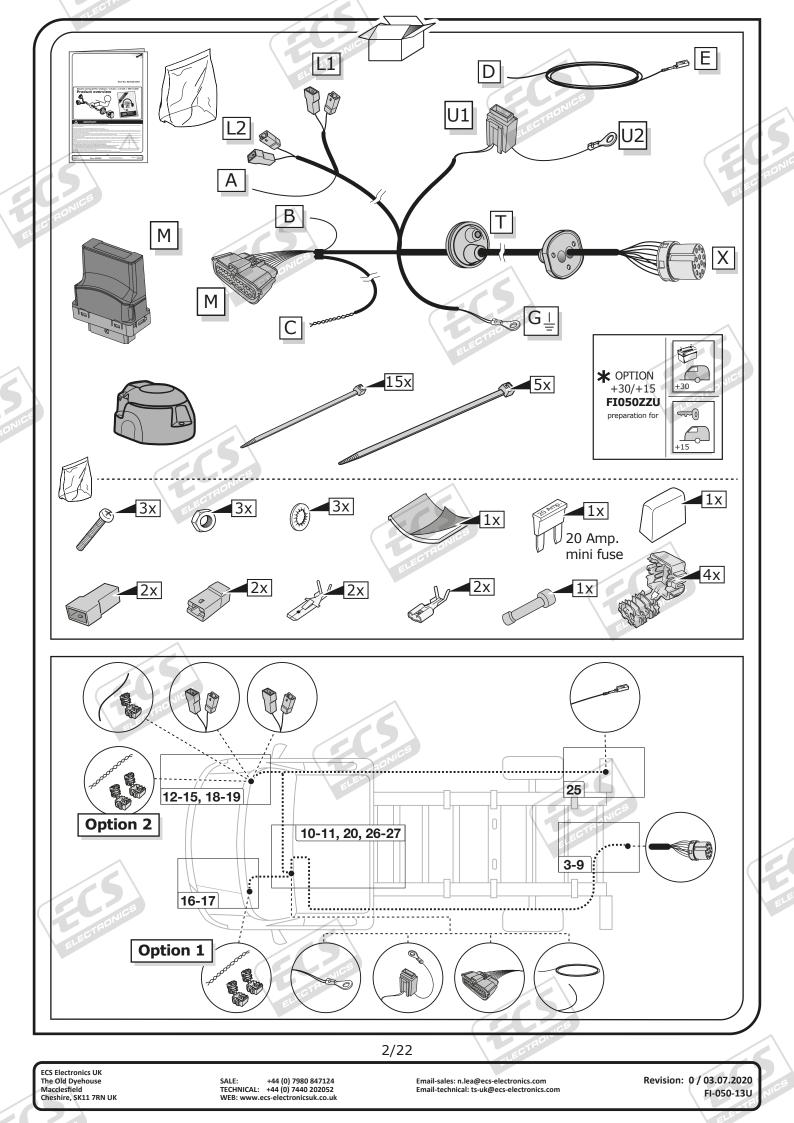



SYMBOL EXPLANATION -O Left (58-L) respectively Right (58-R) tail light 54 Stop light (54) / high mounted, third stop light (54) C L Turn signal indicator left R Turn signal indicator right O Rear fog light(s) O Reverse O Reversing light(s) O Permanent power supply / 13pin socket, chamber 9 I ¹⁵⁺ Charging wire for trailer battery / 13pin socket, chamber 10 D Charging wire for trailer battery / 13pin socket, chamber 10 D O Trailer / trailer recognition B+/30 Permanent current power supply I Ground or Earth (31) O Ground connection battery terminal luctor O Positive connection battery terminal luctor			Cigarette lighter / accessory socket Loudspeaker / buzzer Park Distance Control Switch / source of function Connect together Disconnect Look at / See further information Look carefully at selected area Present / Occupied / OK Not present / Not occupied / Not OK Acoustic indication
Provide the second strength Right (58-R) fail light 54 54 54 500 154 Turn signal indicator right 15+ 0 15+ <t< th=""><th></th><th></th><th>accessory socket Loudspeaker / buzzer Park Distance Control Switch / source of function Connect together Disconnect Look at / See further information Look carefully at selected area Present / Occupied / OK Not present / Not occupied / Not OK</th></t<>			accessory socket Loudspeaker / buzzer Park Distance Control Switch / source of function Connect together Disconnect Look at / See further information Look carefully at selected area Present / Occupied / OK Not present / Not occupied / Not OK
Product Right (58-R) tail light 54 54 54 510 1 1 <th></th> <th></th> <th>accessory socket Loudspeaker / buzzer Park Distance Control Switch / source of function Connect together Disconnect Look at / See further information Look carefully at selected area Present / Occupied / OK Not present / Not occupied / Not OK</th>			accessory socket Loudspeaker / buzzer Park Distance Control Switch / source of function Connect together Disconnect Look at / See further information Look carefully at selected area Present / Occupied / OK Not present / Not occupied / Not OK
34 high mounted, third stop light (54) Image: Second Se			Park Distance Control Switch / source of function Connect together Disconnect Look at / See further information Look carefully at selected area Present / Occupied / OK Not present / Not occupied / Not OK
R Turn signal indicator right Reverse Reverse 0 ⁺ Reversing light(s) Reverse 0 ⁻ Reversing light(s) Reversing light(s) Reversing light(s) Reversing light(s) Reverse 0 ⁻ Reversing light(s) Reversing light(s) Reverse 0 ⁻ Charging wire for trailer battery / 13pin socket, chamber 10 Reversion Reversion Reversion Reversion Reversion Reversion			Switch / source of function Connect together Disconnect Look at / See further information Look carefully at selected area Present / Occupied / OK Not present / Not occupied / Not OK
Image: Constraint of the system Rear fog light(s) Reverse 0:1 Reverse 0:1 Reverse 0:1 Reverse 0:1 Reverse 0:1 Reversing light(s) 13pin socket, chamber 9 15+ 0:1 Reverse 0:1 Reverse 0:1 Reverse 0:1 Reversing light(s) 13pin socket, chamber 9 15+ 0:1 Reversing wire for trailer battery / 13pin socket, chamber 10 Reversing wire for trailer recognition Reversing light(s) Reversi			Connect together Disconnect Look at / See further information Look carefully at selected area Present / Occupied / OK Not present / Not occupied / Not OK
Reverse 0 Reversing light(s) 30+ 0 Permanent power supply / 13pin socket, chamber 9 15+ 0 Charging wire for trailer battery / 13pin socket, chamber 10 Image: Construction of the system Trailer / trailer recognition B+/30 Permanent current power supply Image: Construction of the system Ground or Earth (31) Image: Construction of the system Ground connection battery terminal lution Image: Construction of the system Positive connection battery terminal lution			Disconnect Look at / See further information Look carefully at selected area Present / Occupied / OK Not present / Not occupied / Not OK
30+ Permanent power supply / 13pin socket, chamber 9 15+ Charging wire for trailer battery / 13pin socket, chamber 10 Image: Constraint of the system of			Look at / See further information Look carefully at selected area Present / Occupied / OK Not present / Not occupied / Not OK
13pin socket, chamber 9 15+ Charging wire for trailer battery / 13pin socket, chamber 10 Trailer / trailer recognition B+/30 Permanent current power supply = Ground or Earth (31) • • Positive connection battery terminal lute			Look carefully at selected area Present / Occupied / OK Not present / Not occupied / Not OK
13pin socket, chamber 10 Image: Constraint of the second			Present / Occupied / OK Not present / Not occupied / Not OK
B+/30 Permanent current power supply			Not present / Not occupied / Not OK
Image: second condition of the second condition		X ≫((((
Ground connection battery terminal lu Positive connection battery terminal lu)((((∧	Acoustic indication
Positive connection battery terminal lu		\wedge	
		· •	Attention / important advice of the
OOLS		0 Amp.	Fuse / fuse capacity 20 Ampère
OOLS			
	ELECTRON		
		¢ C	
ATTENTION! The vehicle's cooling capacity may have You must observe the manufacturer's in		d when retro	ofitting a trailer coupling!
	a to	o check if thi stored radio	be necessary s vehicle has o code before the battery!
			ystem the earth terminal must be
ATTENTION! In order to avoid mal-functions and damaged disconnected from the vehicle's battery b			
	control unit for the	ork! electrical sy	vstem can be damaged during work
disconnected from the vehicle's battery b Both the trailer module and the vehicle's c	control unit for the r is not disconnect	ork! electrical sy ted!	


ECS Electronics UK The Old Dyehouse Macclesfield Cheshire, SK11 7RN UK


-

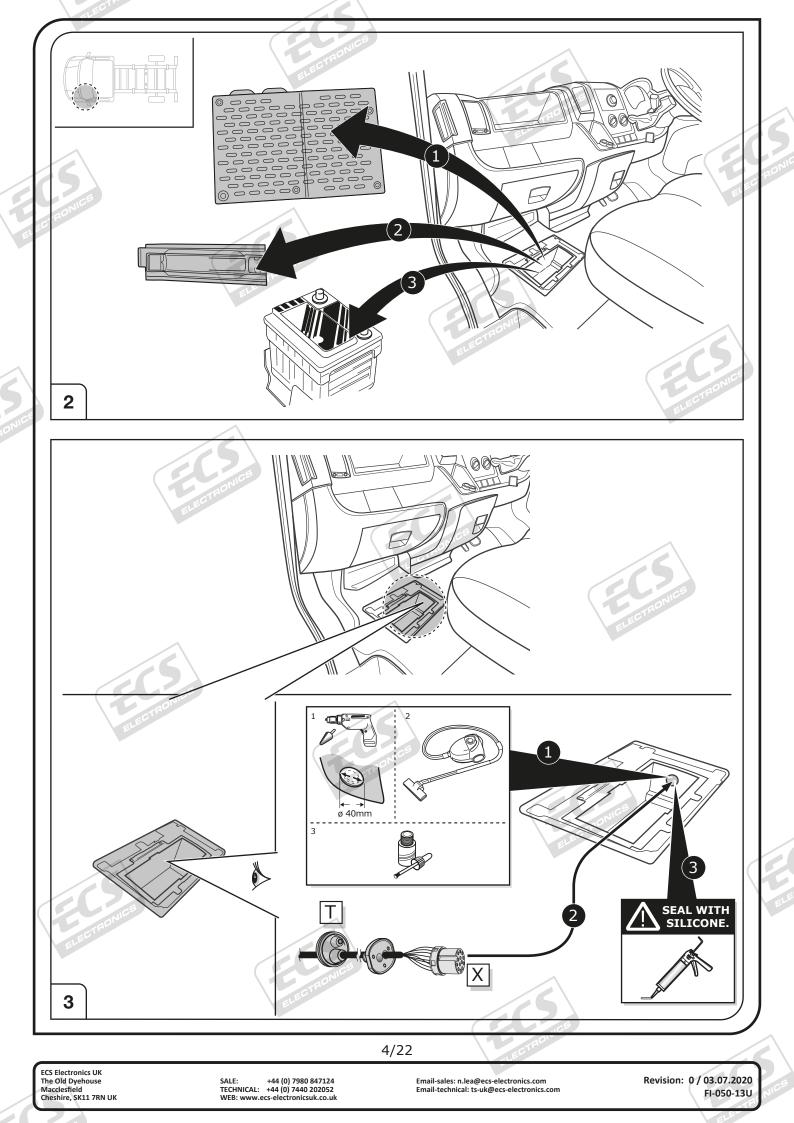
SALE: +44 (0) 7980 847124 TECHNICAL: +44 (0) 7440 202052 WEB: www.ecs-electronicsuk.co.uk Email-sales: n.lea@ecs-electronics.com Email-technical: ts-uk@ecs-electronics.com Revision: 0 / 03.07.2020 FI-050-13U 

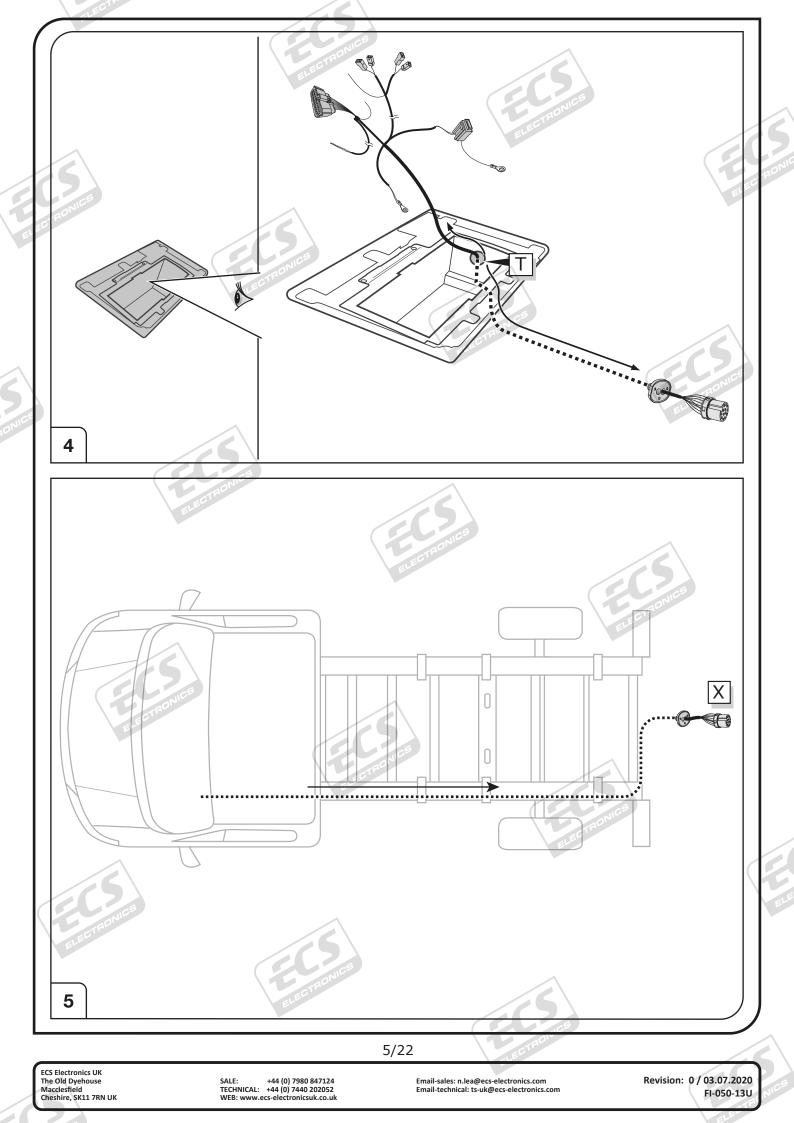


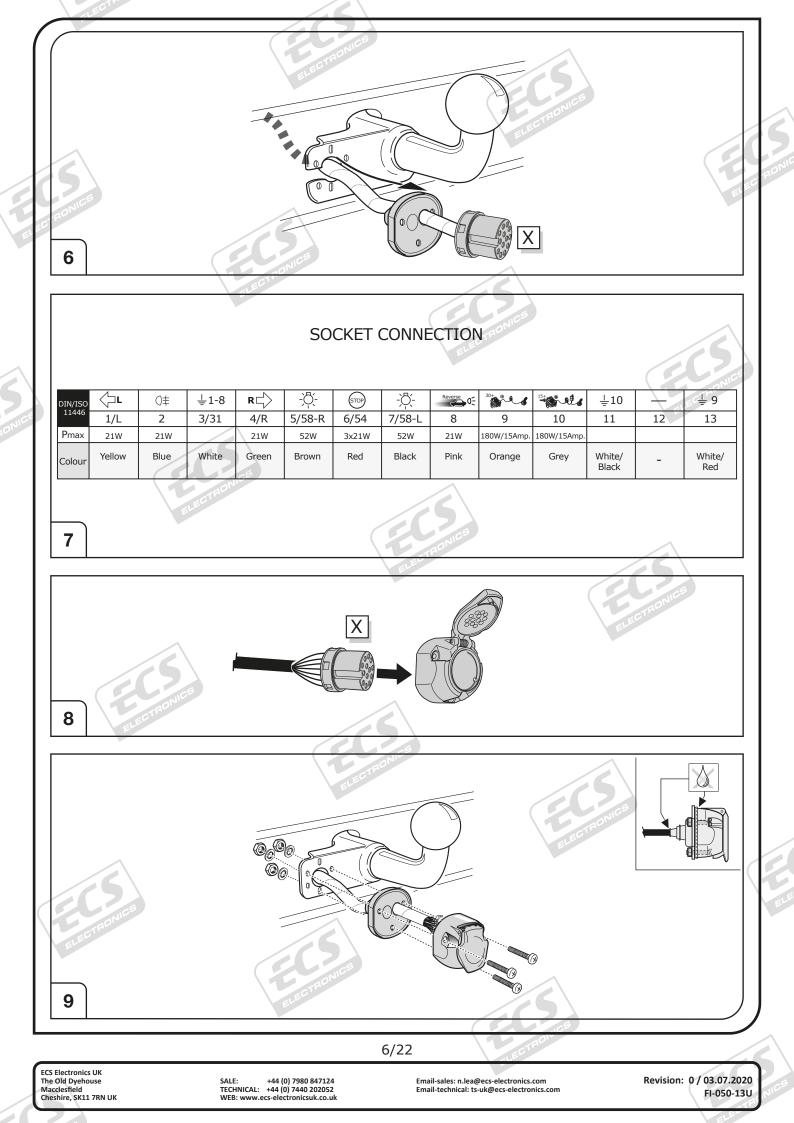


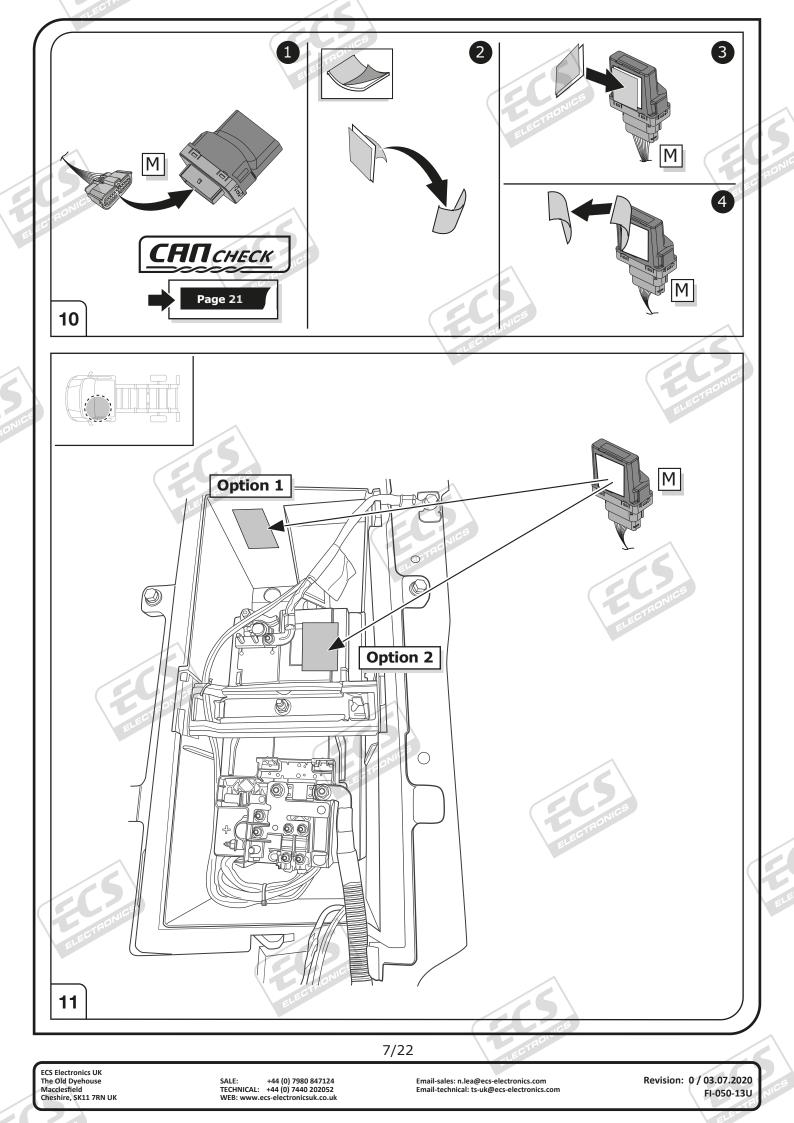


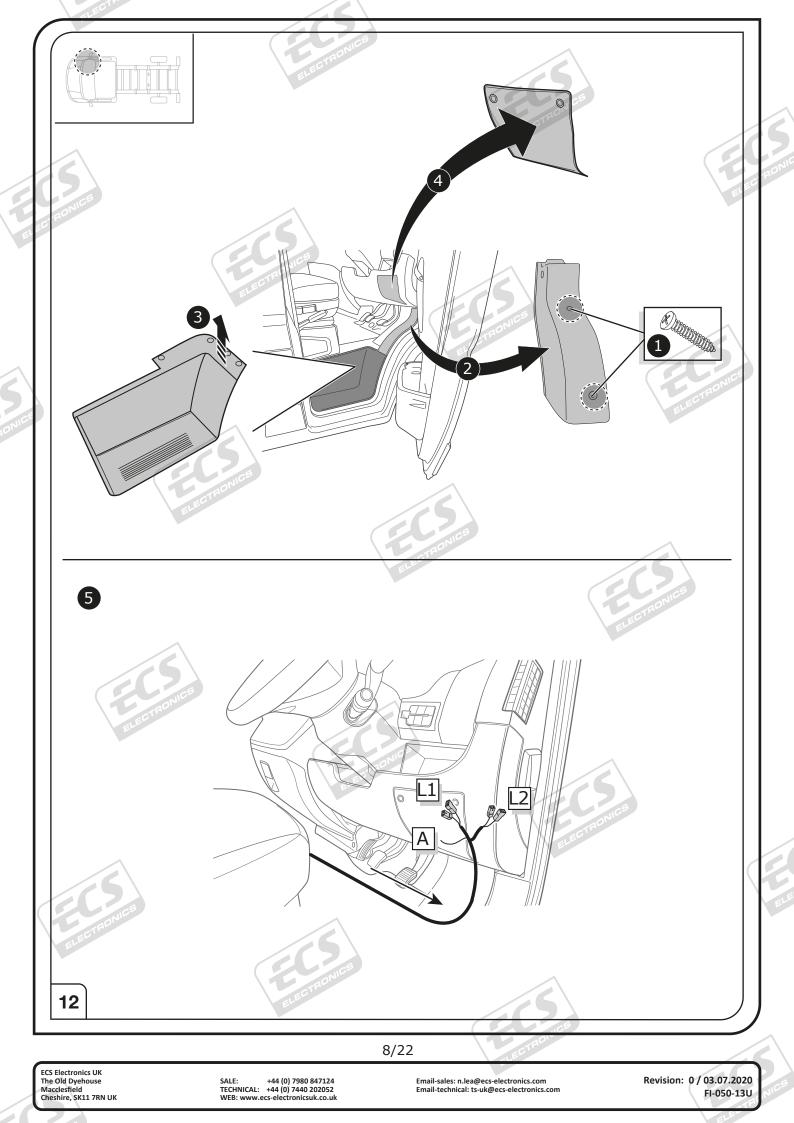


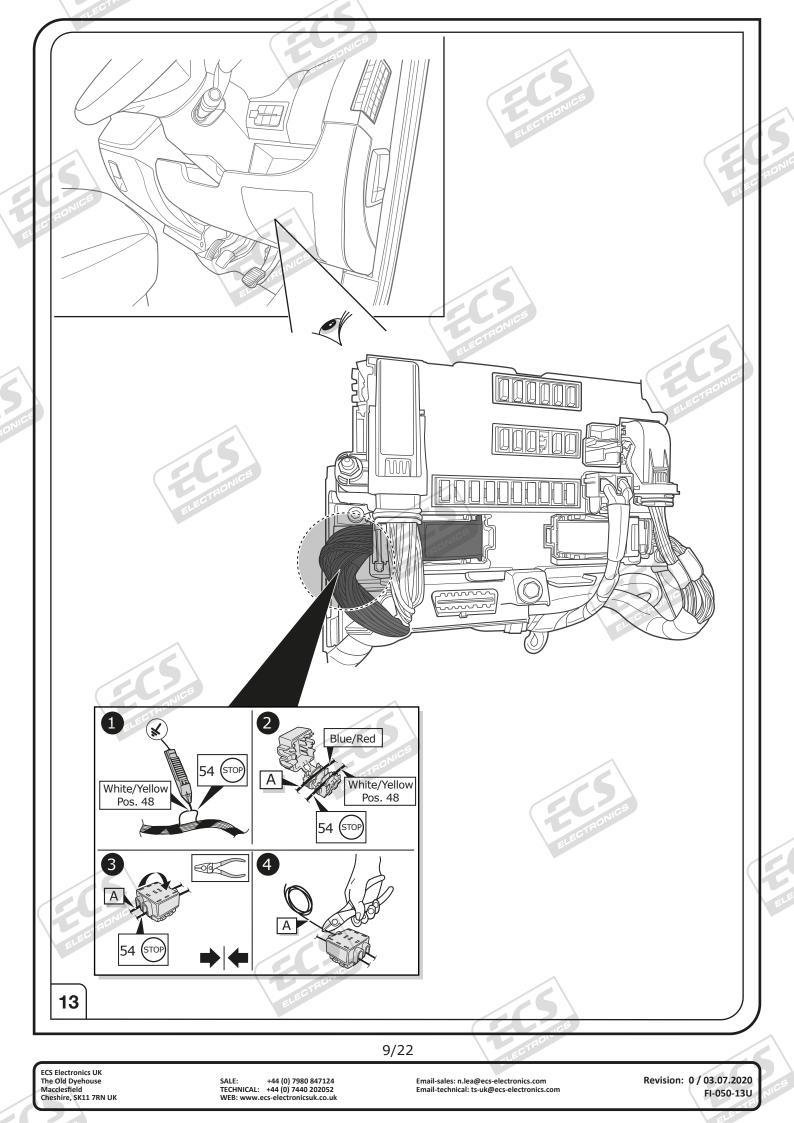


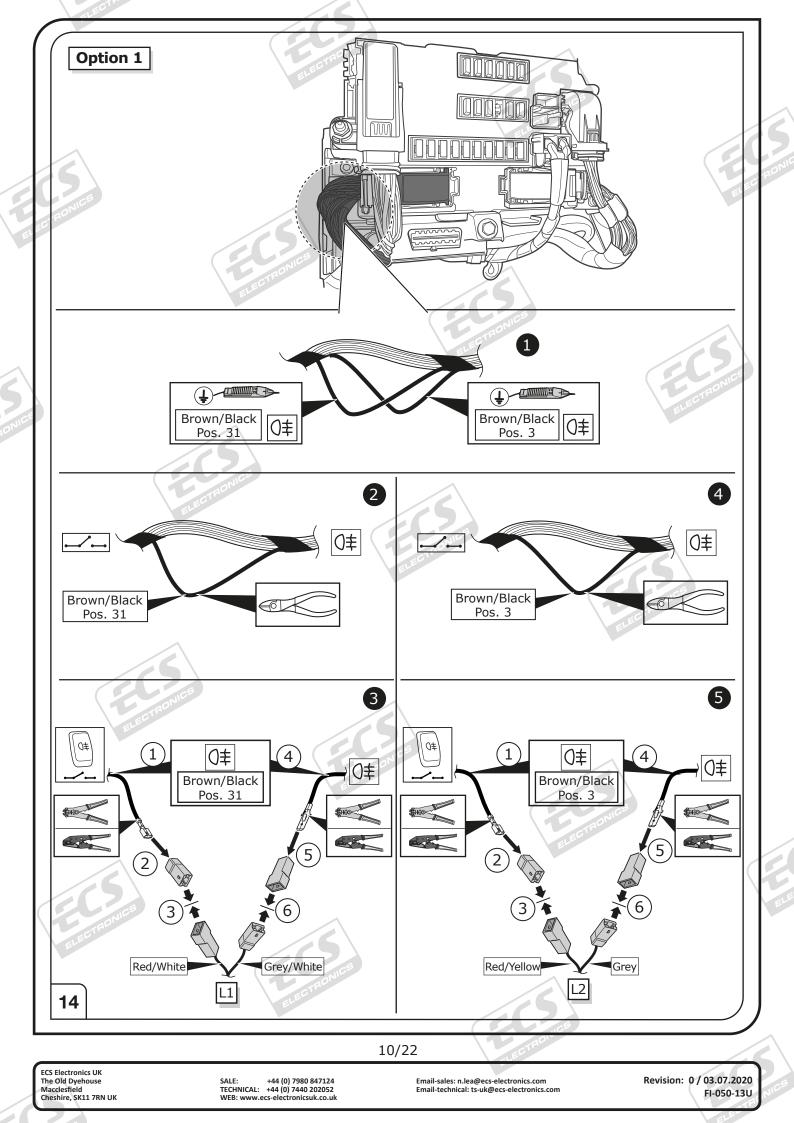


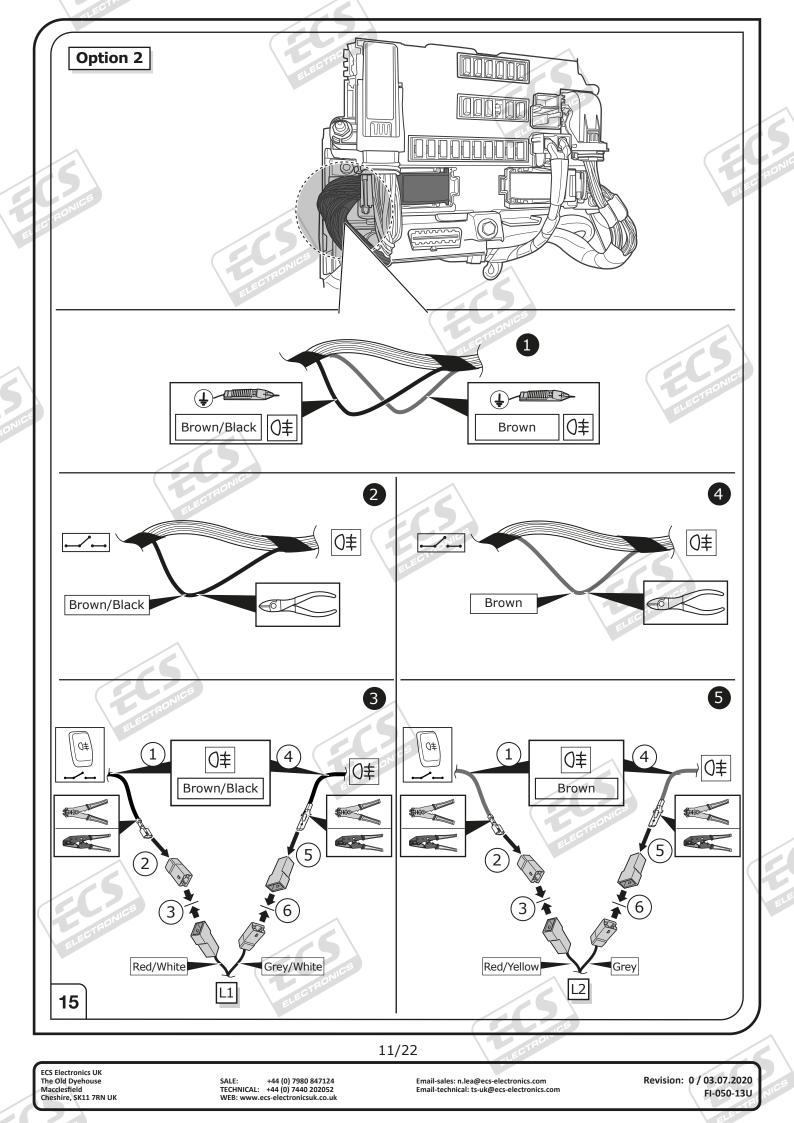


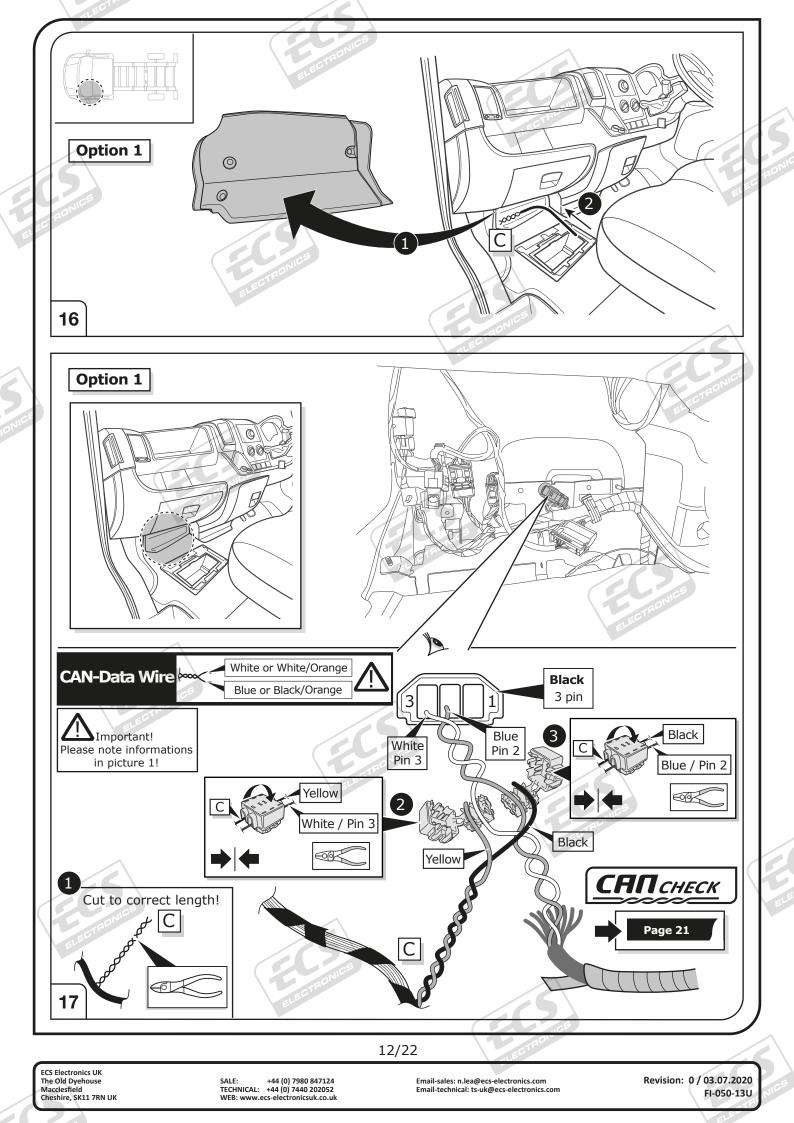


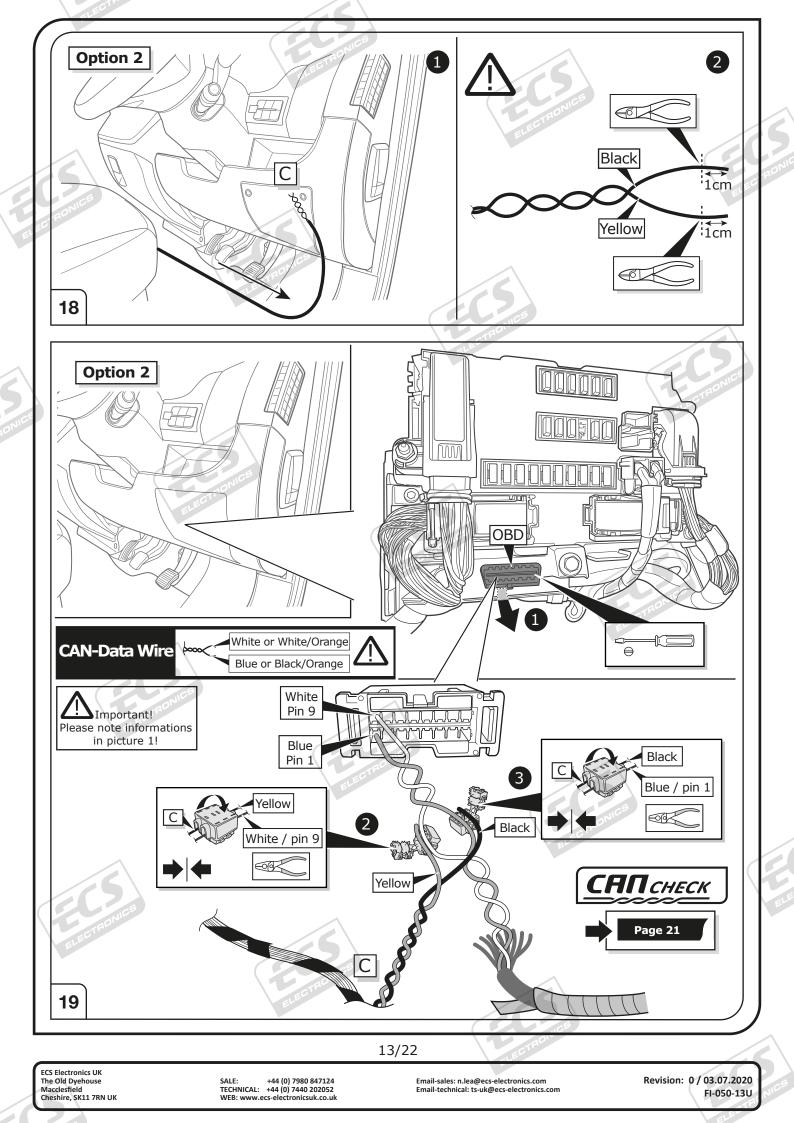


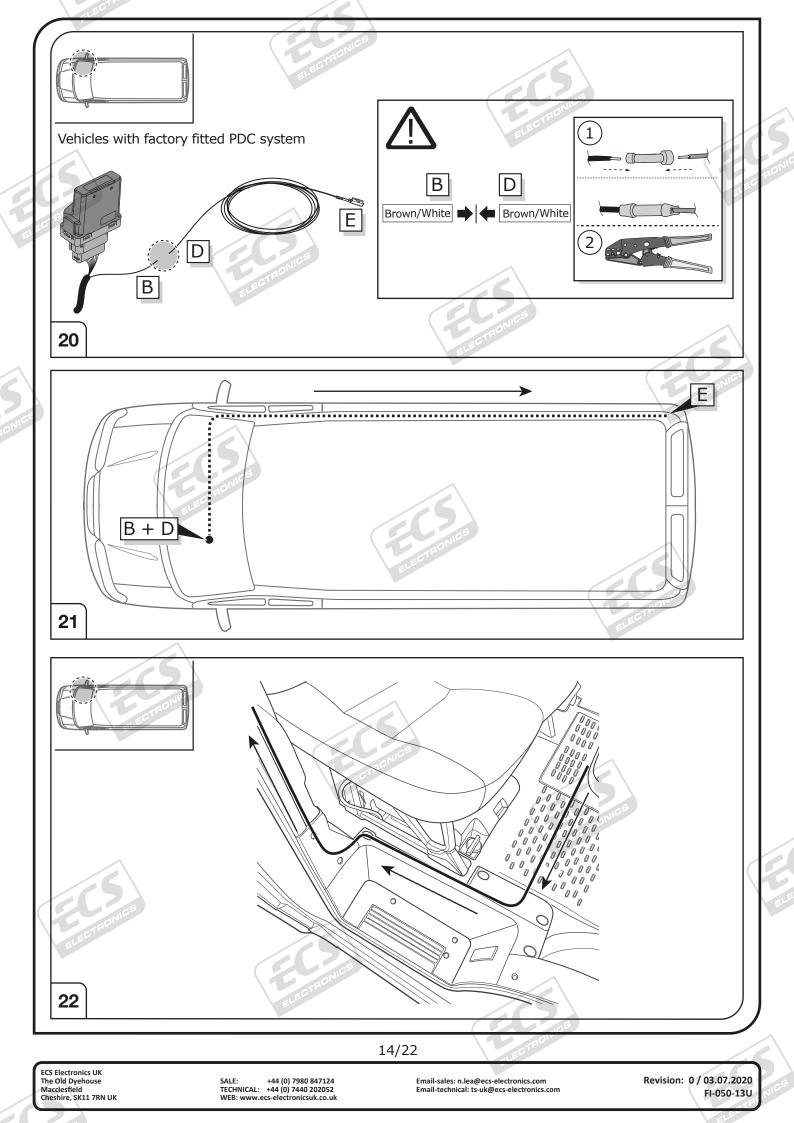

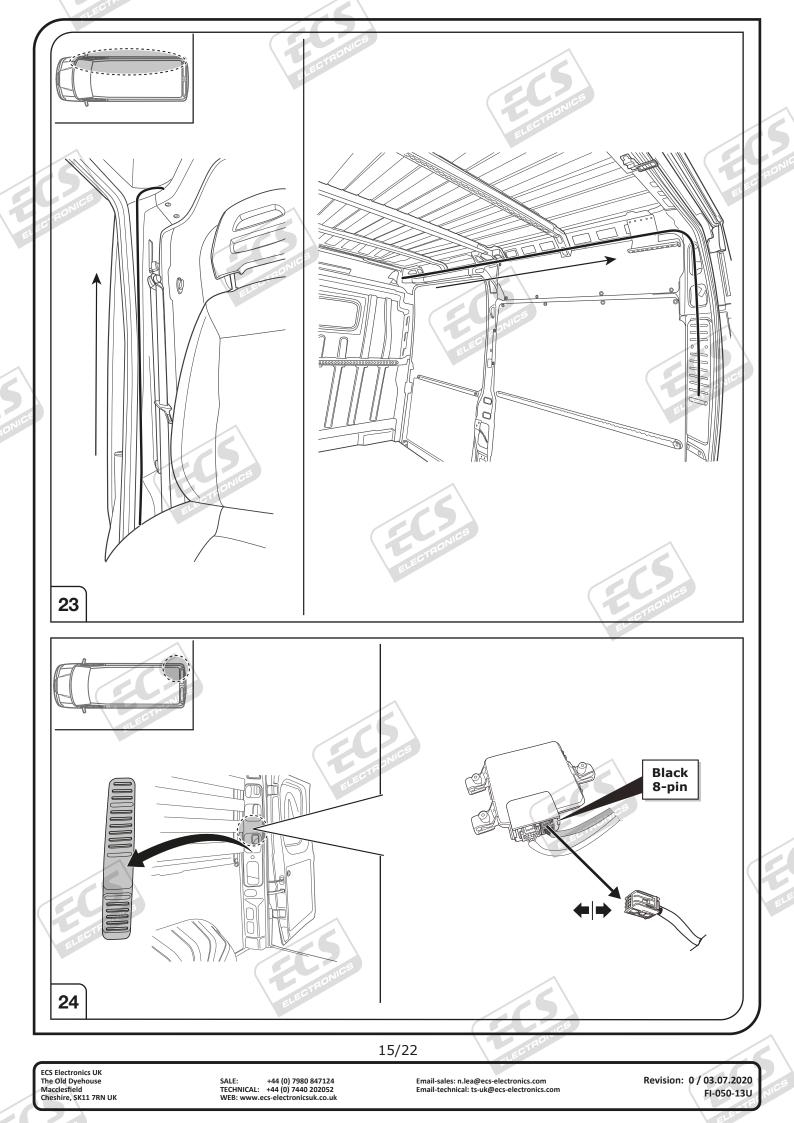

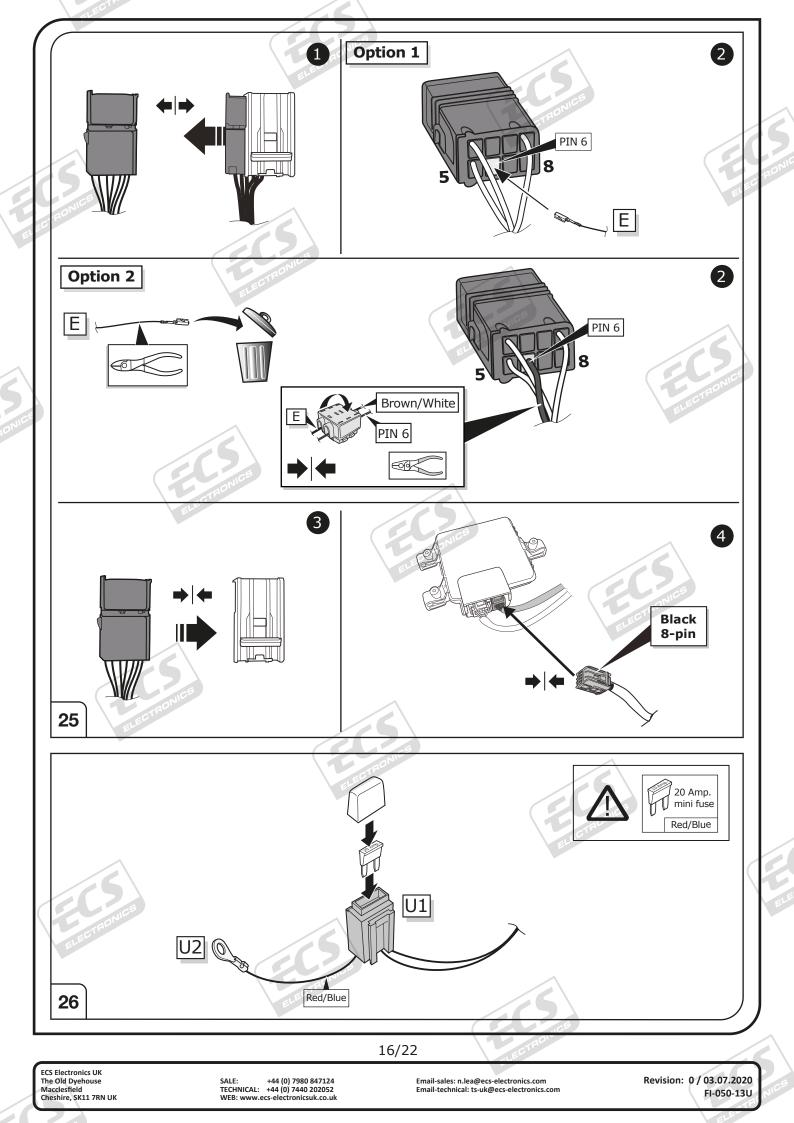


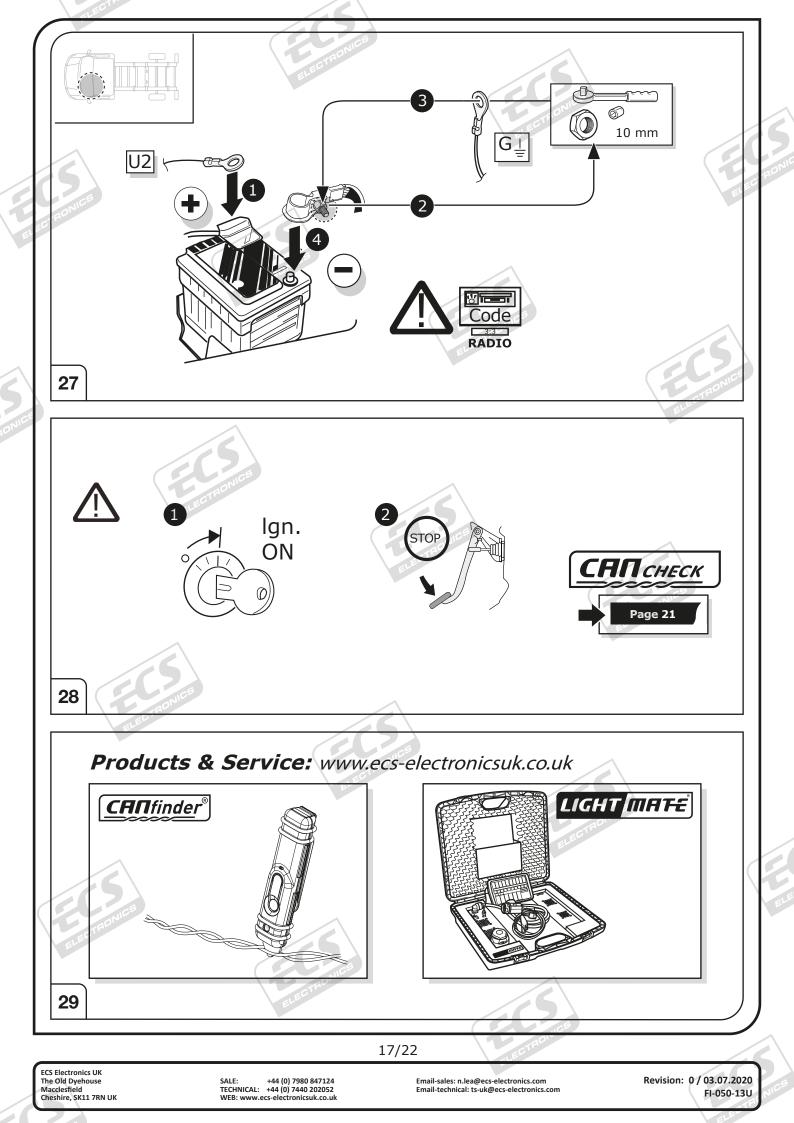


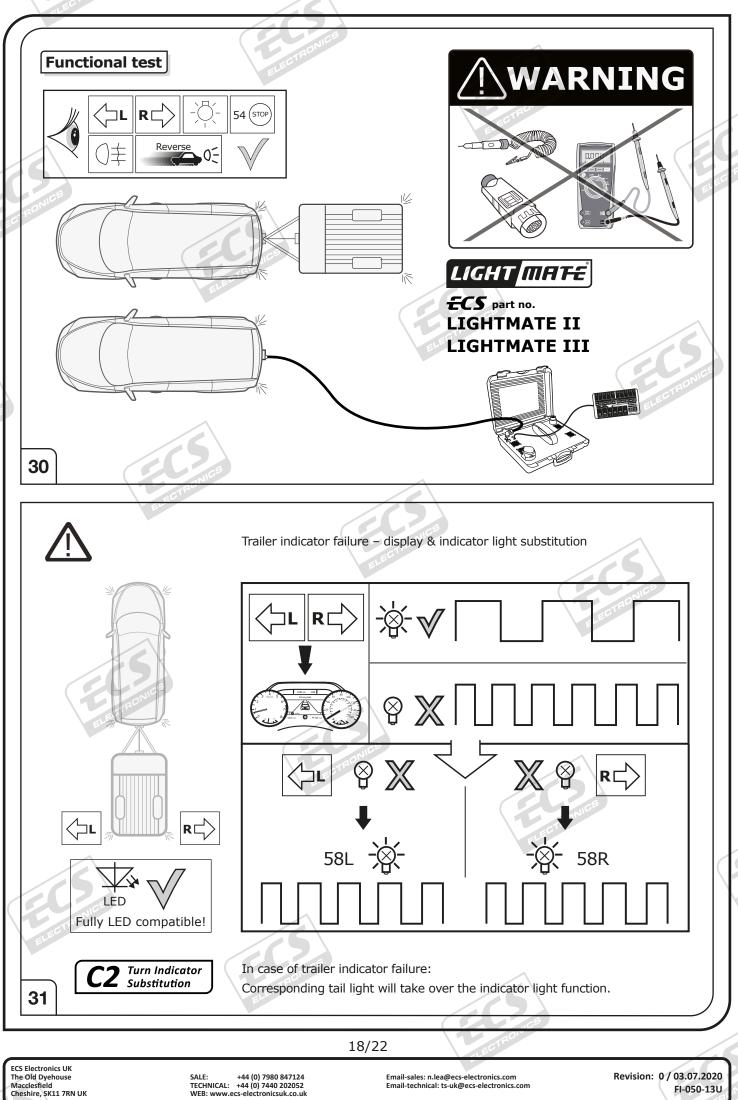


SALE: +44 (0) 7980 847124 TECHNICAL: +44 (0) 7440 202052 WEB: www.ecs-electronicsuk.co.uk

FI-050-13U

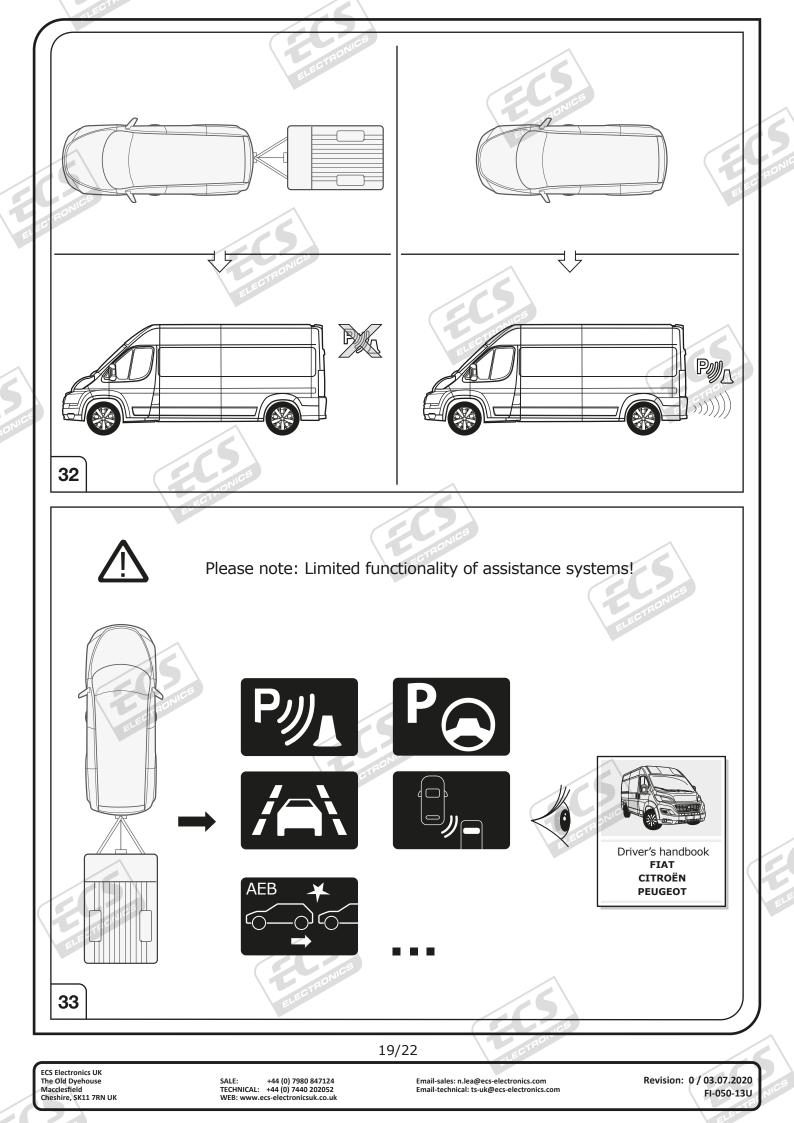

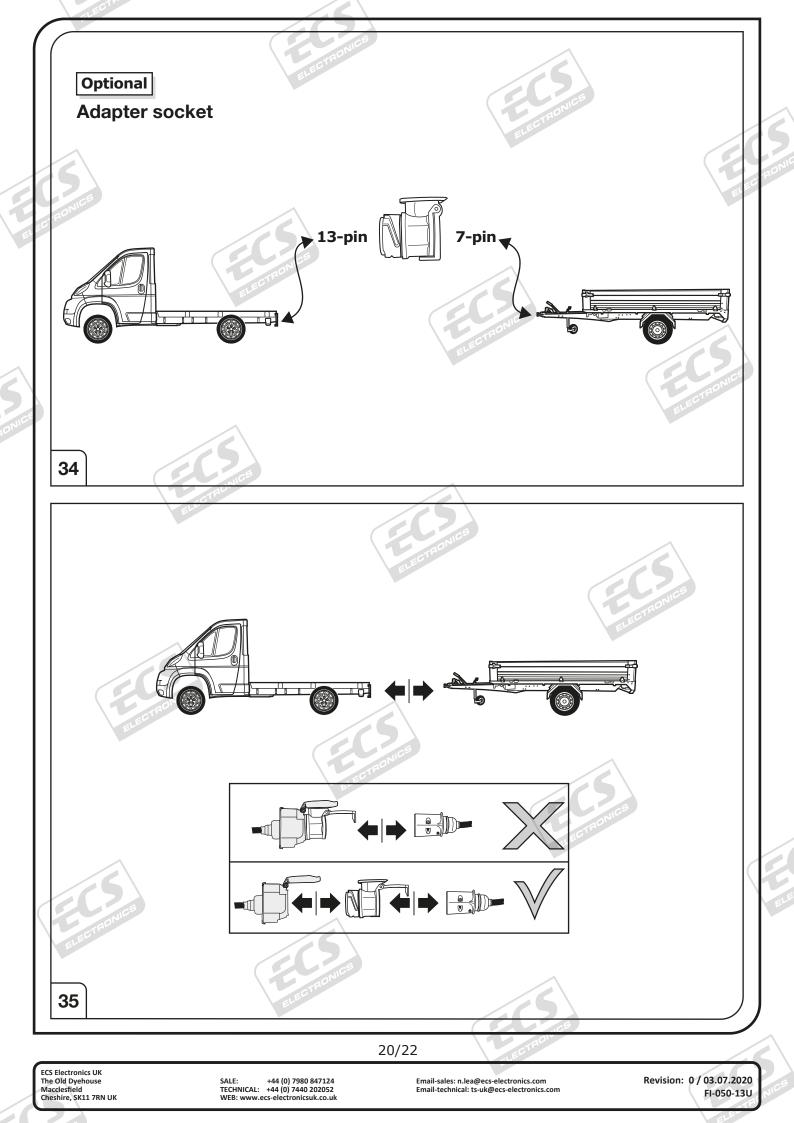

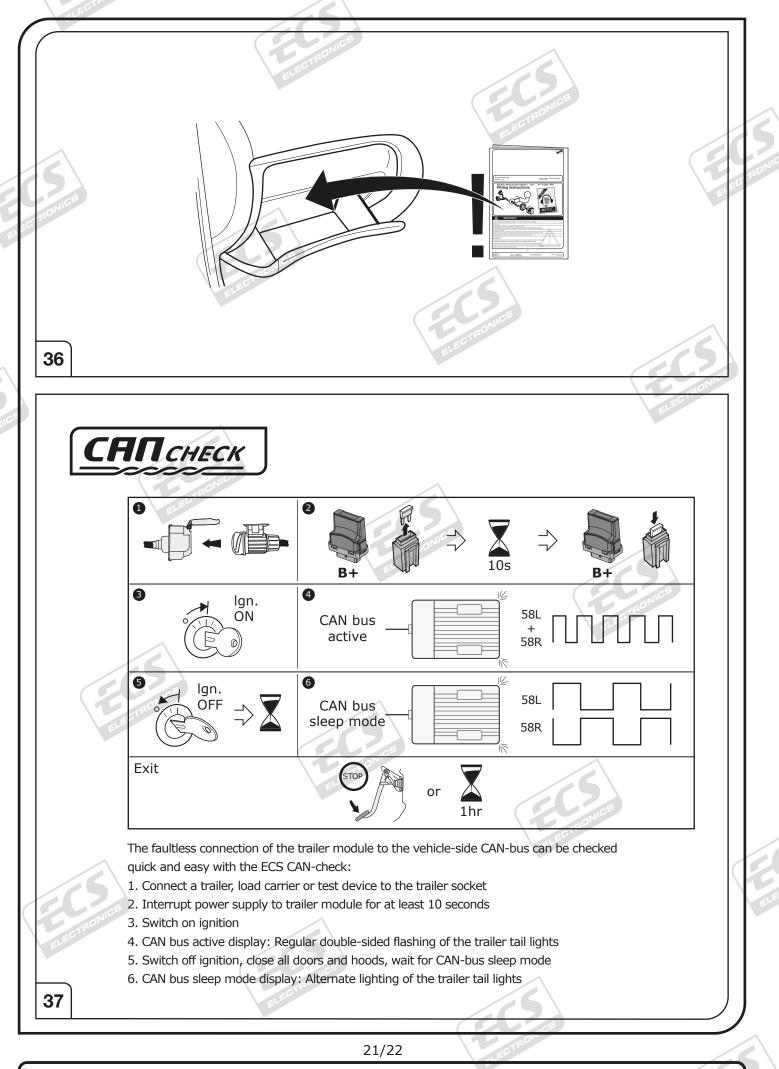

ECS Electronics UK The Old Dyehouse Macclesfield Cheshire, SK11 7RN UK

SALE: +44 (0) 7980 847124 TECHNICAL: +44 (0) 7440 202052 WEB: www.ecs-electronicsuk.co.uk Email-sales: n.lea@ecs-electronics.com Email-technical: ts-uk@ecs-electronics.com Revision: 0 / 03.07.2020 FI-050-13U

