

## FORD


**Kuga III 02/2020 >>**

**Kuga III PHEV 02/2020 >>**

**Part No: FR-108-13U**

**For vehicles with and without trailer preparation!**

# Electric wiring kit for towbars / 13-pin / 12 Volt / ISO 11446 Fitting instructions

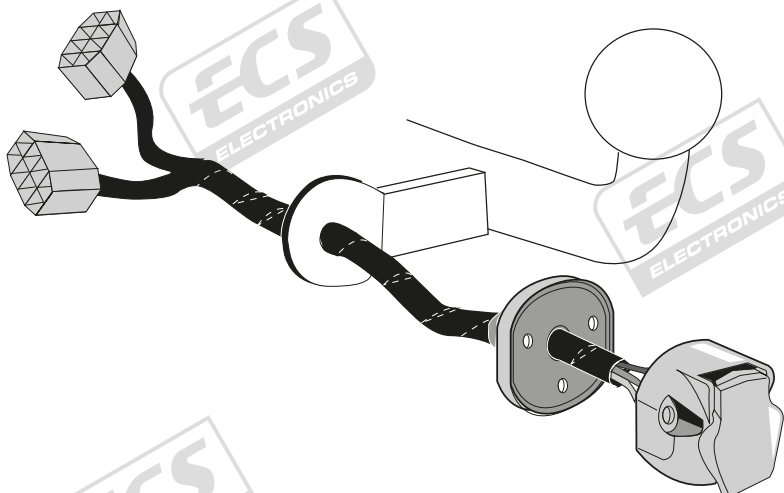

## IMPORTANT!

This electric kit has to be installed by a professional workshop or a suitable qualified person.

The installation instructions must have been read and fully understood before the start of any installation. Please contact your wiring kit provider or the hotline shown in the footer should you need assistance!

Make sure the vehicle is approved/homologated by the manufacturer to tow a trailer!

Also please check that there is a definite compatibility between this vehicle and the electric kit!

Following the installation of the electric kit, the fitting instructions should be kept together with the vehicle service document and vehicle handbook. The fitting instructions contain important information relating to the use and function of the towing kit as well as for any diagnostic or activation process, that might have to be repeated in the future (e.g. after the performance of a vehicle software update).

All warranty claims will be forfeited if the electric kit or components contained therein are used incorrectly or modified. If a towing socket adaptor has been used to connect to the trailer or bike rack, this must be removed from the trailer socket once the trailer or bike rack has been disconnected.

If the trailer or bike rack is not equipped with a rear fog lamp, depending on the towing vehicle type, the correct function of the towing kit cannot be guaranteed. In such cases, a rear fog lamp should be retro fitted.

This towing electric kit will not be covered under warranty if any technical or electrical modifications or software updates have been performed by the vehicle manufacturer after the initial commissioning of the kit. That applies especially to modifications or updates which may cause malfunctions in the trailer socket or any other part of the trailer electrical equipment!

Depending on the type of trailer module used in this electric kit, diagnostic interrogation with the vehicle's electrical system may be limited or will not function. The error memory inside the trailer module may not be able to be accessed by vehicle manufacturers diagnostic system.

Error logs relating to the trailer electrical equipment, that may be generated in the vehicle manufacturers diagnostic system as a result of a test procedure, may be due to the incorrect installation of the towing electric kit or the false activation of the trailer module.

**We always recommend whenever possible, the following troubleshooting process:**

→ **An analysis of the vehicle's error memory and possibly clearing of all faults before the start of the installation!**









→ **Try disconnecting the trailer module from the towing harness and re-start the fault clearing process!**

→ **If in doubt, limit the time for troubleshooting to a max of 0,5 hours and call our Technical Support Team!**


Please follow our instructions carefully and always test the towing electrics using a true lighting board or a specifically designed bulb tester. If an LED tester is used, ensure it is equipped with correct load resistors or malfunctions will occur!

This instruction is subject to changes and we reserve the right to make changes to design, colour etc.








All of the data and illustrations may not be an exact representation but the text contained in this instruction must be observed!

     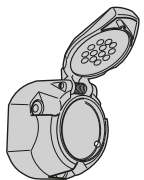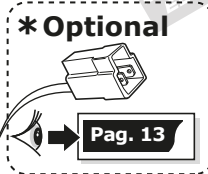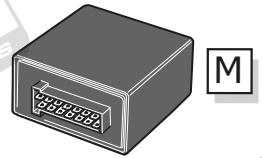

20 Amp. micro II fuse

 

20 Amp. minifuse

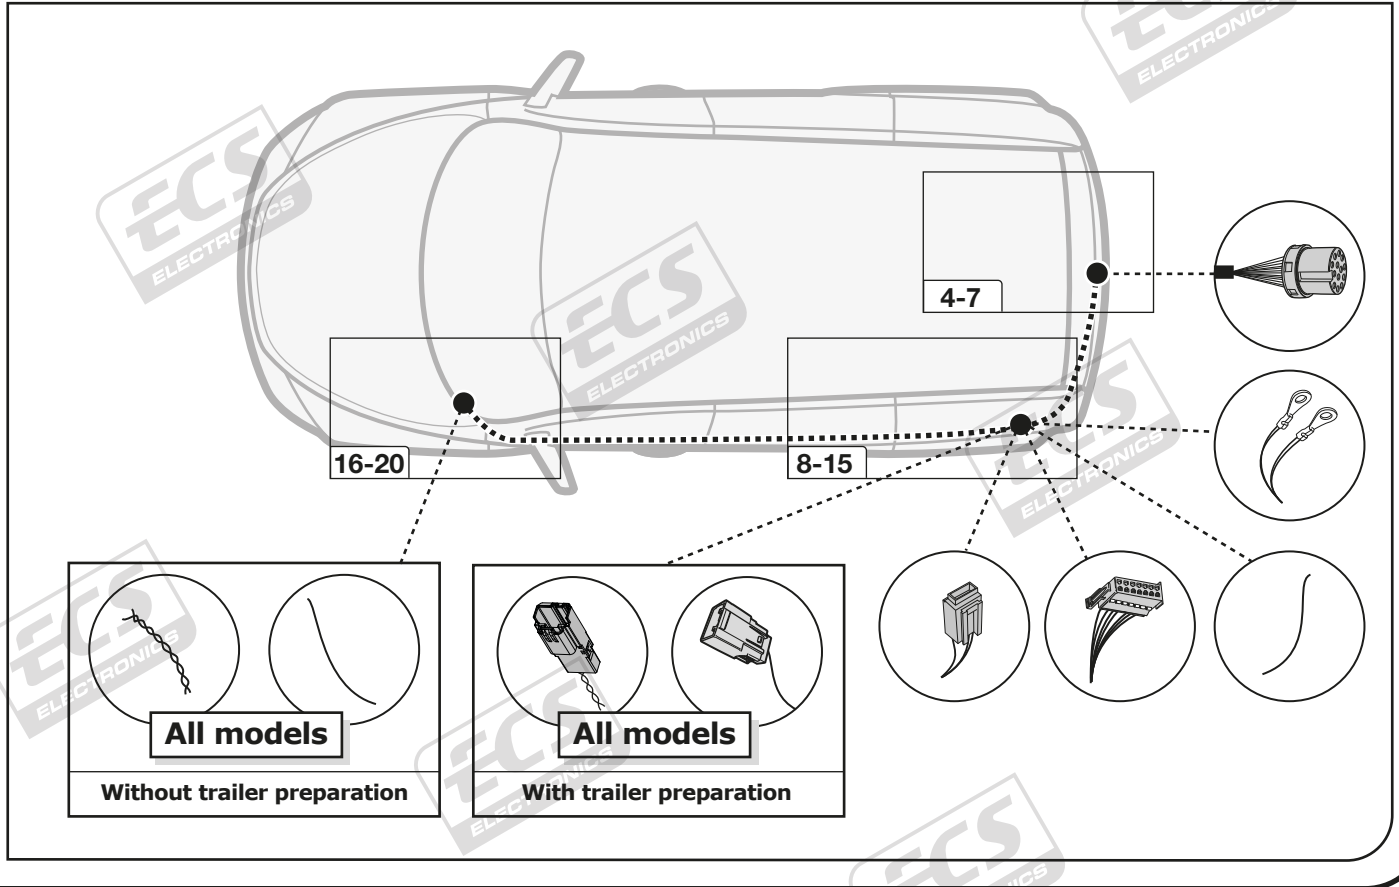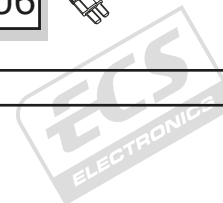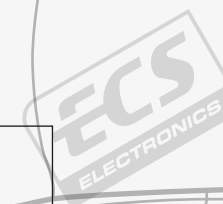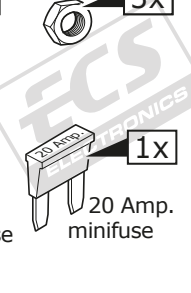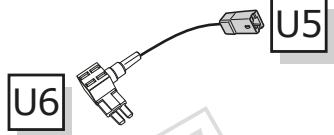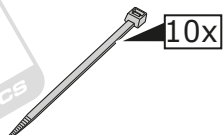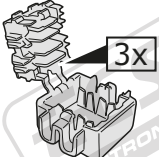

**All models**  
Without trailer preparation



**All models**  
With trailer preparation

## SYMBOL EXPLANATION

	Left (58-L) respectively Right (58-R) tail light
54	Stop light (54) / high mounted, third stop light (54)
	Turn signal indicator left
	Turn signal indicator right
	Rear fog light(s)
	Reversing light(s)
	Permanent power supply / 13pin socket, chamber 9
	Charging wire for trailer battery / 13pin socket, chamber 10
	Trailer / trailer recognition
<b>B+ / 30</b>	Permanent current power supply
	Ground or Earth (31)
	Ground connection battery terminal lug
	Positive connection battery terminal lug


	Cigarette lighter / accessory socket
	Loudspeaker / buzzer
	Park Distance Control
	Switch / source of function
	Connect together
	Disconnect
	Look at / See further information
	Look carefully at selected area
	Present / Occupied / OK
	Not present / Not occupied / Not OK
	Acoustic indication
	Attention / important advice
	Fuse / fuse capacity 20 Ampere

## TOOLS

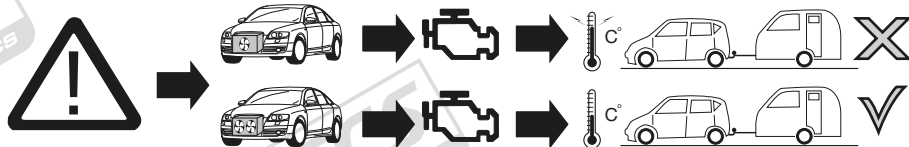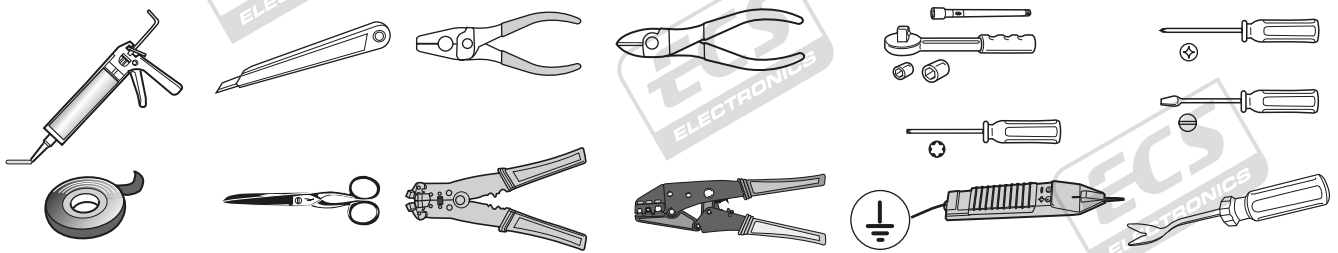

### ATTENTION!

The vehicle's cooling capacity may have to be increased when retrofitting a trailer coupling!  
You must observe the manufacturer's instructions!!

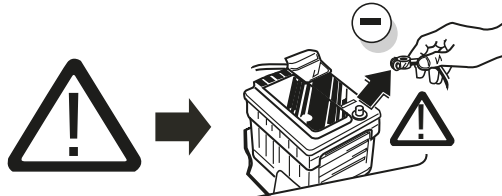

Note: It may be necessary to check if this vehicle has a stored radio code before disconnecting the battery!




### ATTENTION!

In order to avoid mal-functions and damage to the vehicle's electrical system the earth terminal **must be disconnected** from the vehicle's battery **before starting work!**

Both the trailer module and the vehicle's control unit for the electrical system can be damaged during work on the data bus connections if the battery is not disconnected!


1

Please pay attention to the manufacturer's instructions when disconnecting and reconnecting the vehicle's battery!

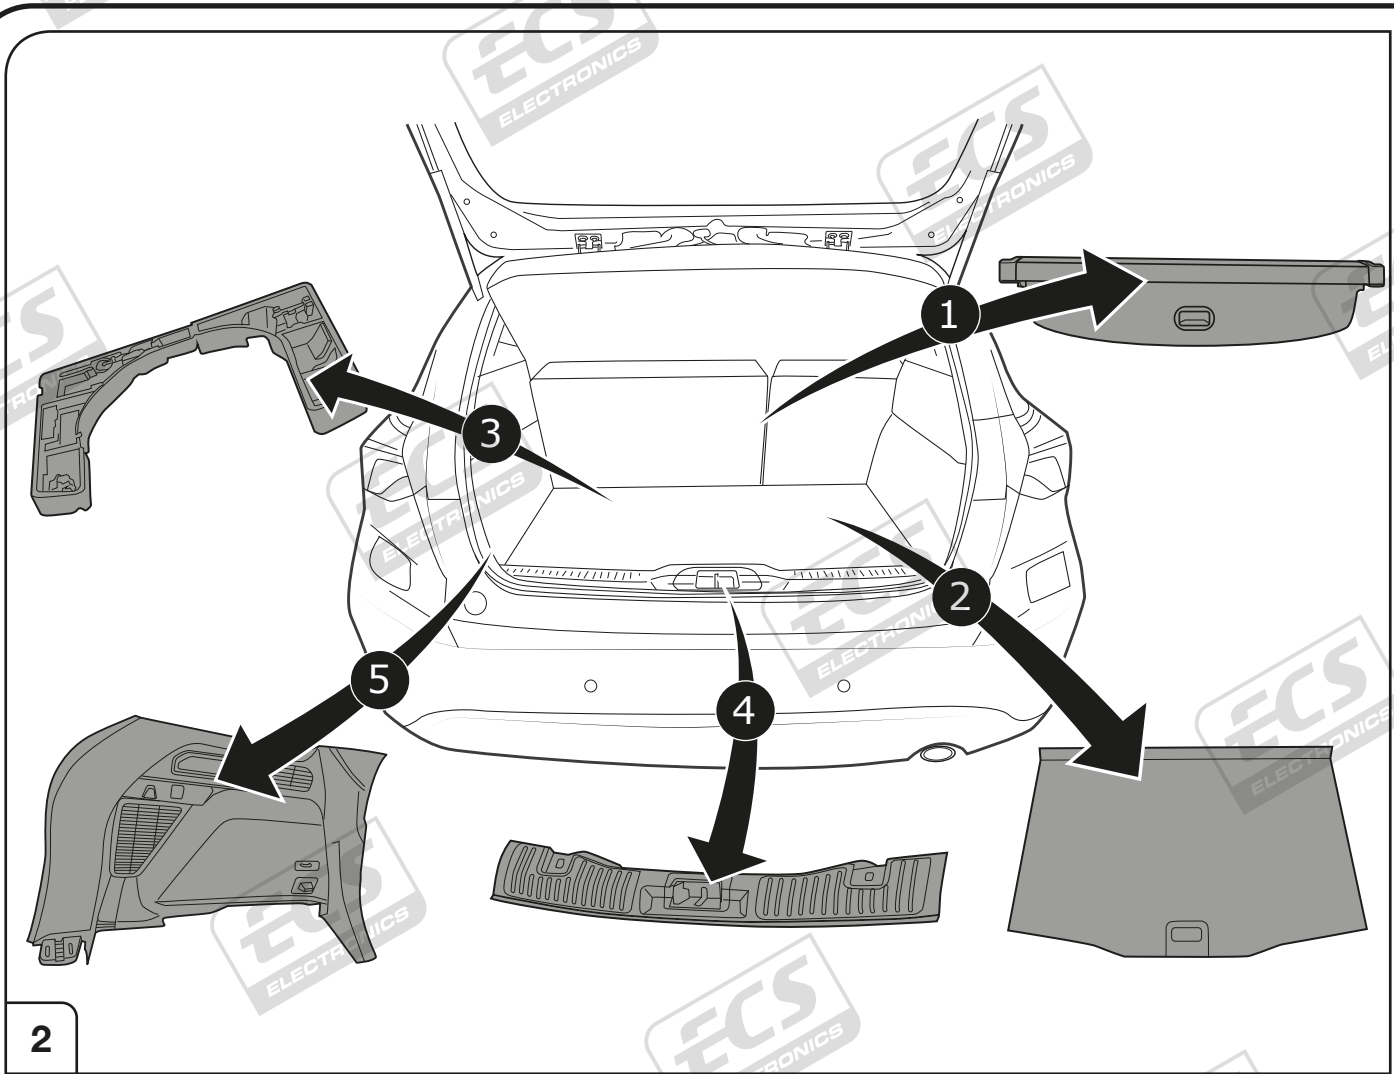


2


**only for vehicles without trailer preparation!**

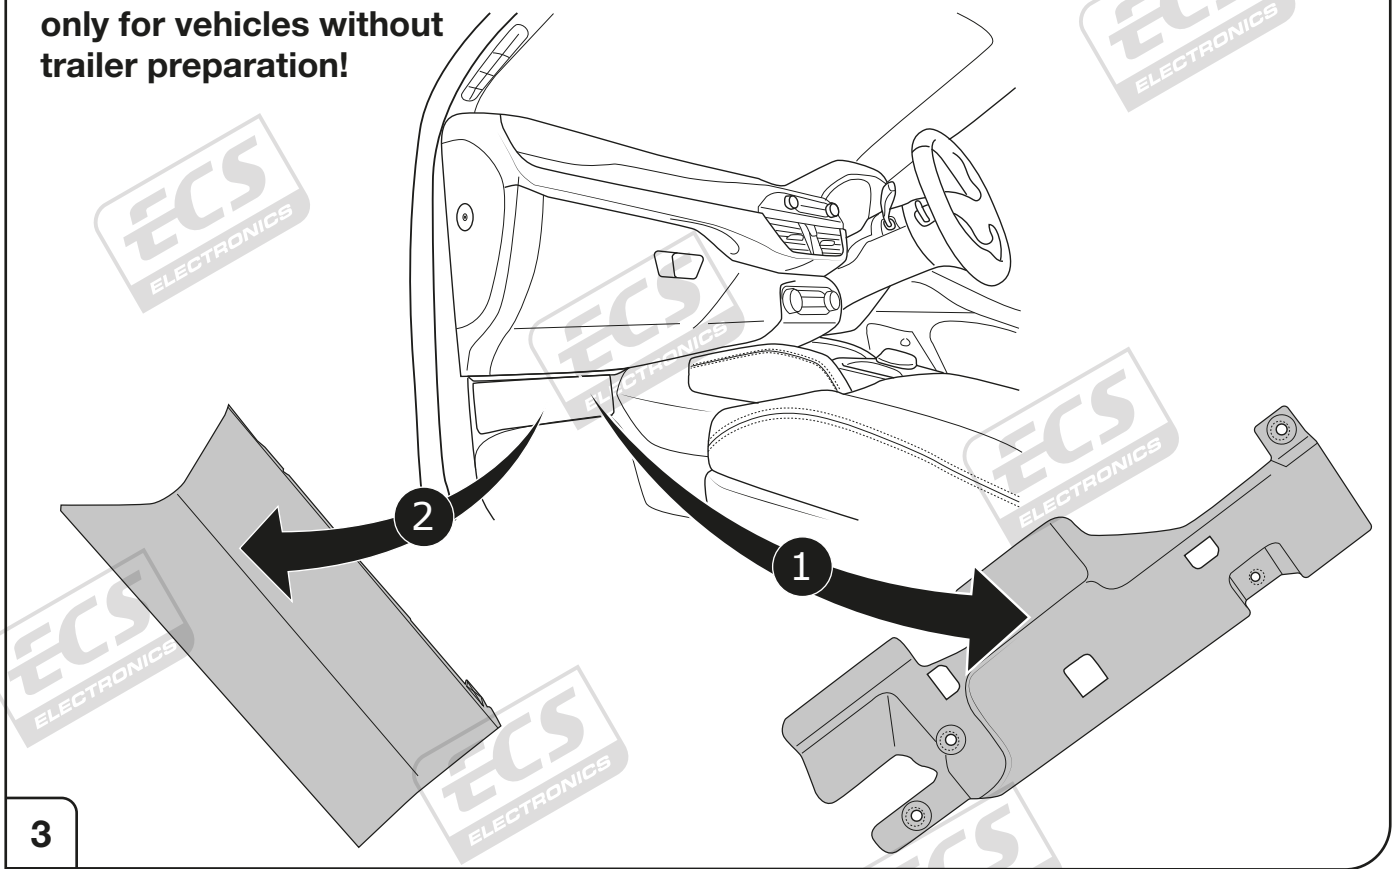

3

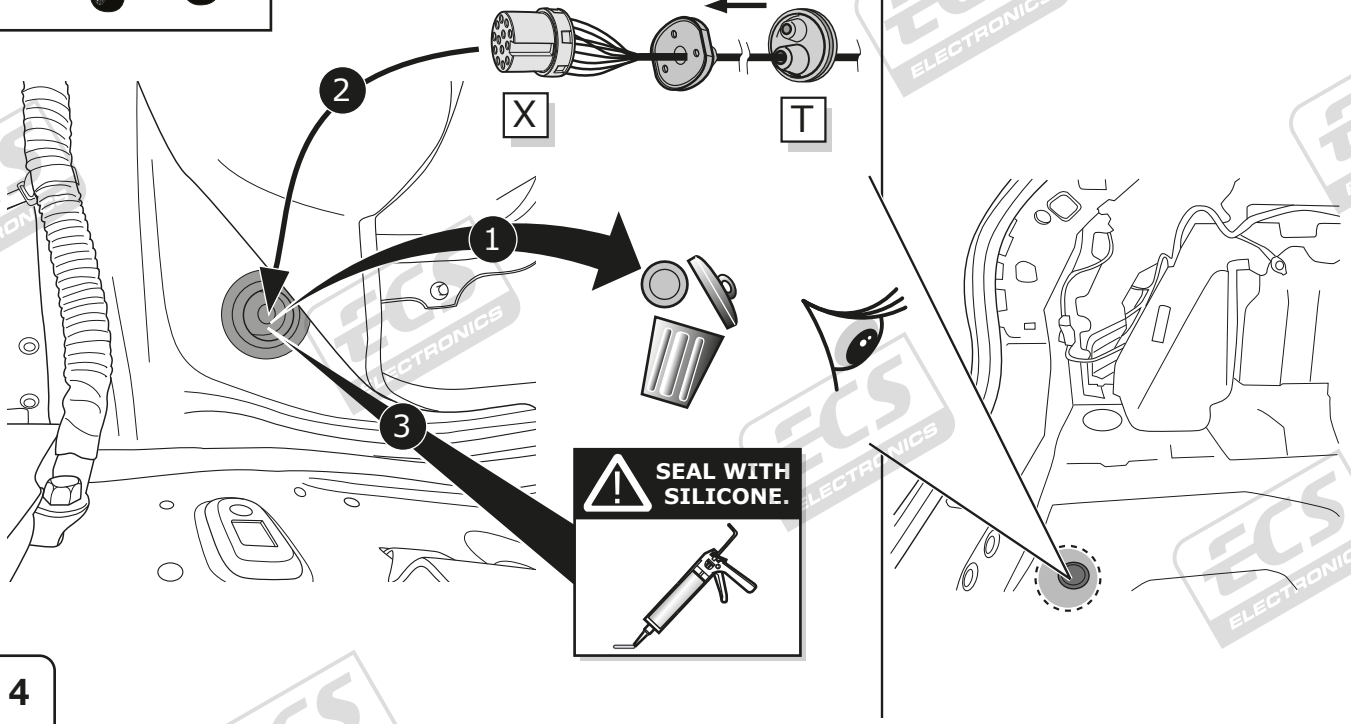

4

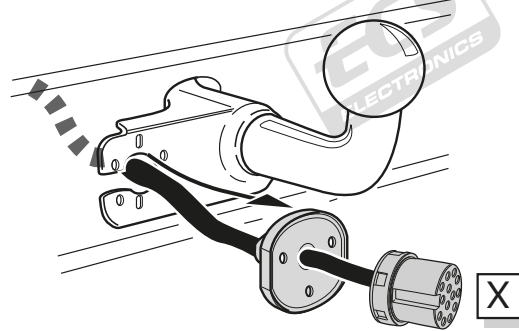


5

### SOCKET CONNECTION


DIN/ISO 11446	← L	⊕	⊥ 1-8	→ R	☀	⊘ STOP	☀	Reverse	30°	15°	⊥ 10	—	⊥ 9
	1/L	2	3/31	4/R	5/58-R	6/54	7/58-L	8	9	10	11	12	13
Pmax	21W	21W		21W	52W	3x21W	52W	21W	240W	180W			
Colour	Yellow	Blue	White	Green	Brown	Red	Black	Pink	Orange	Grey	White/Black	-	White/Red

6


7



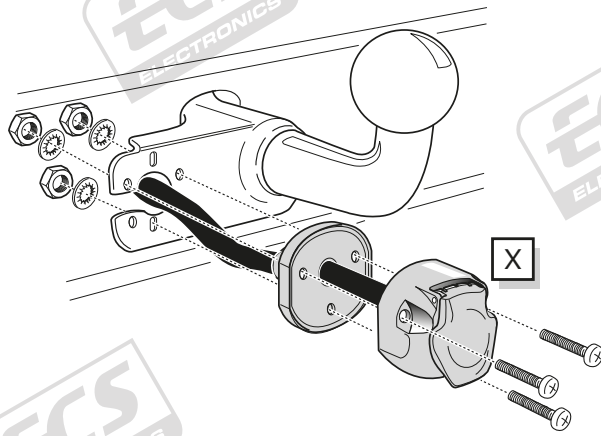


8

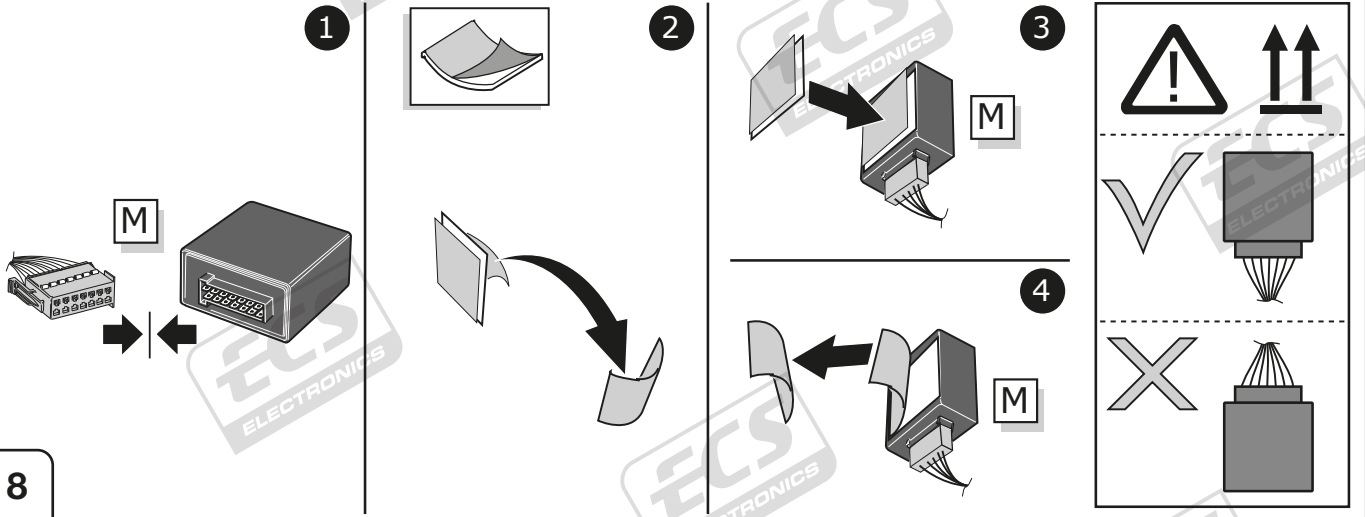



9

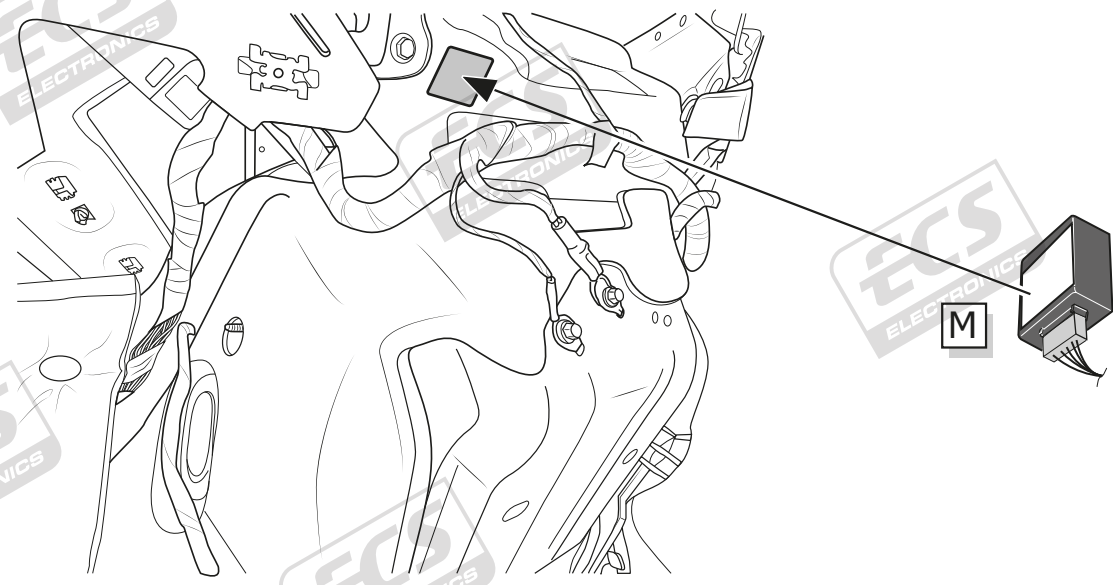

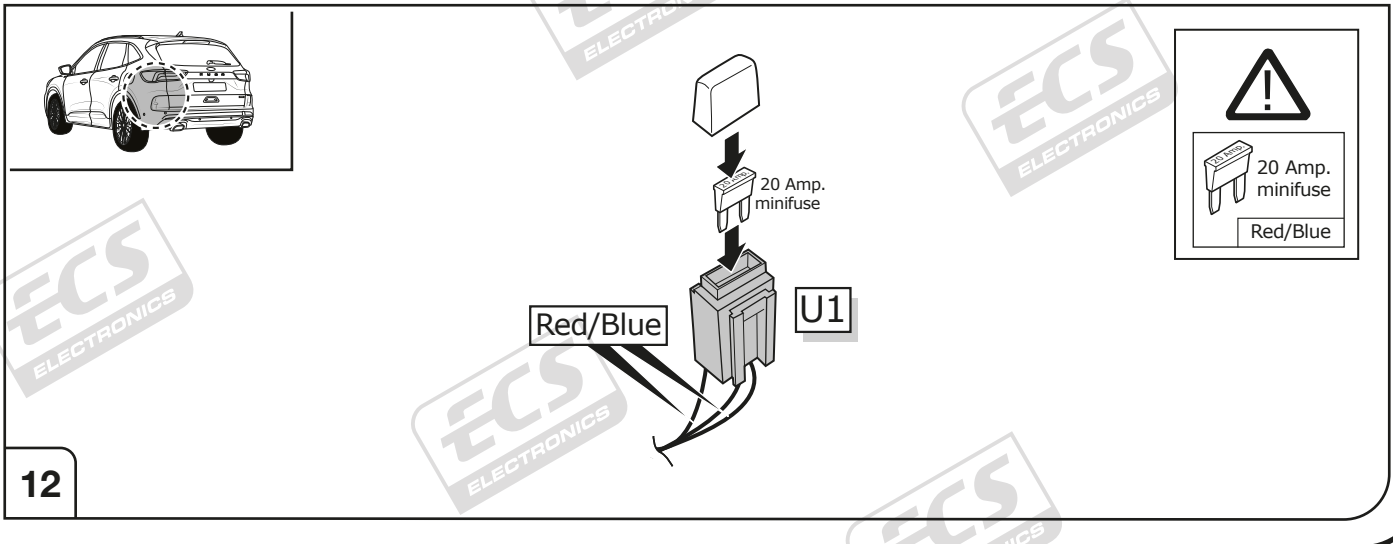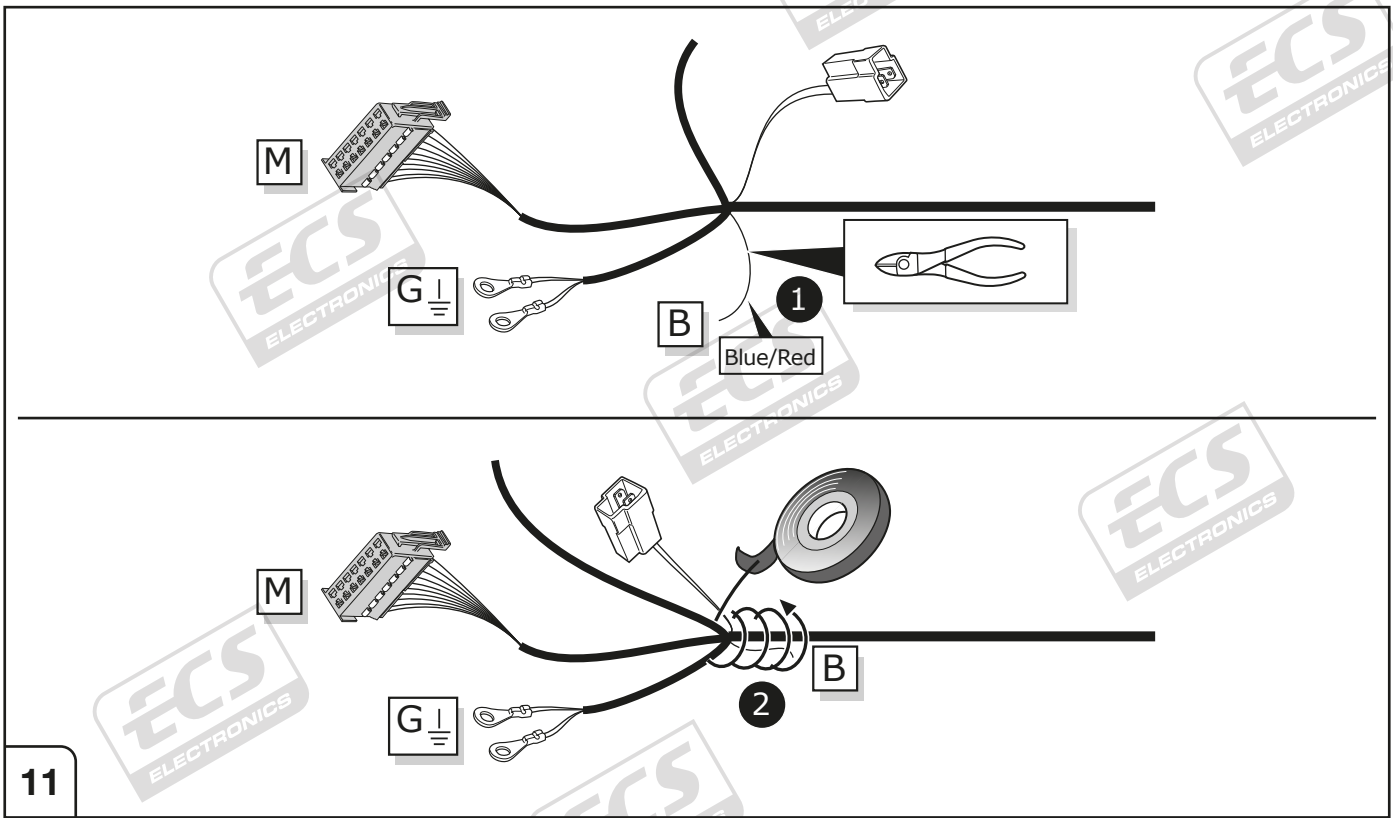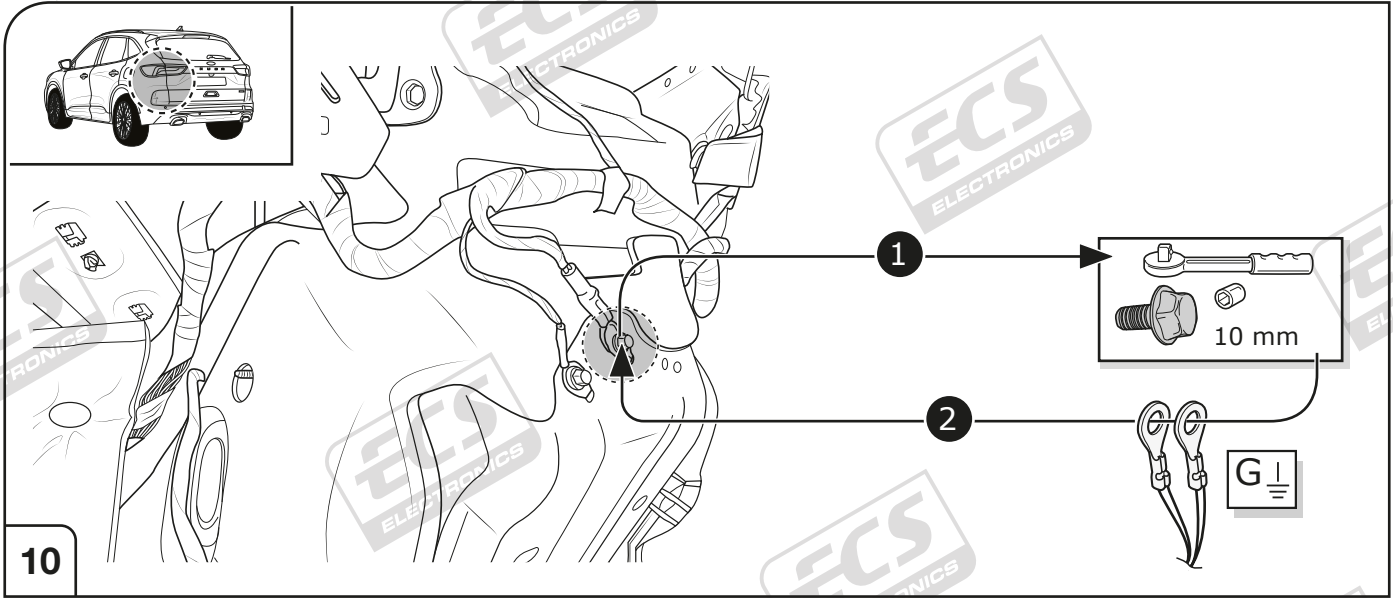





### Option 1

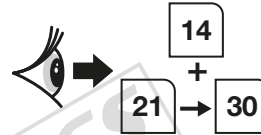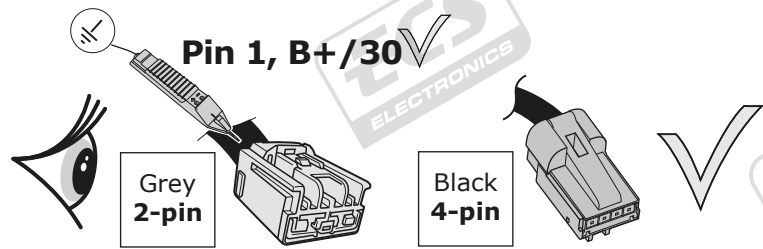


Vehicle **with** trailer preparation, **B+ /30** available

### Option 2

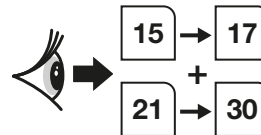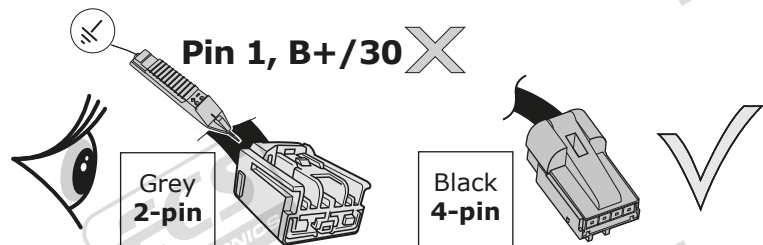

Vehicle **with** trailer preparation, **without B+ /30**

### Option 3

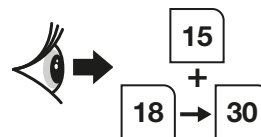

Vehicle **without** trailer preparation


13




### Option 1



Grey  
2-pin

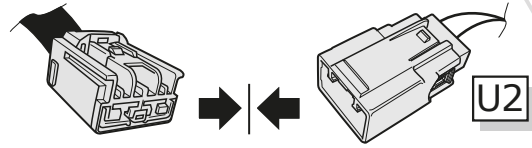


Black  
4-pin

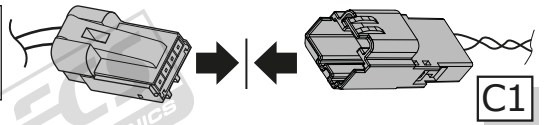

C4

U4

C3

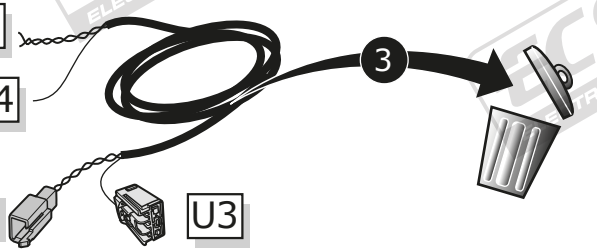


14

### Option 2 & 3




Black  
4-pin

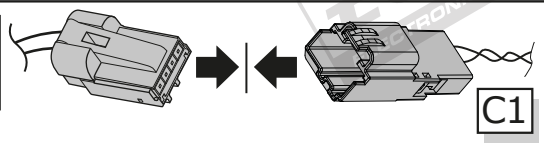


1

2

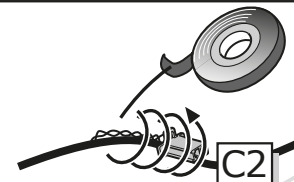

C2

3

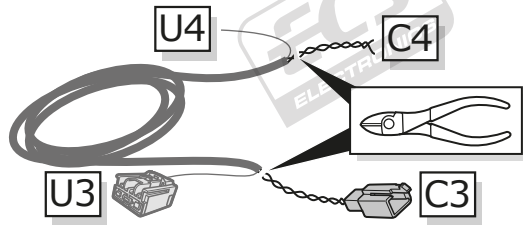

U3


U4

C4

C3

4


U3

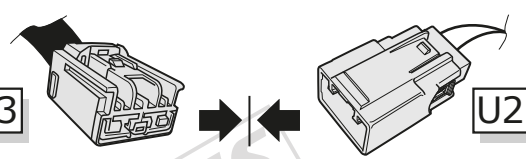


U2

15


## Option 2

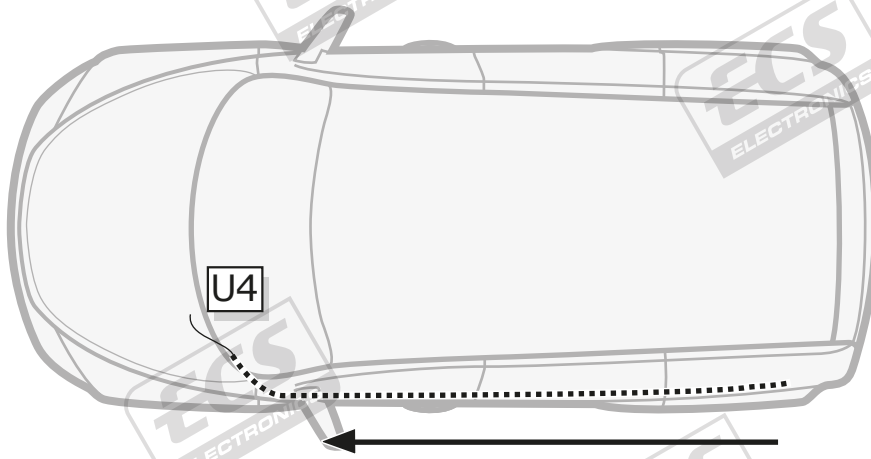


1

 

Cut to correct length!

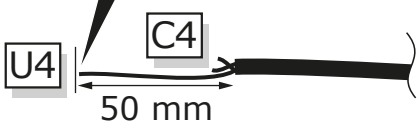


2

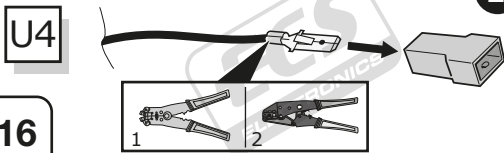




16

20 Amp.  
micro II fuse

4

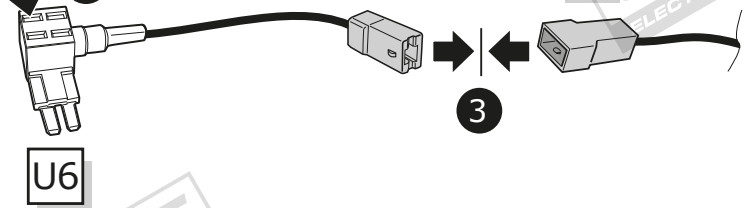

## Option 2

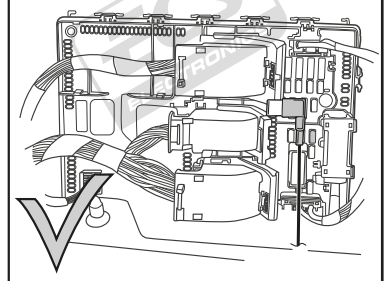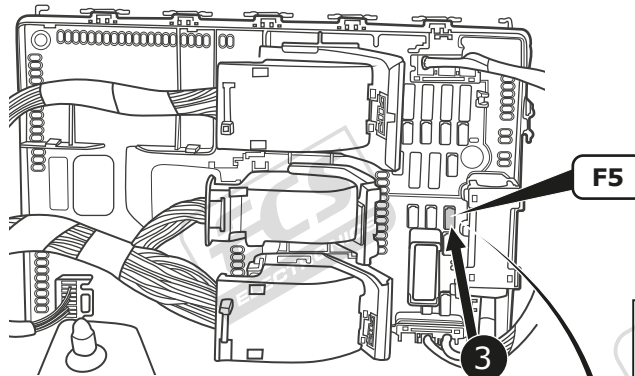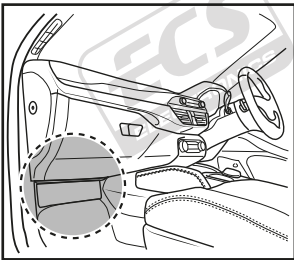

F5

1



 
Important!  
Please do not mount  
the fuse tap and its  
wiring output in  
the other  
direction!

3

U6

2


20 Amp.




17

Option 3


1

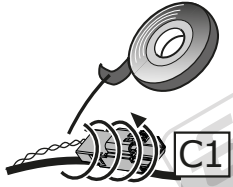


2

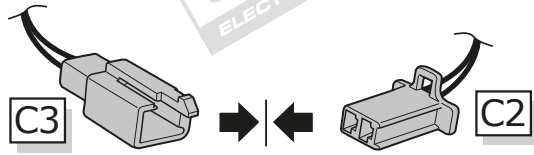

3

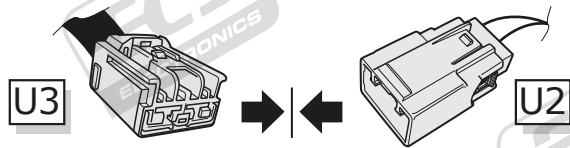


4

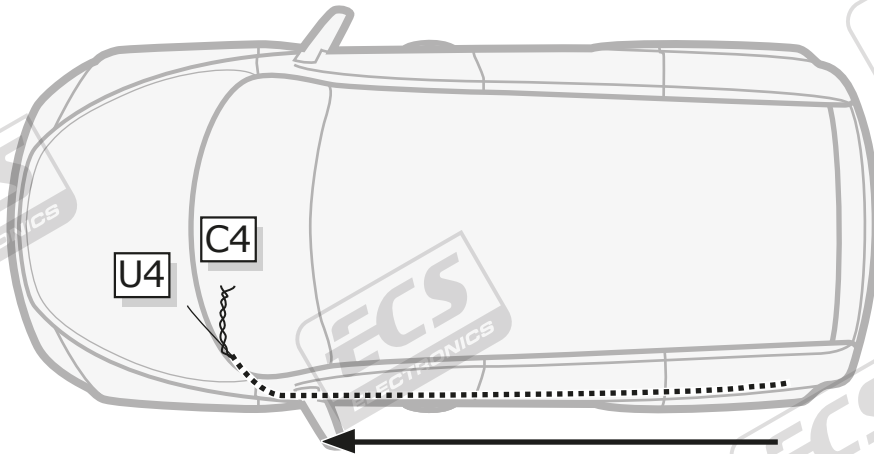

18

### Option 3

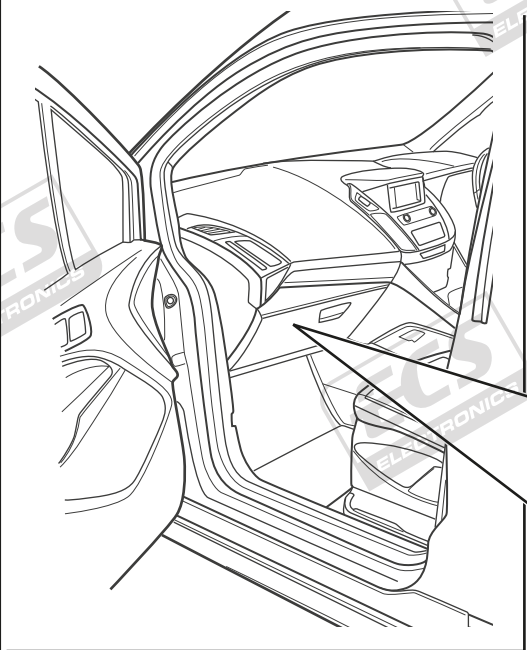


Cut to correct length, if necessary!

C4

U4

300 mm

1

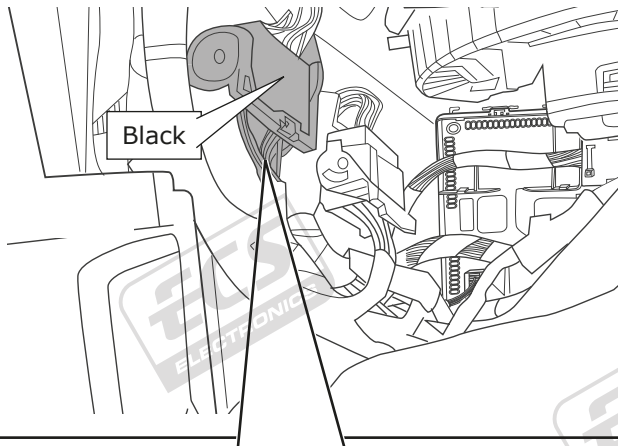

#### CAN-Data Wire


Grey/Orange	CAN high
Violet/Orange	CAN low






Important!  
Please note informations  
in picture 1!

C4

Black	CAN high
Yellow	CAN low



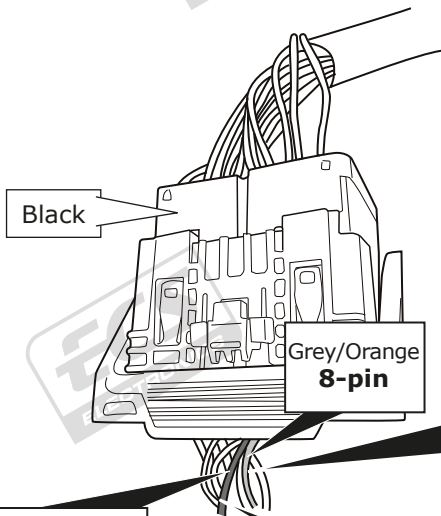


Violet/Orange  
**9-pin**

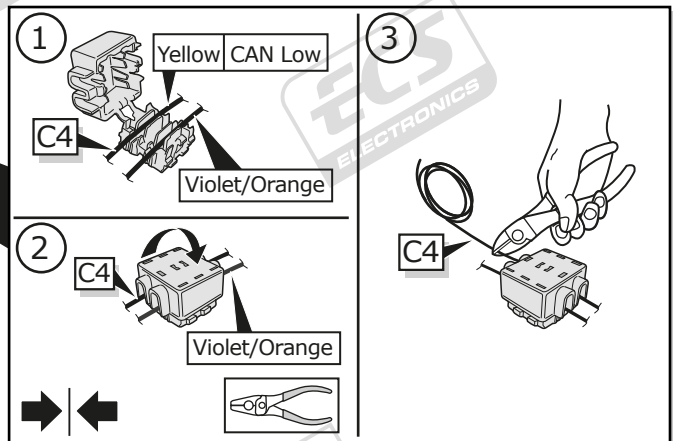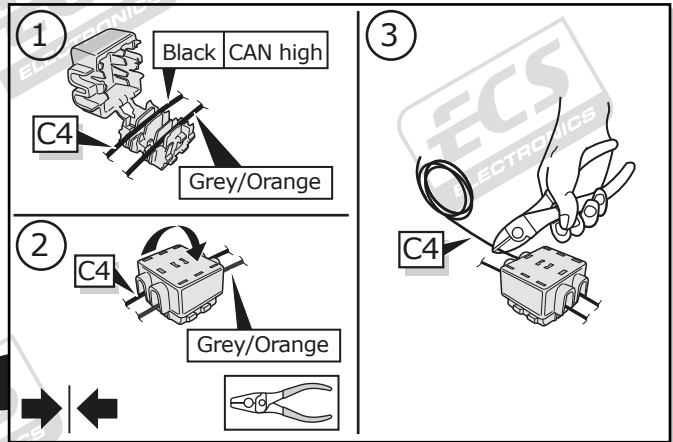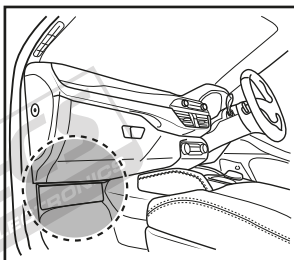

19


### Option 3

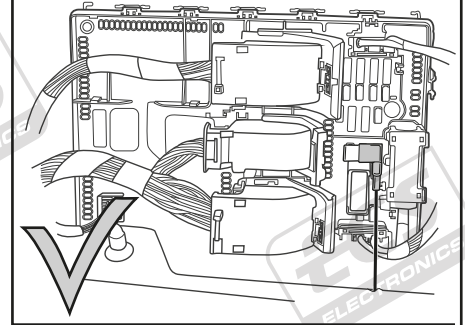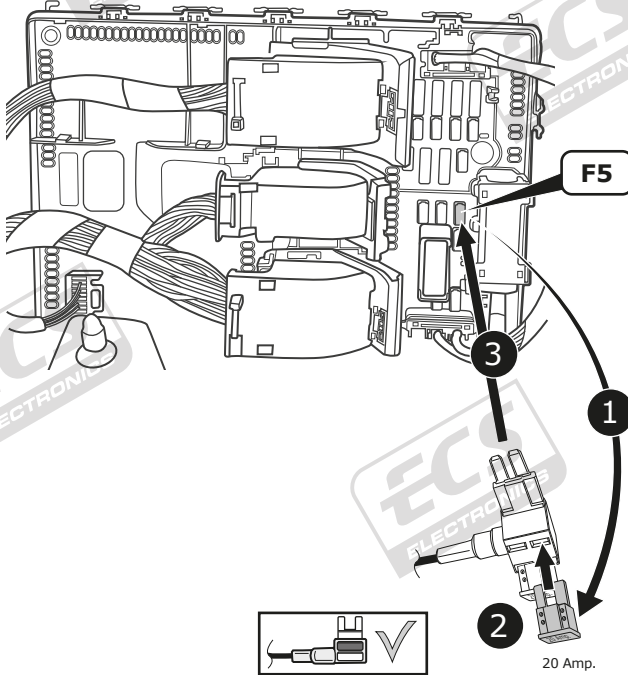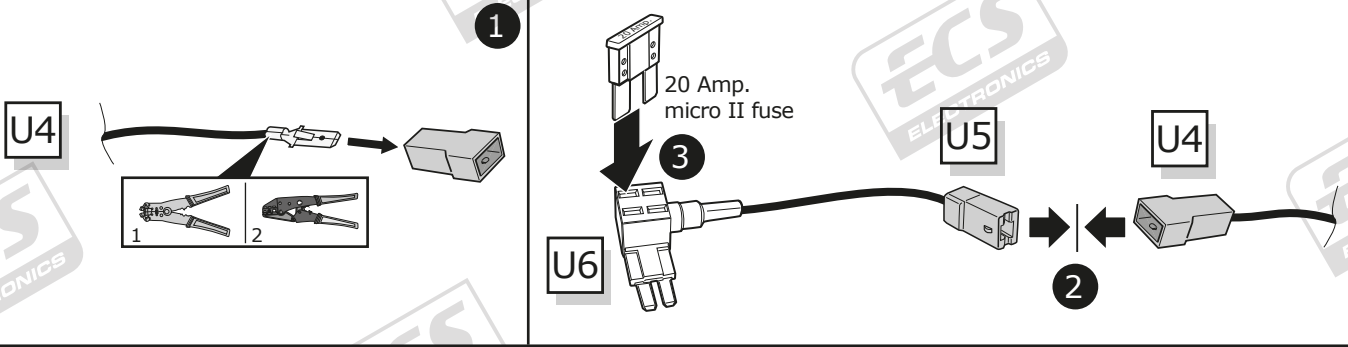

**Important!**  
Please do not mount the fuse tap and its wiring output in the other direction!


20

### Optional

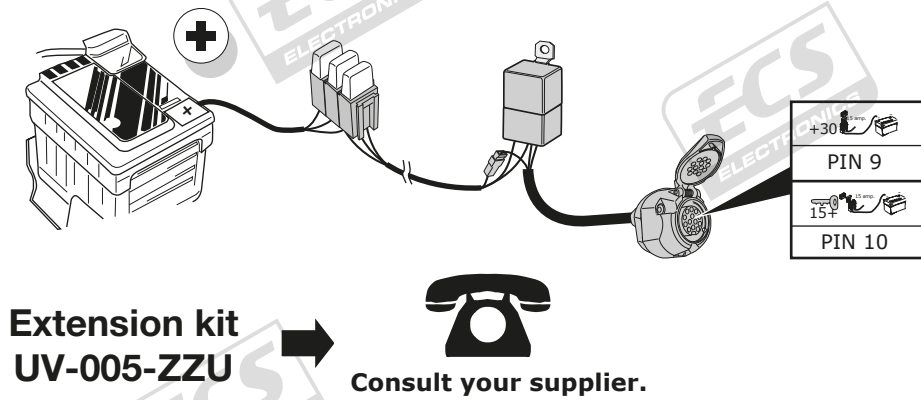


21

22

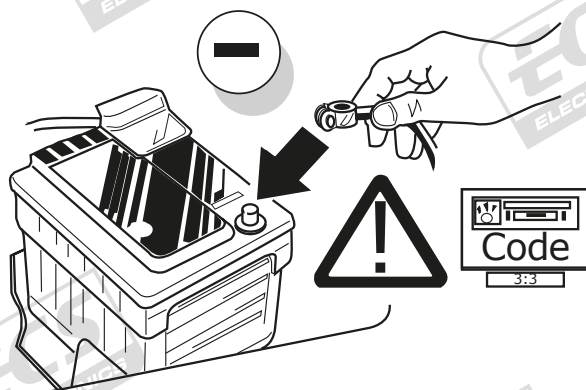

### Set up trailer operation

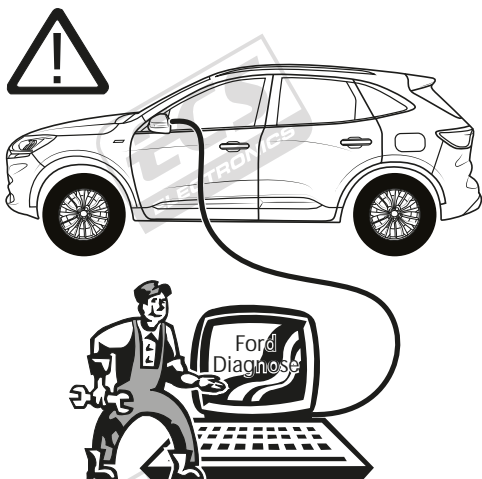

Please effect FDRS online coding as follows:



- Connect with FordEtis
- Dealer registration
- Vehicle : enter VIN
- Vehicle software
- Changes and Upgrades
- Configuration of towbar
- Select "Genuine Ford Module"

If the following control units / functions are installed, they must be configured manually on trailer operation:

- PAM
- SODL
- SODR
- FCDIM




23

### Products & Service: [www.ecs-electronicsuk.co.uk](http://www.ecs-electronicsuk.co.uk)

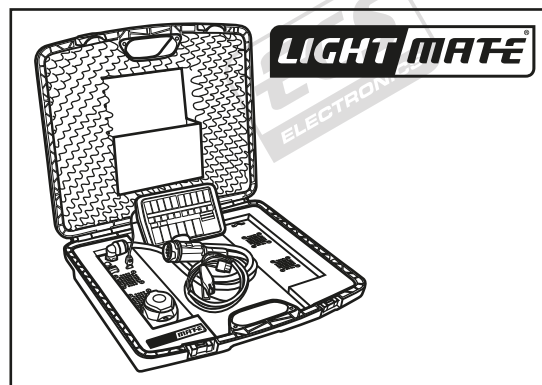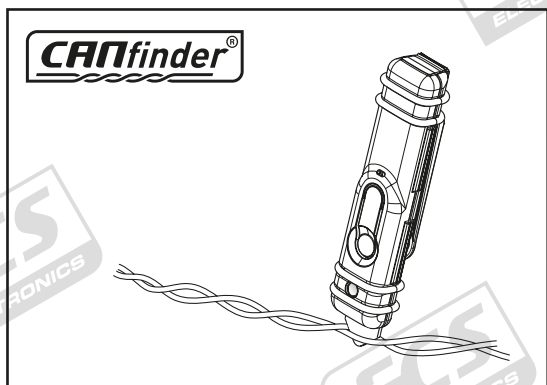


24

**Functional test**

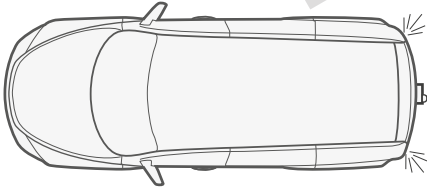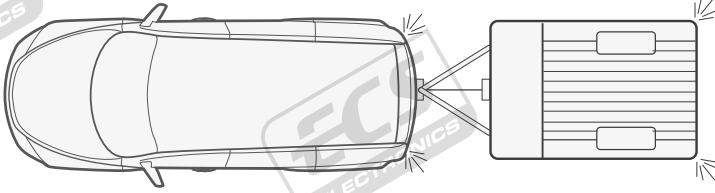
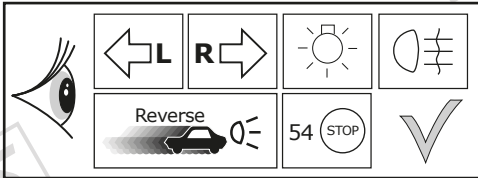


**LIGHT MATE**





**ECS** part no.  
**LIGHTMATE II**  
**LIGHTMATE III**

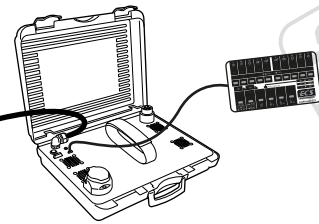

25

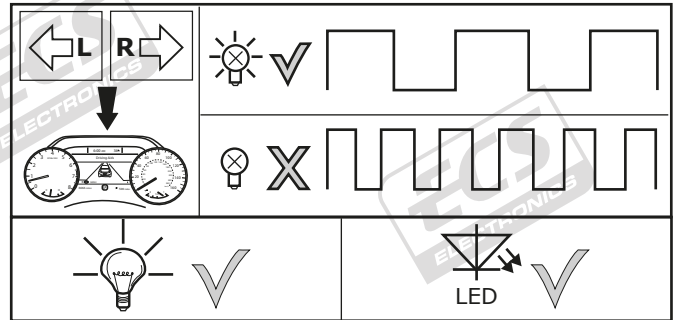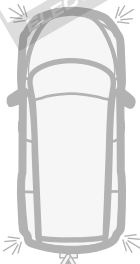


26

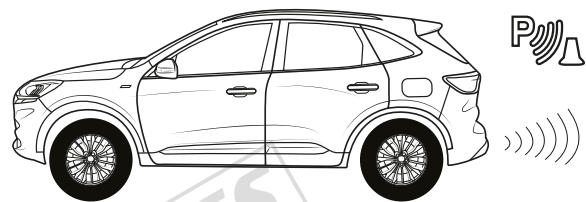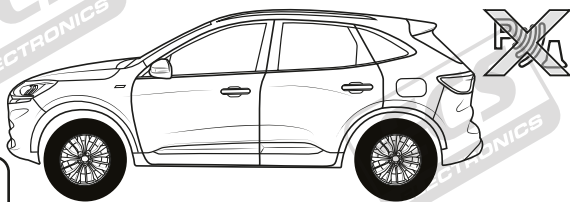  



27

**Optional**


**Adapter socket**

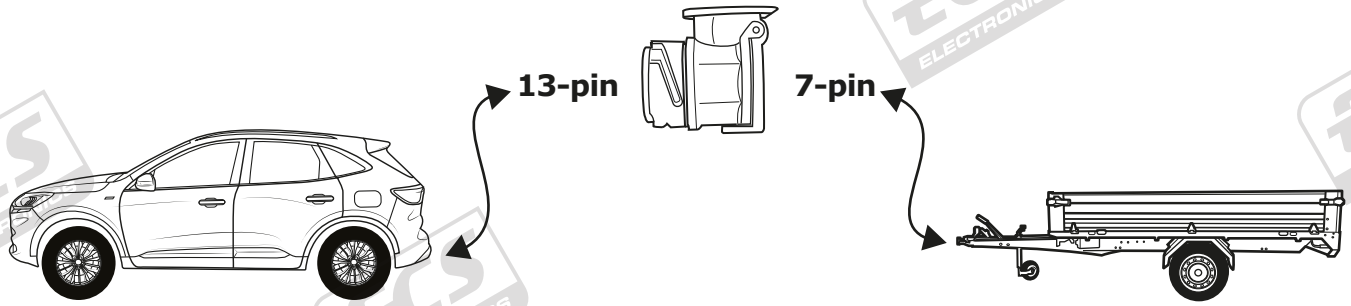

28

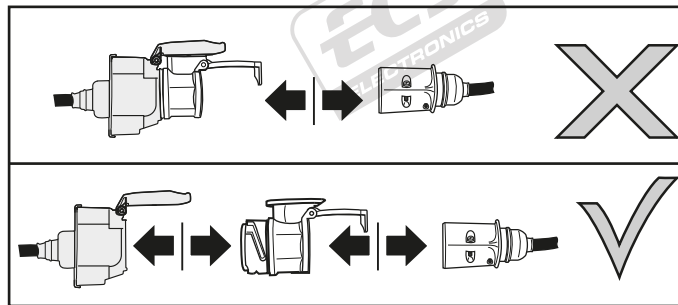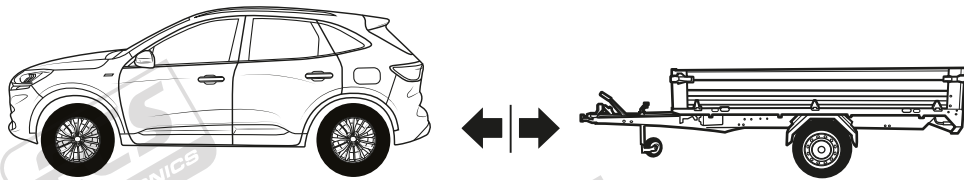

29

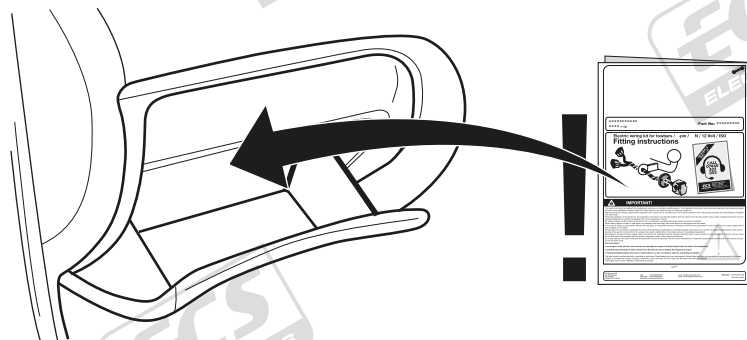

30