

important information relating to the use and function of the towing kit as well as for any diagnostic or activation process, that might have to be repeated in the future (e.g. after the performance of a vehicle software update).

All warranty claims will be forfeited if the electric kit or components contained therein are used incorrectly or modified. If a towing socket adaptor has been used to connect to the trailer or bike rack, this must be removed from the trailer socket once the trailer or bike rack has been disconnected

If the trailer or bike rack is not equipped with a rear fog lamp, depending on the towing vehicle type, the correct function of the towing kit cannot be guaranteed. In such cases, a rear fog lamp should be retro fitted.

This towing electric kit will not be covered under warranty if any technical or electrical modifications or software updates have been performed by the vehicle manufacturer after the initial commissioning of the kit. That applies especially to modifications or updates which may cause malfunctions in the trailer socket or any other part of the trailer electrical equipment!

Depending on the type of trailer module used in this electric kit, diagnostic interrogation with the vehicle's electrical system may be limited or will not function. The error memory inside the trailer module may not be able to be accessed by vehicle manufacturers diagnostic system.

Error logs relating to the trailer electrical equipment, that may be generated in the vehicle manufacturers diagnostic system as a result of a test procedure, may be due to the incorrect installation of the towing electric kit or the false activation of the trailer module.

We always recommend whenever possible, the following troubleshooting process:

An analysis of the vehicle's error memory and possibly clearing of all faults before the start of the installation!

- Try disconnecting the trailer module from the towing harness and re-start the fault clearing process!
 If in doubt, limit the time for troubleshooting to a max of 0,5 hours and call our Technical Support Team!

Please follow our instructions carefully and always test the towing electrics using a true lighting board or a specifically designed bulb tester. If an LED tester is used, ensure it is equipped with correct load resistors or malfunctions will occur!

1/12

This instruction is subject to changes and we reserve the right to make changes to design, colour etc.


All of the data and illustrations may not be an exact representation but the text contained in this instruction must be observed!

ECS Electronics UK The Old Dyehouse Macclesfield Cheshire, SK11 7RN UK

SALE: +44 (0) 7980 847124 TECHNICAL: +44 (0) 7440 202052 WEB: www.ecs-electronicsuk.co.uk

Email-sales: n.lea@ecs-electronics.com Email-technical: ts-uk@ecs-electronics.com


Revision: 1/18.06.2020 NI-163-13U

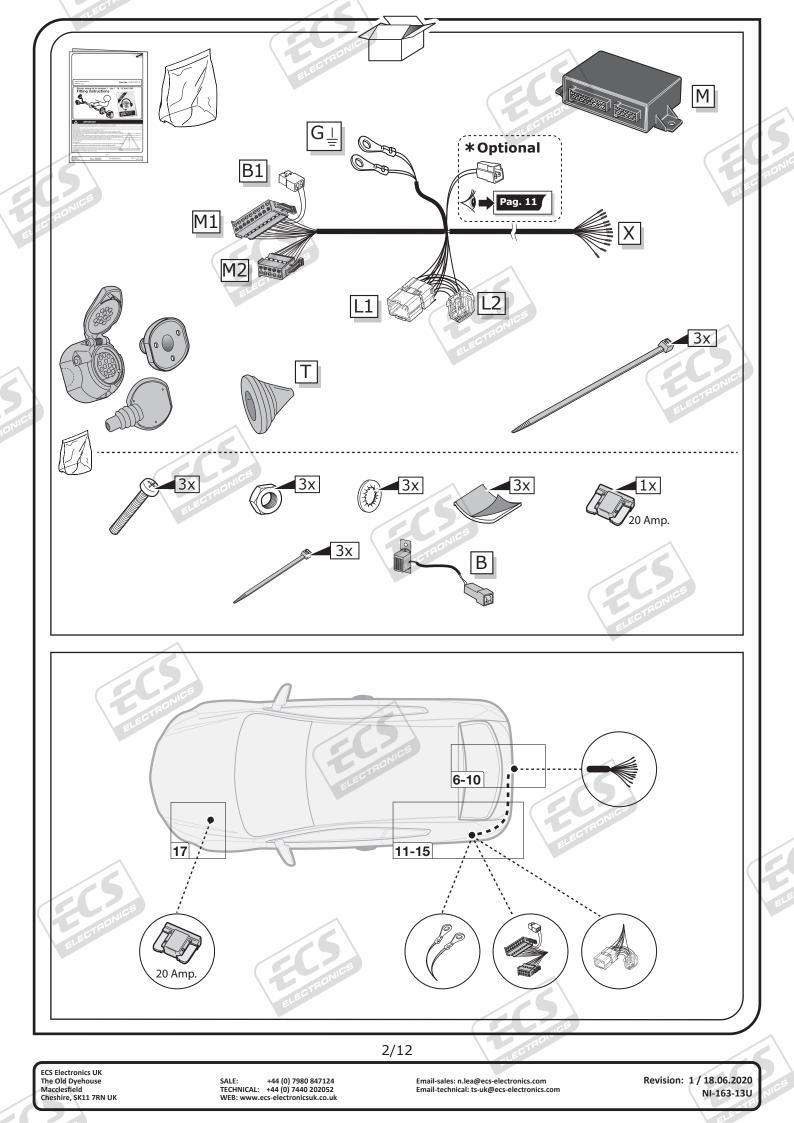



<section-header></section-header>	SYMDOL 5			
Flight (64-1) lait light 54 Turn signal indicator (eff R_ Connect together Signification South / source of function R_ Connect together R_ Connection battery terminal lug R_ Connecti tri	STMBUL E	XPLANATION COMPS		
Flight (64-1) lait light 54 Turn signal indicator (eff R_ Connect together Signification South / source of function R_ Connect together R_ Connection battery terminal lug R_ Connecti tri		electro-		
Junction High mounted, that step light (6) L Turn signal indicator reit R Turn signal indicator reit R Reversing light(a) Partnament current power supply Charging wire for trailer battery to the increased within the second current power supply L Ground or Earth (31) O Ground connection battery terminal light Positive connection battery terminal light Accountion indication Positive connection battery terminal light Connect countied on the second count of the second	- <u>Ö</u> -			
Image: Turn signal indicator right Every signal indicator right	54 STOP	Stop light (54) / high mounted, third stop light (54)		Loudspeaker / buzzer
Image:		Turn signal indicator left		Park Distance Control
Image: Control of the second process of the sector of t		Turn signal indicator right		Switch / source of function
Image: New and the state of the state o		Rear fog light(s)	•	Connect together
13pin socket, chamber 9 13pin socket, chamber 10 14 Ground or Earth (31) 15 Ground connection battery terminal lug 15 Resent / Not coupled / Not OK 15 Resent / Not coupled / Not OK 15 Resent / Not coupled / Not OK 15 Ground connection battery terminal lug 15 Resent / Not coupled / Not OK 15 Resent / Not coupled / Not OK <t< th=""><th>Reverse 0:</th><th>Reversing light(s)</th><th></th><th>Disconnect</th></t<>	Reverse 0:	Reversing light(s)		Disconnect
13pin socket, chamber 10 Image: Construct of the second of the	30+	Permanent power supply / 13pin socket, chamber 9	4	Look at / See further information
Image: Second	15+ [®]	Charging wire for trailer battery / 13pin socket, chamber 10		Look carefully at selected area
Image: Construction of the second system			V	Present / Occupied / OK
Image: Construction battery terminal lug Image: Construction lug Image: Construction lug Image: Construction lug Image: Construction lug Image: Construction lug Image: Construction lug Image: Construction lug Image: Construction lug Image: Construction lug Image: Construction lug Image: Construction lug Image: Construction lug Image: Construction lug Image: Construction lug Image: Construction lug Image: Construction lug Image: Construction lug Image: Construction lug Image: Construction lug Image: Construction lug Image: Construction lug Image: Construction lug Image: Construction lug Image: Construction lug Image: Construction lug Image: Construction lug Image: Construction lug Image: Construction lug Image: Construction lug Image: Construction lug Image: Construction lug Image: Construction lug Image: Construction lug Image: Construction lug Image: Construction lug Image: Construction lug Image: Construction lug Image: Construction lug Image: Construction lug Image: Construction lug Image: Construction lug Image: Construction lug Image: Construction lug Image: Construction lug Image: Construction lug	B+/30	Permanent current power supply	Xore	Not present / Not occupied / Not OK
Image: Construction balance of the state of the stat	Ļ	Ground or Earth (31)	D((()	Acoustic indication
Positive connection battery terminal lug Fuse / fuse capacity 20 Ampère FOOLS Image: Construction battery terminal lug Fuse / fuse capacity 20 Ampère COOLS Image: Construction battery terminal lug Image: Construction battery terminal lug Image: Construction battery terminal lug COOLS Image: Construction battery terminal lug Image: Construction battery terminal lug Image: Construction battery terminal lug Cools Image: Construction battery terminal lug Image: Construction battery terminal lug Image: Construction battery terminal lug Cools Image: Construction battery terminal lug Image: Construction battery terminal lug Image: Construction battery terminal lug Cools Image: Construction battery terminal lug Cools Image: Construction battery terminal lug Cools Image: Construction battery terminal lug Cools Image: Construction battery terminal lug Image: Construction battery terminal lug	$\overline{}$	Ground connection battery terminal lug	\square	Attention / important advice of the
<complex-block> Image: Construction of the variety is not disconnected.</complex-block>	÷	Positive connection battery terminal lug		Fuse / fuse capacity 20 Ampère
<complex-block> Image: Constructions and damage to the vehicle's electrical system the earth terminal must be is connection if the battery is not disconnected. Image: Constructions and damage to the vehicle's electrical system the earth terminal must be is connection if the battery is not disconnected.</complex-block>			v	
<complex-block> Image: Constructions and damage to the vehicle's electrical system the earth terminal must be is stored radio code before is connected from the vehicle's control unit for the electrical system can be damaged during work on the data bus connections if the battery is not disconnected. Image: Construction of the vehicle's control unit for the electrical system can be damaged during work on the data bus connections if the battery is not disconnected.</complex-block>		63		
ATTENTION: The vehicle's cooling capacity may have to be increased when retrofitting a trailer coupling! to must observe the manufacturer's instructions!! ATTENTION: The vehicle's cooling capacity may have to be increased when retrofitting a trailer coupling! to must observe the manufacturer's instructions!! ATTENTION: The vehicle's cooling capacity may have to be increased when retrofitting a trailer coupling! Image: the vehicle's cooling capacity may have to be increased when retrofitting a trailer coupling! Image: the vehicle's cooling capacity may have to be increased when retrofitting a trailer coupling! Image: the vehicle's cooling capacity may have to be increased when retrofitting a trailer coupling! Image: the vehicle's cooling capacity may have to be increased when retrofitting a trailer coupling! Image: the vehicle's control when the vehicle's control when the vehicle's electrical system the earth terminal must be disconnected from the vehicle's battery before starting work! Image: the trailer module and the vehicle's control unit for the electrical system can be damaged during work on the data bus connections if the battery is not disconnected! Image: the vehicle's not disconnected! <th></th> <th></th> <th></th> <th></th>				
ATTENTION: You must observe the manufacturer's instructions!! Image: State of the				
ATTENTION! In order to avoid mal-functions and damage to the vehicle's electrical system the earth terminal must be disconnected from the vehicle's battery before starting work! Both the trailer module and the vehicle's control unit for the electrical system can be damaged during work on the data bus connections if the battery is not disconnected! Please pay attention to the manufacturer's instructions when disconnecting and reconnecting the vehicle's battery!				
disconnected from the vehicle's battery before starting work! Both the trailer module and the vehicle's control unit for the electrical system can be damaged during work on the data bus connections if the battery is not disconnected! Please pay attention to the manufacturer's instructions when disconnecting and reconnecting the vehicle's battery!		The vehicle's cooling capacity may have to be	e increased when retr	
1 on the data bus connections if the battery is not disconnected! Please pay attention to the manufacturer's instructions when disconnecting and reconnecting the vehicle's battery!		The vehicle's cooling capacity may have to be	e increased when retrictions!	ofitting a trailer coupling!
	011/25	The vehicle's cooling capacity may have to be You must observe the manufacturer's instruct	e increased when retriens!	ofitting a trailer coupling!
	011/25	The vehicle's cooling capacity may have to be You must observe the manufacturer's instruct A = A = A = A = A = A = A = A = A = A =	e increased when retrictions!!	ofitting a trailer coupling!
	01105	The vehicle's cooling capacity may have to be You must observe the manufacturer's instruct M = M + M + M + M + M + M + M + M + M +	e increased when retrictions!!	ofitting a trailer coupling!

ECS Electronics UK The Old Dyehouse Macclesfield Cheshire, SK11 7RN UK

-

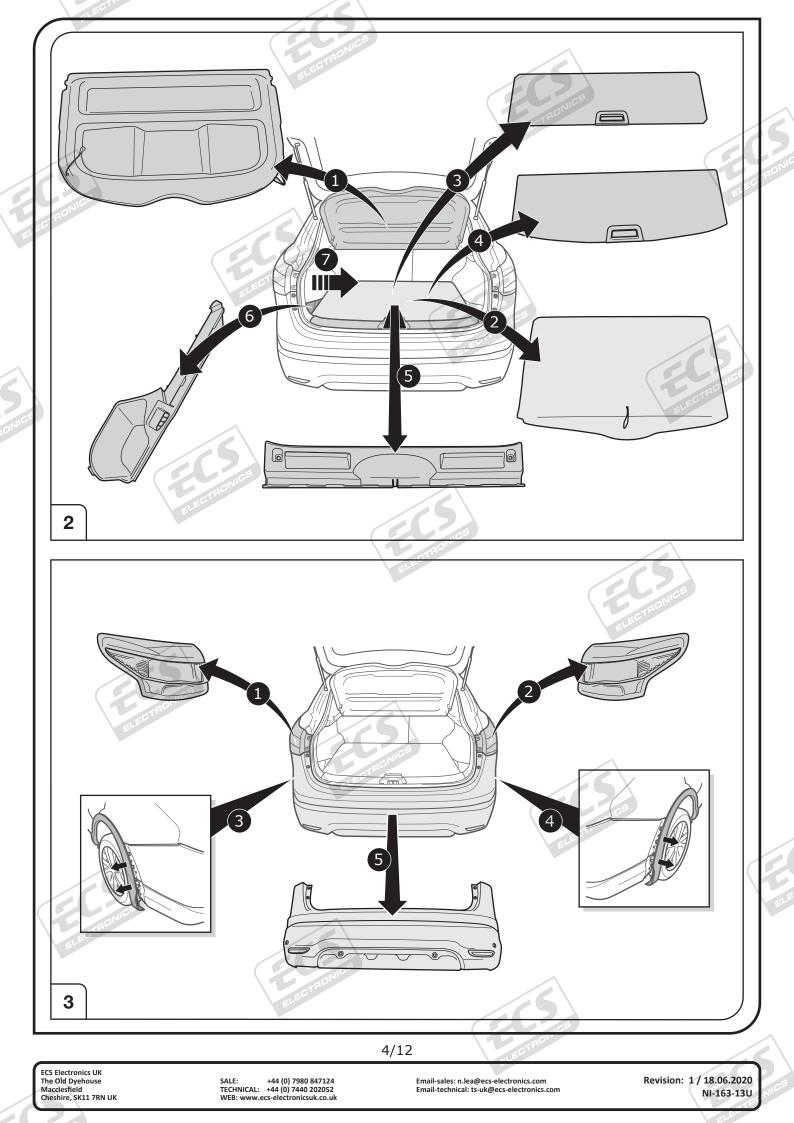SALE: +44 (0) 7980 847124 TECHNICAL: +44 (0) 7440 202052 WEB: www.ecs-electronicsuk.co.uk Email-sales: n.lea@ecs-electronics.com Email-technical: ts-uk@ecs-electronics.com Revision: 1 / 18.06.2020 NI-163-13U 

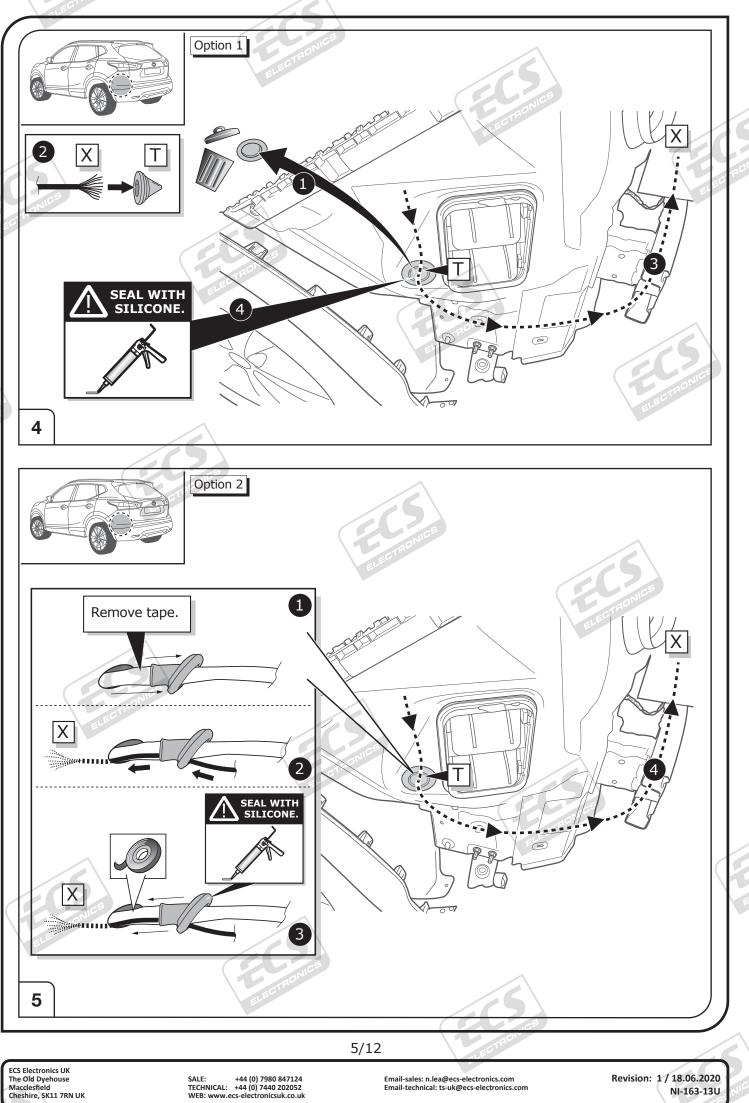

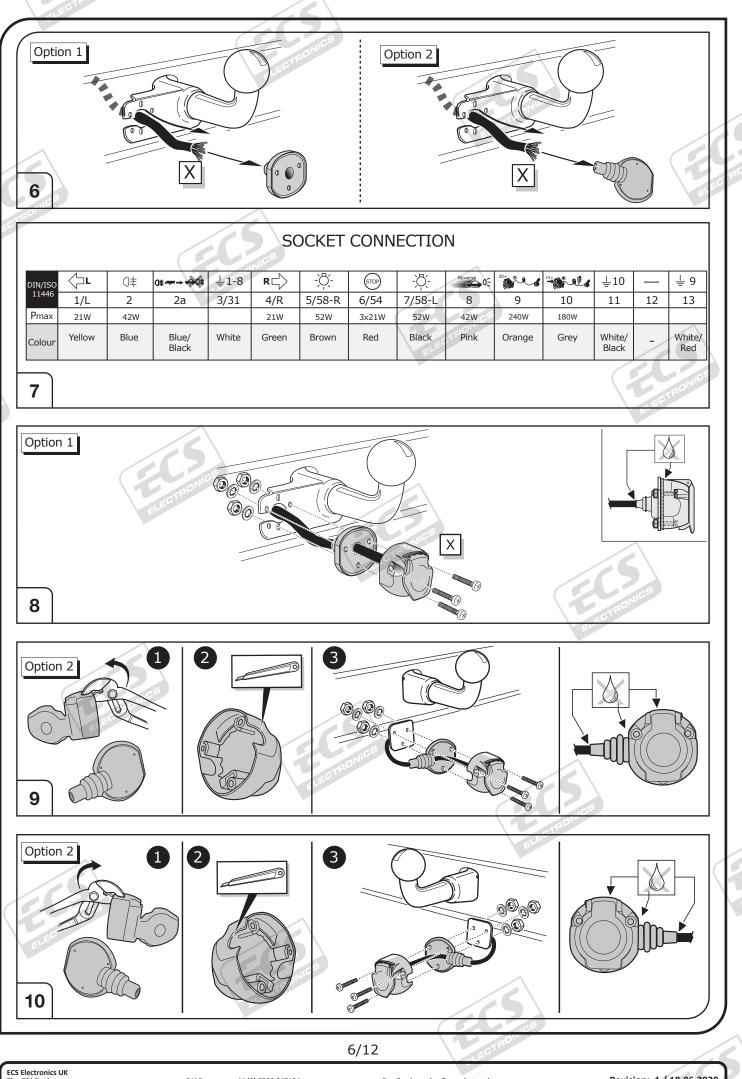

ECS Electronics UK The Old Dyehouse Macclesfield Cheshire, SK11 7RN UK

SALE: +44 (0) 7980 847124 TECHNICAL: +44 (0) 7440 202052 WEB: www.ecs-electronicsuk.co.uk Email-sales: n.lea@ecs-electronics.com Email-technical: ts-uk@ecs-electronics.com Revision: 1 / 18.06.2020 NI-163-13U

