

SECURITY POST OPERATING INSTRUCTIONS

TO UNLOCK:

- Slide open lock cover (depending on model)
- Release push button lock with key
- Return key to original position, depressing key slightly and remove
- Rotate handle a quarter turn anti-clockwise
- When lowering post, do so in a controlled manner;

DO NOT ALLOW IT TO FREE-FALL DOWN INTO BASE

TO LOCK:

- Lift lid, draw up inner post to full extent.
- Rotate handle clockwise a quarter of a turn
- Press down push button lock
- Slide cover over lock

SECURITY POST MAINTENANCE

GENERAL:

- Keep sliding post clean
- Always close lock cover plate
- Always close lid when bollard has been lowered, ensuring hinge is free of debris

LOCK:

- Flush out lock liberally with WD40 or similar
- With the post in lock position, place the key in the lock, turning it back and forward several times
- Repeat procedure 3-4 times and the key should turn more freely
- Finally, lubricate lock with silicone based lubricant (Supalube)
- Wipe away any excess oil to avoid dirt sticking around the lock

Note: Installations with high water tables or adverse conditions should be checked daily